


REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
3. **REMOVE FRONT RH SEAT ASSY (SEE PAGE 72-1 1 (POWER SEAT) OR 72-19 (MANUAL SEAT))**

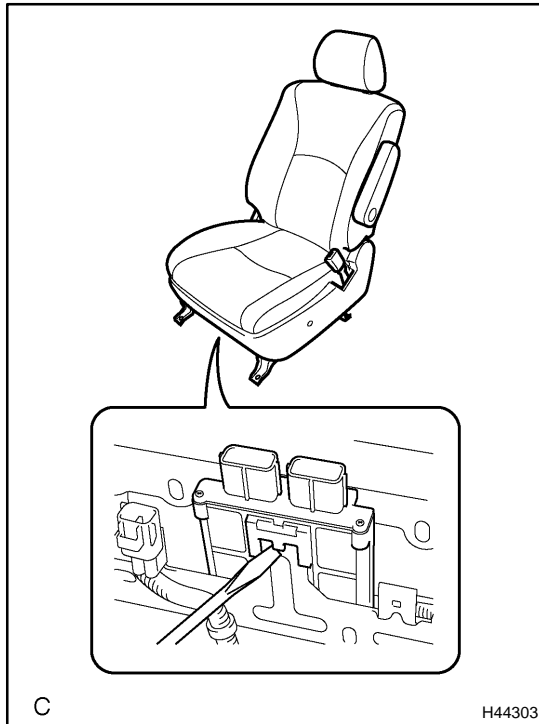

4. **REMOVE OCCUPANT CLASSIFICATION ECU**

- (a) Disconnect the 2 connectors from the occupant classification ECU.
- (b) Using a screwdriver, remove the occupant classification ECU.

5. **INSTALL OCCUPANT CLASSIFICATION ECU**

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the occupant classification ECU.
- (d) Connect the 2 connectors to the occupant classification ECU.

NOTICE:

- If the occupant classification ECU has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the occupant classification ECU, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
6. **INSTALL FRONT RH SEAT ASSY (SEE PAGE 72-1 1 (POWER SEAT) OR 72-19 (MANUAL SEAT))**
 7. **CONNECT BATTERY NEGATIVE TERMINAL**
 8. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-1207)**