

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).


1. REMOVE REAR SEAT LAP TYPE BELT RH

- Remove the rear No. 2 seat (see page 72-61).
- Remove the rear seat lap type belt assy RH.
 - Remove the bolt and belt.
- Install the rear seat lap type belt assy RH.
 - Remove the bolt and belt.

Torque: 42 N·m (428 kgf·cm, 31 ft·lbf)

2. REMOVE REAR SEAT INNER BELT ASSY

- Remove the rear No. 2 seat (see page 72-61).
- Remove the rear seat inner belt assy.
 - Remove the 2 bolts and 2 belts.

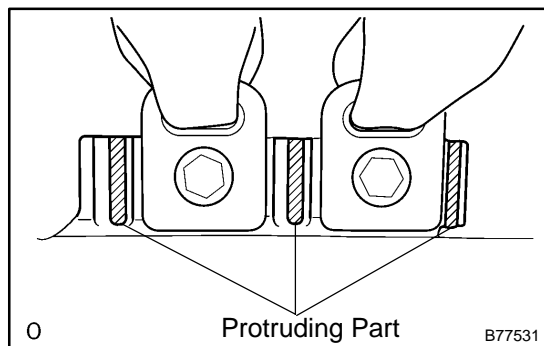

- Install the rear seat inner belt assy.
 - Remove the 2 bolts and 2 belts.
- Torque: 42 N·m (428 kgf·cm, 31 ft·lbf)**


NOTICE:

Do not allow the anchor part of the rear belt and the protruding parts of the floor panel to overlap.

3. REMOVE REAR NO.2 SEAT OUTER BELT ASSY RH

- Remove the tonneau cover (see page 76-21).
- Remove the deck board cover (see page 76-21).
- Remove the deck board cover No. 2 (see page 76-21).
- Remove the deck board cover No. 3 (see page 76-21).
- Remove the rear seat reclining cover LH (see page 76-21).
- Remove the rear seat reclining cover RH (see page 76-21).
- Remove the deck floor box RR (see page 76-21).
- Remove the rear floor finish plate (see page 76-21).
- Remove the deck side trim box LH (see page 76-21).
- Remove the deck side trim box RH (see page 76-21).
- Remove the rear No. 1 seat LH (see page 76-21).
- Remove the rear No. 1 seat RH (see page 76-21).
- Remove the rear No. 2 seat RH (see page 76-21).
- Remove the rear door opening trim weatherstrip RH (see page 76-21).
- Remove the back door weatherstrip (see page 76-21).

- (p) Remove the rope hook (see page 76-21).
- (q) Remove the rear door scuff plate RH (see page 76-21).
- (r) Remove the deck trim side panel RH (see page 76-21).
- (s) Remove the quarter pillar garnish RH (see page 76-21).

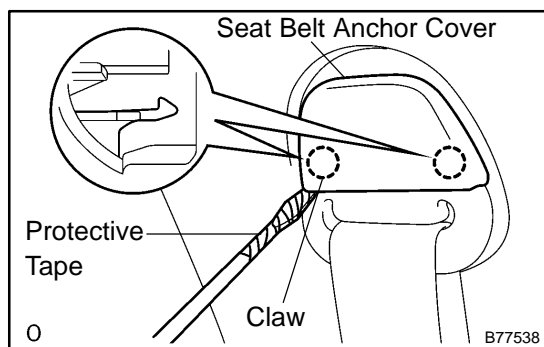


- (t) Remove the rear No. 2 seat belt assy outer RH.
 - (1) Using a screwdriver, open the seat belt anchor cover

HINT:

Tape the screwdriver tip before use.

- (2) Remove the bolt and shoulder anchor.
- (3) Remove the 2 bolts and belt.

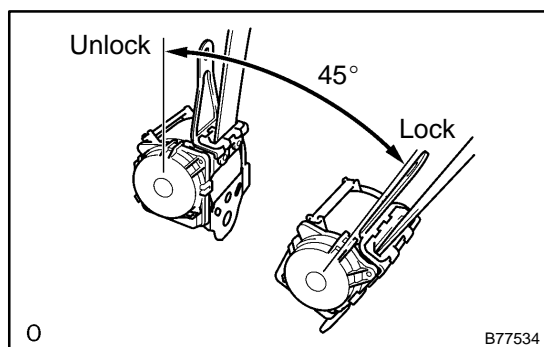

- (u) Install the rear No. 2 seat belt assy outer RH.
 - (1) Check the amount of inclination required to lock the retractor.
 - When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.

NOTICE:

Do not disassemble the retractor.

If operation is not as specified, replace the outer belt assy.

- (2) Install the belt with the 2 bolts.

Torque:

7.5 N·m (77 kgf·cm, 66 in·lbf) for upper bolt

42 N·m (428 kgf·cm, 31 ft·lbf) for lower bolt

- (3) Install the shoulder anchor with the bolt.

Torque: 42 N·m (428 kgf·cm, 31 ft·lbf)