

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
Driver side seat belt warning lamp does not flash	1. IG1 fuse	61-1
	2. AM1 M-fuse	61-1
	3. RAD NO. 2 fuse	61-1
	4. Combination meter	05-1898
	5. Front seat inner belt assy LH	05-1228
	6. Airbag sensor assy	05-1228
	7. Wire harness	2
Passenger side seat belt warning lamp does not flash	1. IG1 fuse	61-1
	2. AM1 M-fuse	61-1
	3. RAD NO. 2 fuse	61-1
	4. A/C control assy	05-1228
	5. Front seat inner belt assy RH	05-1228
	6. Occupant classification sensor	05-1228
	7. Occupant classification ECU	05-1228
	8. Wire harness	2

NOTICE:

The front seat inner belt RH and LH cannot be inspected. When the front seat inner belt seems to be malfunctioning, use the hand-held tester to check for DTCs.

HINT:

The seat belt warning system is part of the large-scale multiplex communication system. This system features shared communication wiring that reduces the wiring complexity of the communication lines. The first step in any repair is to confirm the proper operation of the communication system. Proceed with troubleshooting after the communication has been verified (see multiplex communication system).