


# LICENSE PLATE LAMP ASSY REPLACEMENT

6512H-01

**HINT:**

Installation is in the reverse order of removal.

1. **REMOVE ASSIST STRAP HOLE COVER (SEE PAGE 75-20 )**
2. **REMOVE ASSIST STRAP ASSY RH (SEE PAGE 75-20 )**
3. **REMOVE BACK DOOR TRIM PANEL ASSY (SEE PAGE 75-20 )**
4. **REMOVE BACK DOOR LOCK ASSY (SEE PAGE 75-20 )**
5. **REMOVE BACK DOOR HANDLE ASSY OUTSIDE (SEE PAGE 75-20 )**
6. **REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE (SEE PAGE 76-13 )**

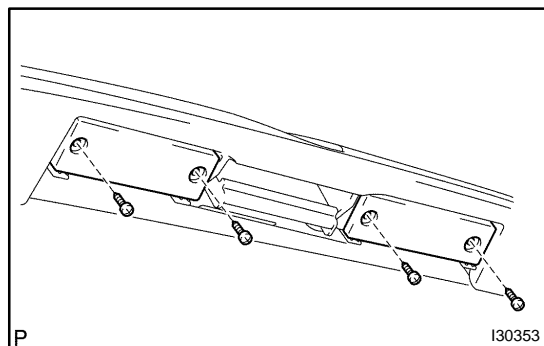

7. **REMOVE LICENSE PLATE LAMP ASSY**
  - (a) Remove the 4 screws and the 2 license plate lamp lenses.
  - (b) Remove the license plate lamp assy from the luggage compartment door garnish sub-assy outside.

8. **INSTALL BACK DOOR LOCK ASSY (SEE PAGE 75-20 )**