



## ON-VEHICLE INSPECTION

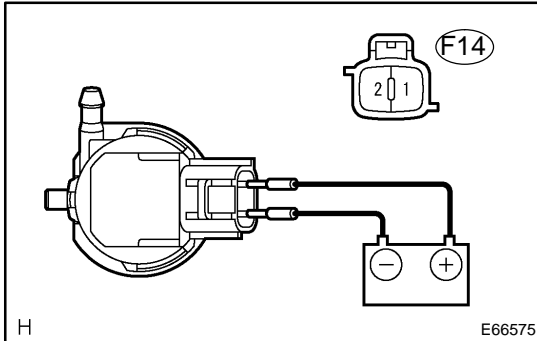

### 1. FRONT WASHER MOTOR

#### (a) Operation Check

- (1) Fill the washer jar with the washer fluid.
- (2) Connect the positive battery (+) lead to terminal 1 of the windshield washer motor and pump assy, and the negative battery (-) lead to terminal 2. Check that washer fluid flows from the washer jar.

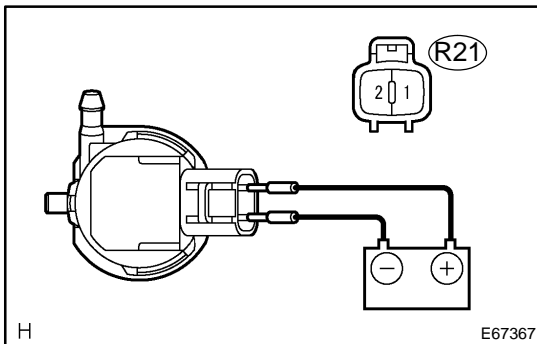

### 2. REAR WASHER MOTOR

#### (a) Operation Check

- (1) Fill the washer jar with the washer fluid.
- (2) Connect the positive battery (+) lead to terminal 1 of the windshield washer motor and pump assy, and the negative battery (-) lead to terminal 2. Check that washer fluid flows from the washer jar.

### 3. LEVEL WARNING SWITCH ASSY

- (a) Check washer level warning switch continuity.
- (b) Check that no continuity exists between terminals with switch OFF (float up).
- (c) Check that continuity exists between terminals with switch ON (float down).