


INSPECTION

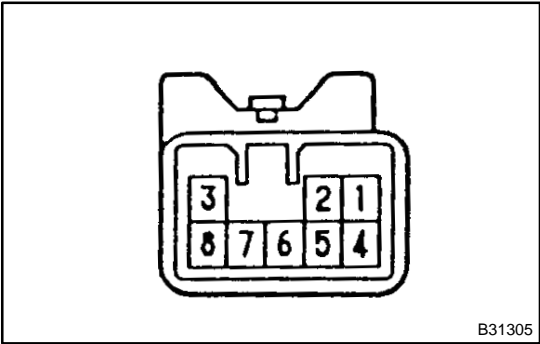

- 1. **INSPECT POWER WINDOW REGULATOR SWITCH ASSY**
 - (a) Check continuity.
 - (1) Check the continuity between the terminals when battery voltage is applied to terminals 1 and 8.

Standard:

Switch operation	Measurement condition	Specified condition
UP	Battery positive - Terminal 8	Continuity between terminals 3 - 7
	Battery negative - Terminal 1	Continuity between terminals 1 - 6
DOWN	Battery positive - Terminal 8	Continuity between terminals 1 - 3
	Battery negative - Terminal 1	Continuity between terminals 6 - 7

If the continuity is not as specified, replace the switch.