


INSPECTION

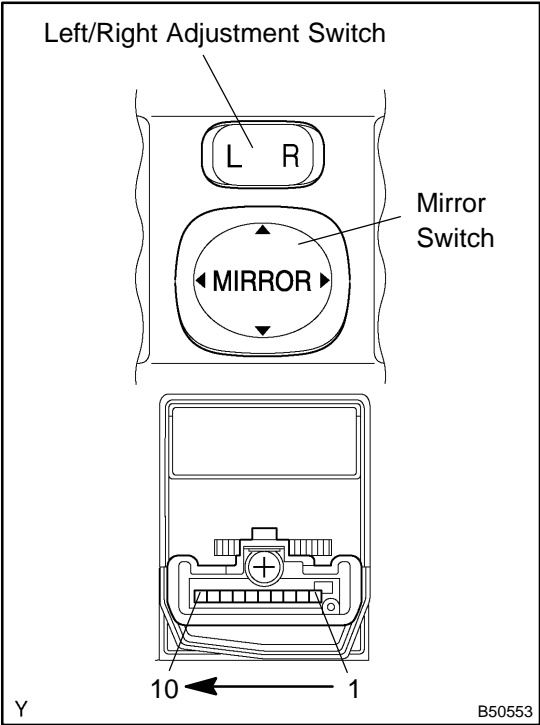

1. INSPECT OUTER MIRROR SWITCH ASSY

- (a) Inspect the mirror switch continuity.
- (1) Turn to the left/right adjustment switch to the L position.
- Inspect the left side mirror switch continuity.


Tester connection	Switch position	Specified condition
-	OFF	No continuity
4 ⇔ 8 6 ⇔ 7	UP	Continuity
4 ⇔ 7 6 ⇔ 8	DOWN	Continuity
5 ⇔ 8 6 ⇔ 7	LEFT	Continuity
5 ⇔ 7 6 ⇔ 8	RIGHT	Continuity

If the continuity is not as specified, replace the switch.

- (2) Turn to the left/right adjustment switch to the R position.
- Inspect the right side mirror switch continuity.

Tester connection	Switch position	Specified condition
-	OFF	No continuity
3 ⇔ 8 6 ⇔ 7	UP	Continuity
3 ⇔ 7 6 ⇔ 8	DOWN	Continuity
2 ⇔ 8 6 ⇔ 7	LEFT	Continuity
2 ⇔ 7 6 ⇔ 8	RIGHT	Continuity

If the continuity is not as specified, replace the switch.

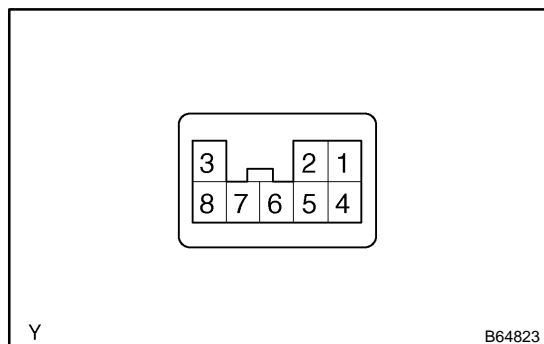

## 2. INSPECT OUTER REAR VIEW MIRROR ASSY RH

### (a) Inspect operation of the mirror motor.


Battery connection	Mirror operation
Positive (+) - 6 Negative (-) - 5	Upward
Positive (+) - 5 Negative (-) - 6	Downward
Positive (+) - 4 Negative (-) - 5	Left
Positive (+) - 5 Negative (-) - 4	Right

### (b) Check operation of the mirror heater.

- (1) Check the mirror between terminals 7 and 8 of the connector.

#### **Standard: continuity**

- (2) Check that the mirror is warmed up when connecting the battery positive (+) to terminal 7 and the battery negative (-) to terminal 8 of the connector.

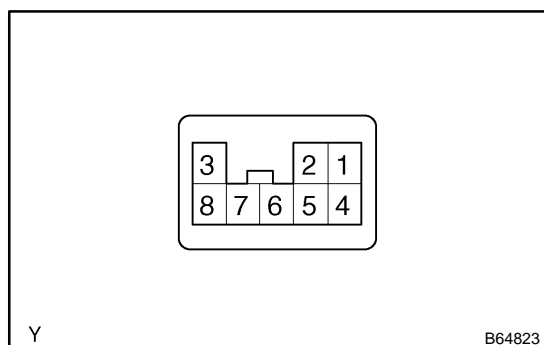

## 3. INSPECT OUTER REAR VIEW MIRROR ASSY LH

### (a) Inspect operation of the mirror motor.

Battery connection	Mirror position
Positive (+) - 6 Negative (-) - 5	Turn upward
Positive (+) - 5 Negative (-) - 6	Turn downward
Positive (+) - 4 Negative (-) - 5	Turn left
Positive (+) - 5 Negative (-) - 4	Turn right

### (b) Check operation of the mirror heater.

- (1) Check the mirror between terminals 7 and 8 of the connector.

#### **Standard: continuity**

- (2) Check that the mirror is warmed up when connecting the battery positive (+) to terminal 7 and the battery negative (-) to terminal 8 of the connector.