

## PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
Mirror does not operate.	1. CIG fuse (I/P J/B)	-
	2. Mirror switch	<a href="#">70-28</a>
	3. Mirror motor	<a href="#">70-28</a>
	4. Wire harness	-
Mirror operates abnormally.	1. Mirror switch	<a href="#">70-28</a>
	2. Mirror motor	<a href="#">70-28</a>
	3. Wire harness	-