

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
Rear window defogger does not operate (Indicator lamp On)	1. Communication Function	-
	2. RR DEF 30 A Fuse	-
	3. Defogger Relay	70-32
	4. Rear Window Defogger Wire	-
	5. Wire Harness	-
	6. A/C ECU	05-1123
Rear window defogger does not operate (Indicator lamp OFF)	1. Heater 15A Fuse	-
	2. A/C Control Panel	05-1114
	3. Defogger Switch(A/C Panel Switch)	05-1114
	4. A/C ECU	05-1123
	5. Wire Harness	-
	6. Gateway Computer	05-1123