

## DATA LIST/ACTIVE TEST

### 1. CHECK USING INTELLIGENT TESTER

- (a) Connect the intelligent tester to the DLC3.
- (b) Select the DATA LIST mode on the intelligent tester.

#### Sliding roof ECU:

Item	Switch condition	Standard value
OPEN SW	Pressed → Unpressed	ON/OFF
CLOSE SW	Pressed → Unpressed	ON/OFF
Position detection SW 1	Do sliding and tilting operation	ON/OFF
Position detection SW 2	Do sliding and tilting operation	ON/OFF
HALL IC condition	Do sliding and tilting operation	Normal/ Abnormal
HALL IC out put	Do sliding and tilting operation	ON/OFF
IG	Ignition Switch ON → OFF	ON/OFF
IG line signal	Ignition Switch ON → OFF	ON/OFF
Operation possible after key-OFF	Ignition Switch ON → OFF	ON/OFF

- (c) The active test will indicate if the part is normal or malfunctioning.

#### Sliding roof ECU:

Item	Condition
Sliding Roof	CLOSE/ UP
Sliding Roof	OPEN/DOWN