



## INSPECTION

### 1. INSPECT SLIDING ROOF SWITCH ASSY

- (a) Disconnect the sliding roof switch connector, and check the voltage or continuity of each terminal of the connector.

### Standard

Symbols (Terminal No.)	Wiring color	Condition	Specified condition
UP (O5 - 6) ⇔ Body ground	G ⇔ -	Each switch OFF	Continuity
DOWN (O5 - 4) ⇔ Body ground	W ⇔ -	Each switch OFF	Continuity
UP (O5 - 6) ⇔ Body ground	G ⇔ -	<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Sliding roof fully closed</li> <li>• Slide open switch OFF → ON (Slide open side)</li> </ul>	0 V → 10 to 14 V
DOWN (O5 - 4) ⇔ Body ground	W ⇔ -	<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Sliding roof fully closed</li> <li>• Slide open switch OFF → ON (Slide open side)</li> </ul>	0 V → 10 to 14 V
IG (O5 - 9) ⇔ Body ground	GR ⇔ -	Ignition switch ON	0 V → 10 to 14 V
GND (O5 - 1) ⇔ Body ground	W - B ⇔ -	Constant	Continuity