

PROBLEM SYMPTOMS TABLE

Symptom	Suspected area	See page
Sliding roof system operates abnormally.	1. Slide roof control switch	74-8
	2. Slide roof drive gear sub-assy	74-4
	3. Wire harness	-
Sliding roof system stops operation half-way. (No foreign materials are trapped in motor assy)	1. Slide roof control switch	74-8
	2. Slide roof drive gear sub-assy	74-4
	3. Wire harness	-