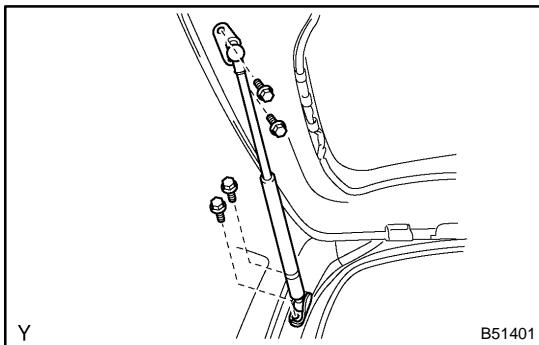


## BACK DOOR STAY ASSY LH REPLACEMENT

75021-04

**HINT:**

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring addition information are included.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [03-2](#)).

**1. REMOVE BACK DOOR STAY ASSY LH**

- (a) Remove the 4 bolts and back door stay from the back door panel.

**HINT:**

While supporting the back door by hand, remove the back door stay.

**2. INSTALL BACK DOOR STAY ASSY LH**

- (a) Install the back door stay with the 4 bolts.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**