

# IGNITION SWITCH

## PROBLEM SYMPTOMS TABLE

8000G-04

Symptom	Suspected Area	See Page
Ignition switch is not set in each position	1. Ignition switch 2. Power source circuit	<a href="#">80-2</a> -