



Power Source

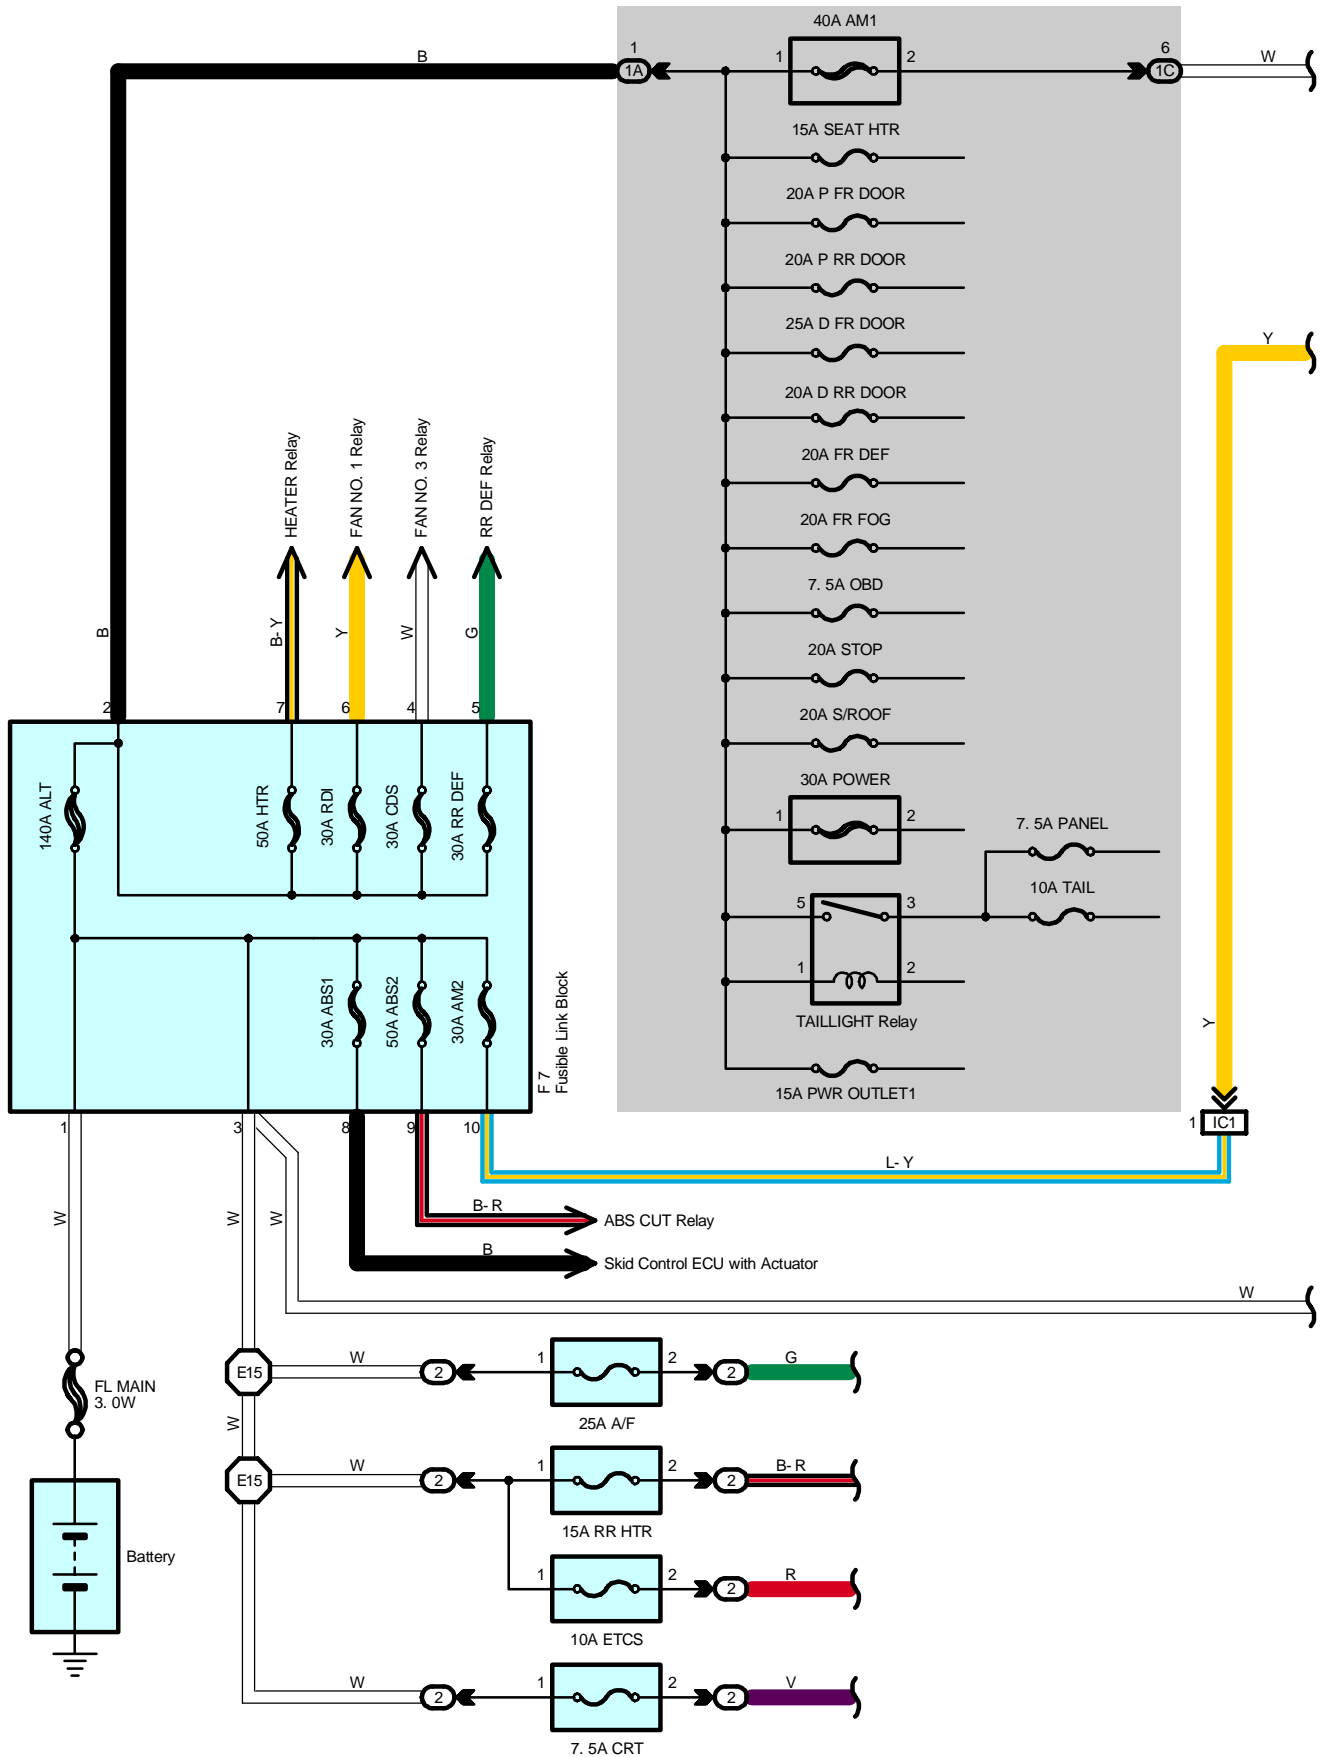

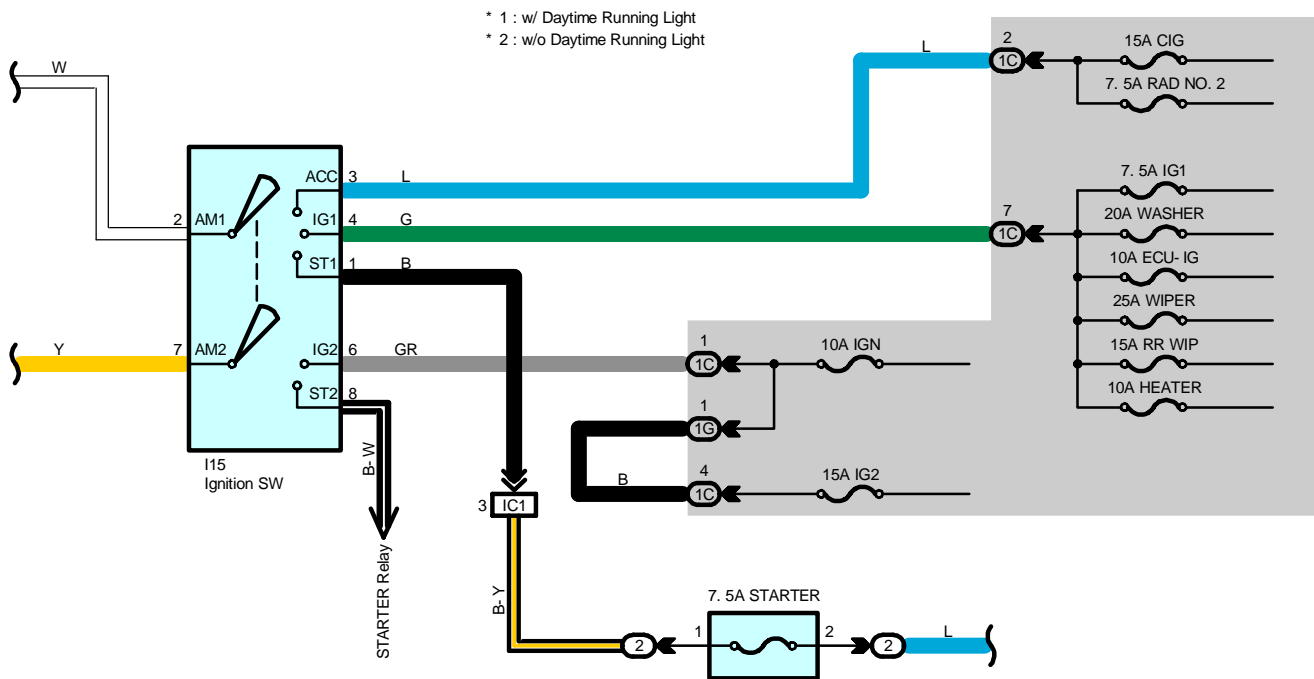

Power Source

Service Hints

I15 Ignition SW

- 2-3 : Closed with the ignition SW at ACC or ON position
- 2-4 : Closed with the ignition SW at ON or ST position
- 2-1 : Closed with the ignition SW at ST position
- 7-6 : Closed with the ignition SW at ON or ST position
- 7-8 : Closed with the ignition SW at ST position

TAILLIGHT Relay

- 5-3 : Closed with the light control SW at TAIL or HEAD position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F7	38 (3MZ-FE)	F7	40 (2AZ-FE)	I15	43

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.3 (Engine Compartment Rear Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
2D	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2I		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	52	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E10	48 (3MZ-FE)	Engine Room Main Wire	E15	48 (3MZ-FE)	Engine Room Main Wire
	50 (2AZ-FE)			50 (2AZ-FE)	

