



Headlight without Daytime Running Light

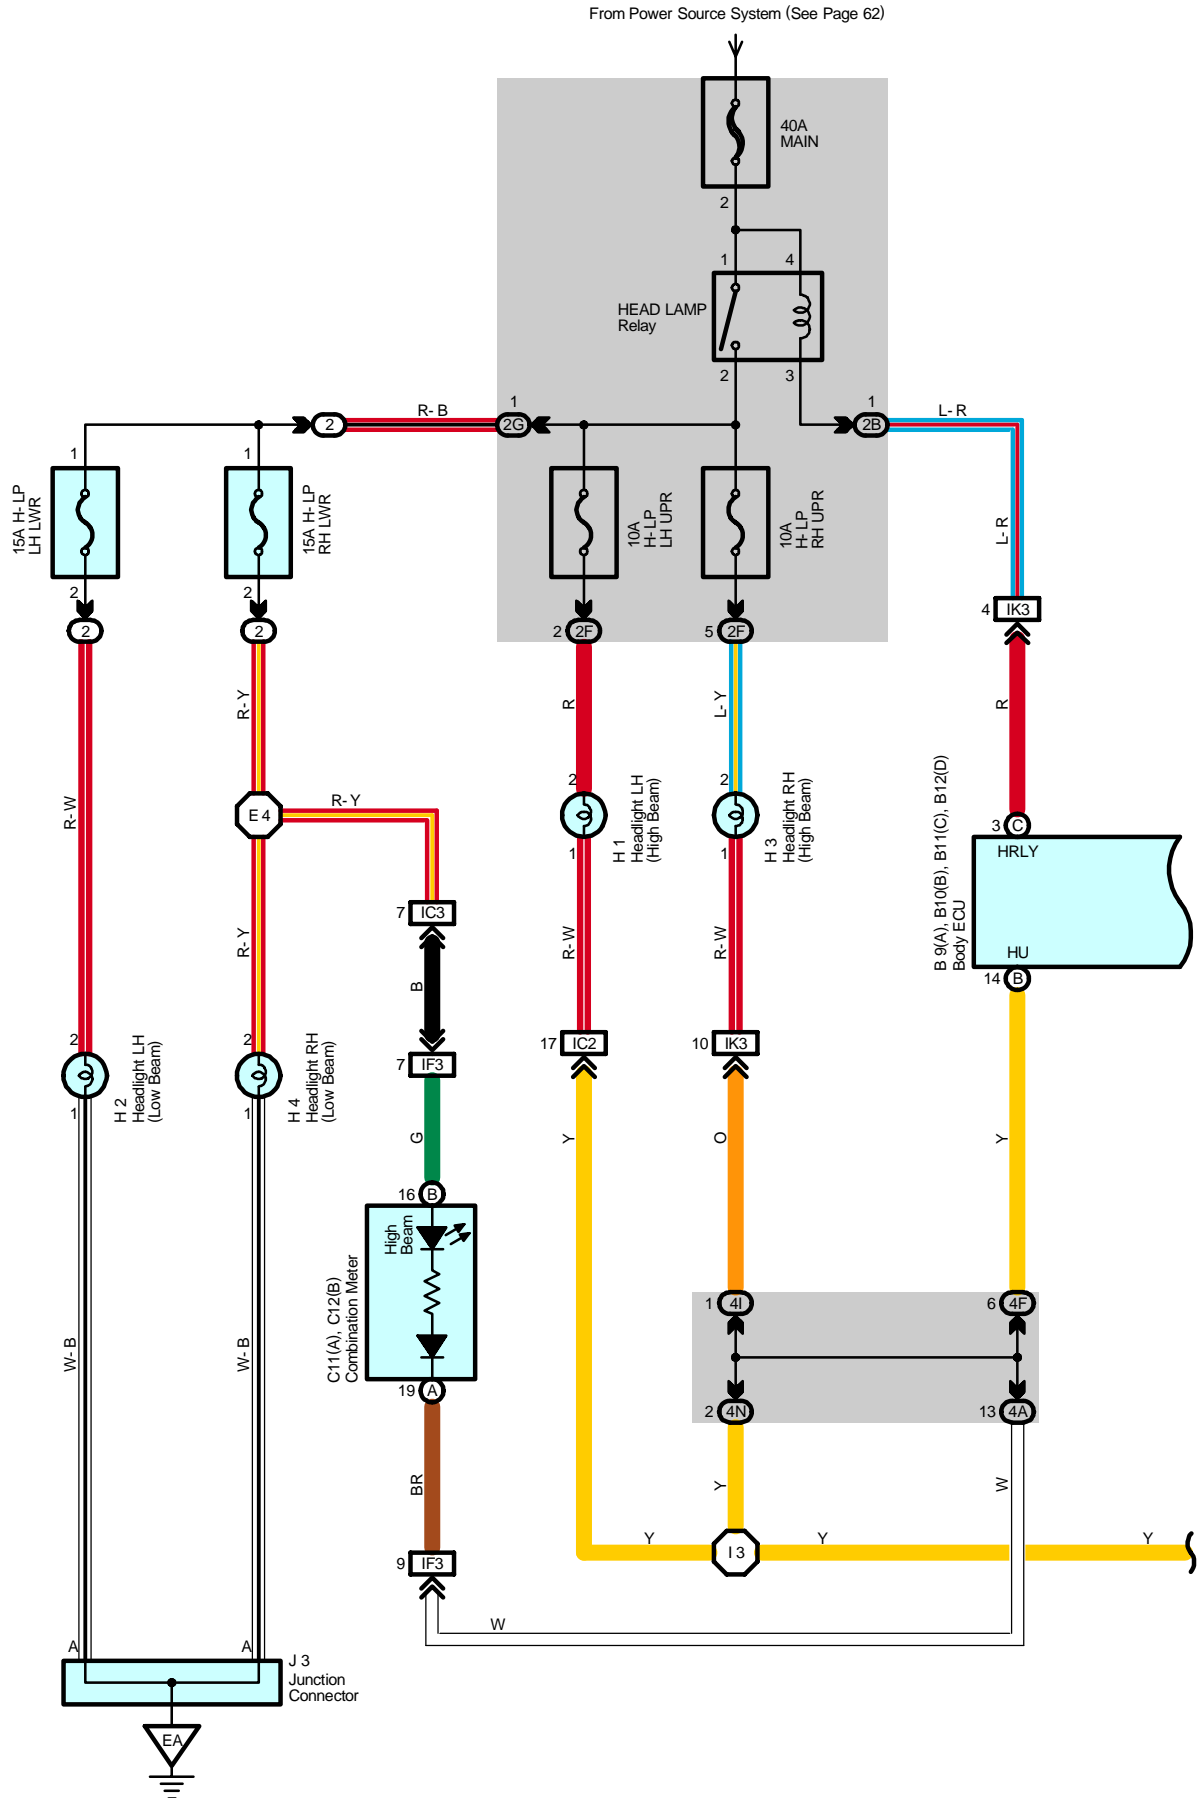

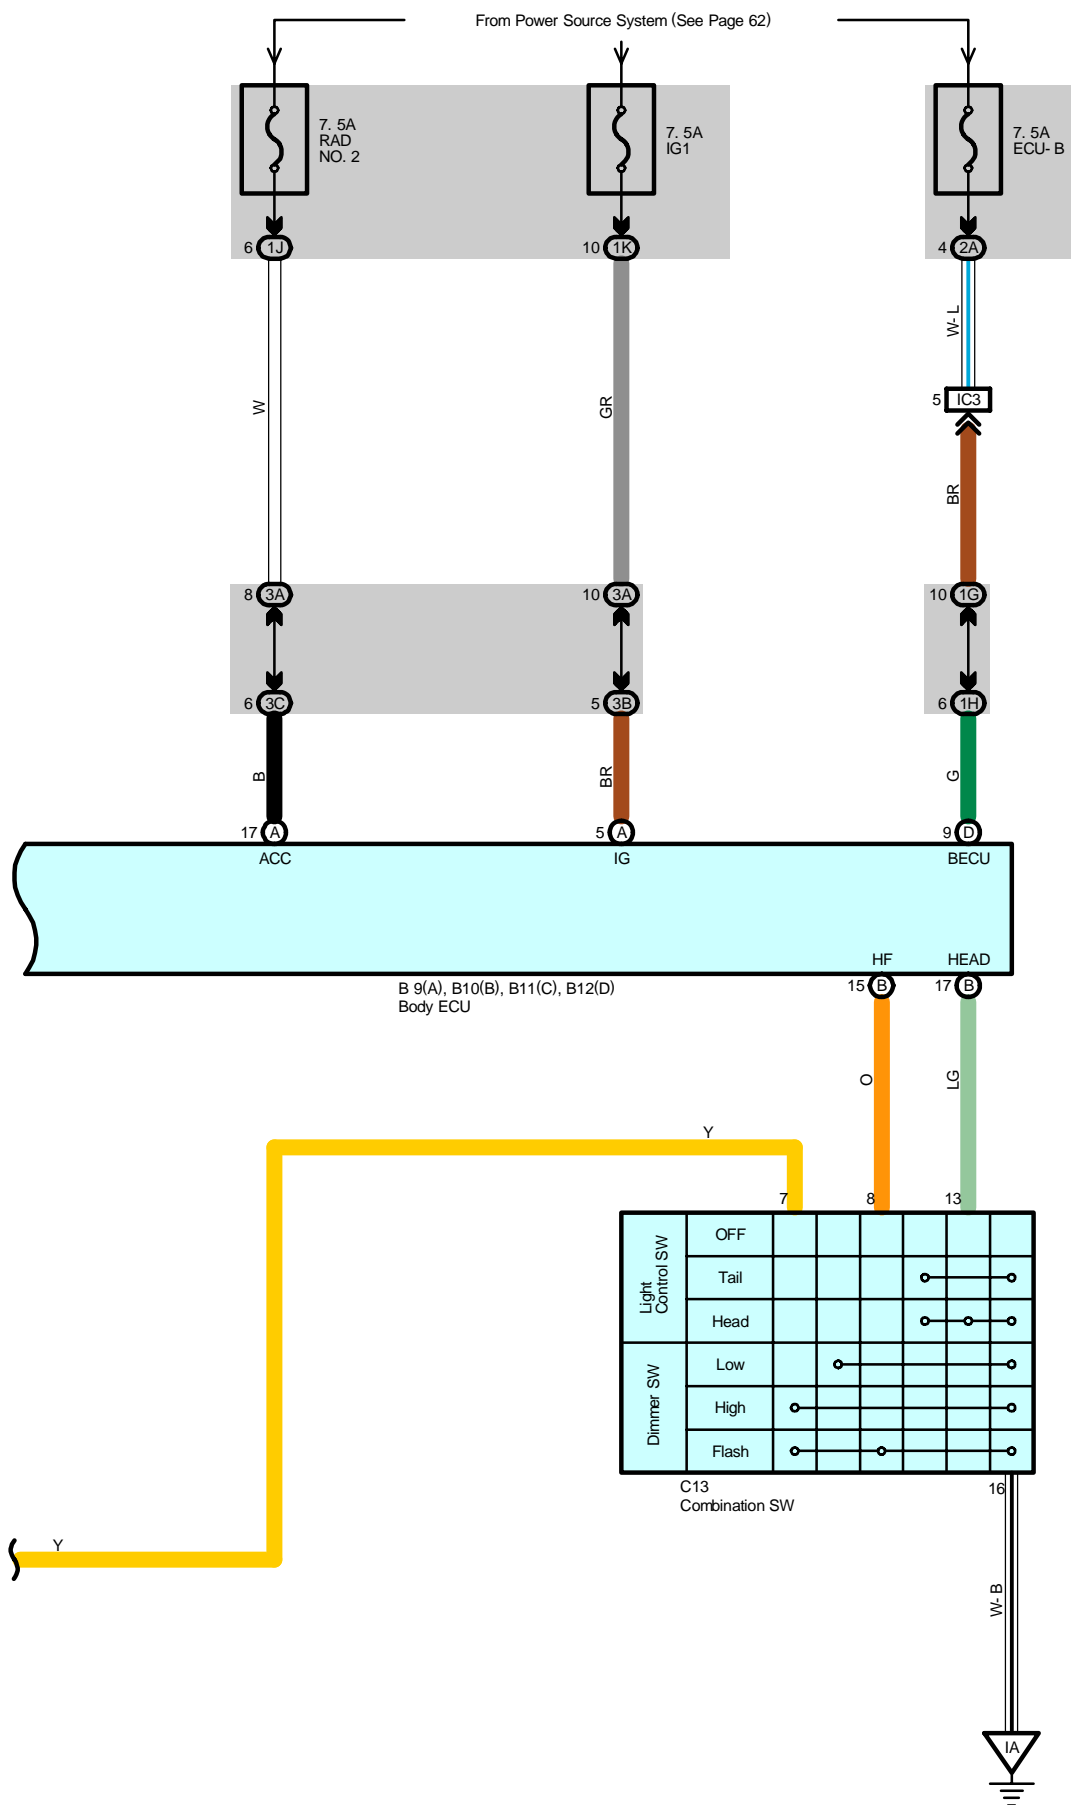

Headlight without Daytime Running Light

Service Hints

HEAD LAMP Relay

1-2 : Closed with the light control SW at HEAD position or dimmer SW at FLASH position

C13 Combination SW

13-16 : Closed with the light control SW at HEAD position

8-16 : Closed with the dimmer SW at FLASH position

7-16 : Closed with the dimmer SW at HIGH or FLASH position

○ : PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
B9	A	42	C13	42	H3	40 (2AZ-FE)
B10	B	42	H1	38 (3MZ-FE)	H4	38 (3MZ-FE)
B11	C	42		40 (2AZ-FE)		40 (2AZ-FE)
B12	D	42	H2	38 (3MZ-FE)	J3	39 (3MZ-FE)
C11	A	42		40 (2AZ-FE)		41 (2AZ-FE)
C12	B	42	H3	38 (3MZ-FE)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2F		
2G		
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4F		
4I	32	
4N		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	52	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC3		
IF3	52	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	54	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	48 (3MZ-FE)	Right Front Fender Apron
	50 (2AZ-FE)	
IA	52	Left Cowl Side Panel

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	48 (3MZ-FE)	Engine Room Main Wire	I3	54	Cowl Wire
	50 (2AZ-FE)				