


Taillight

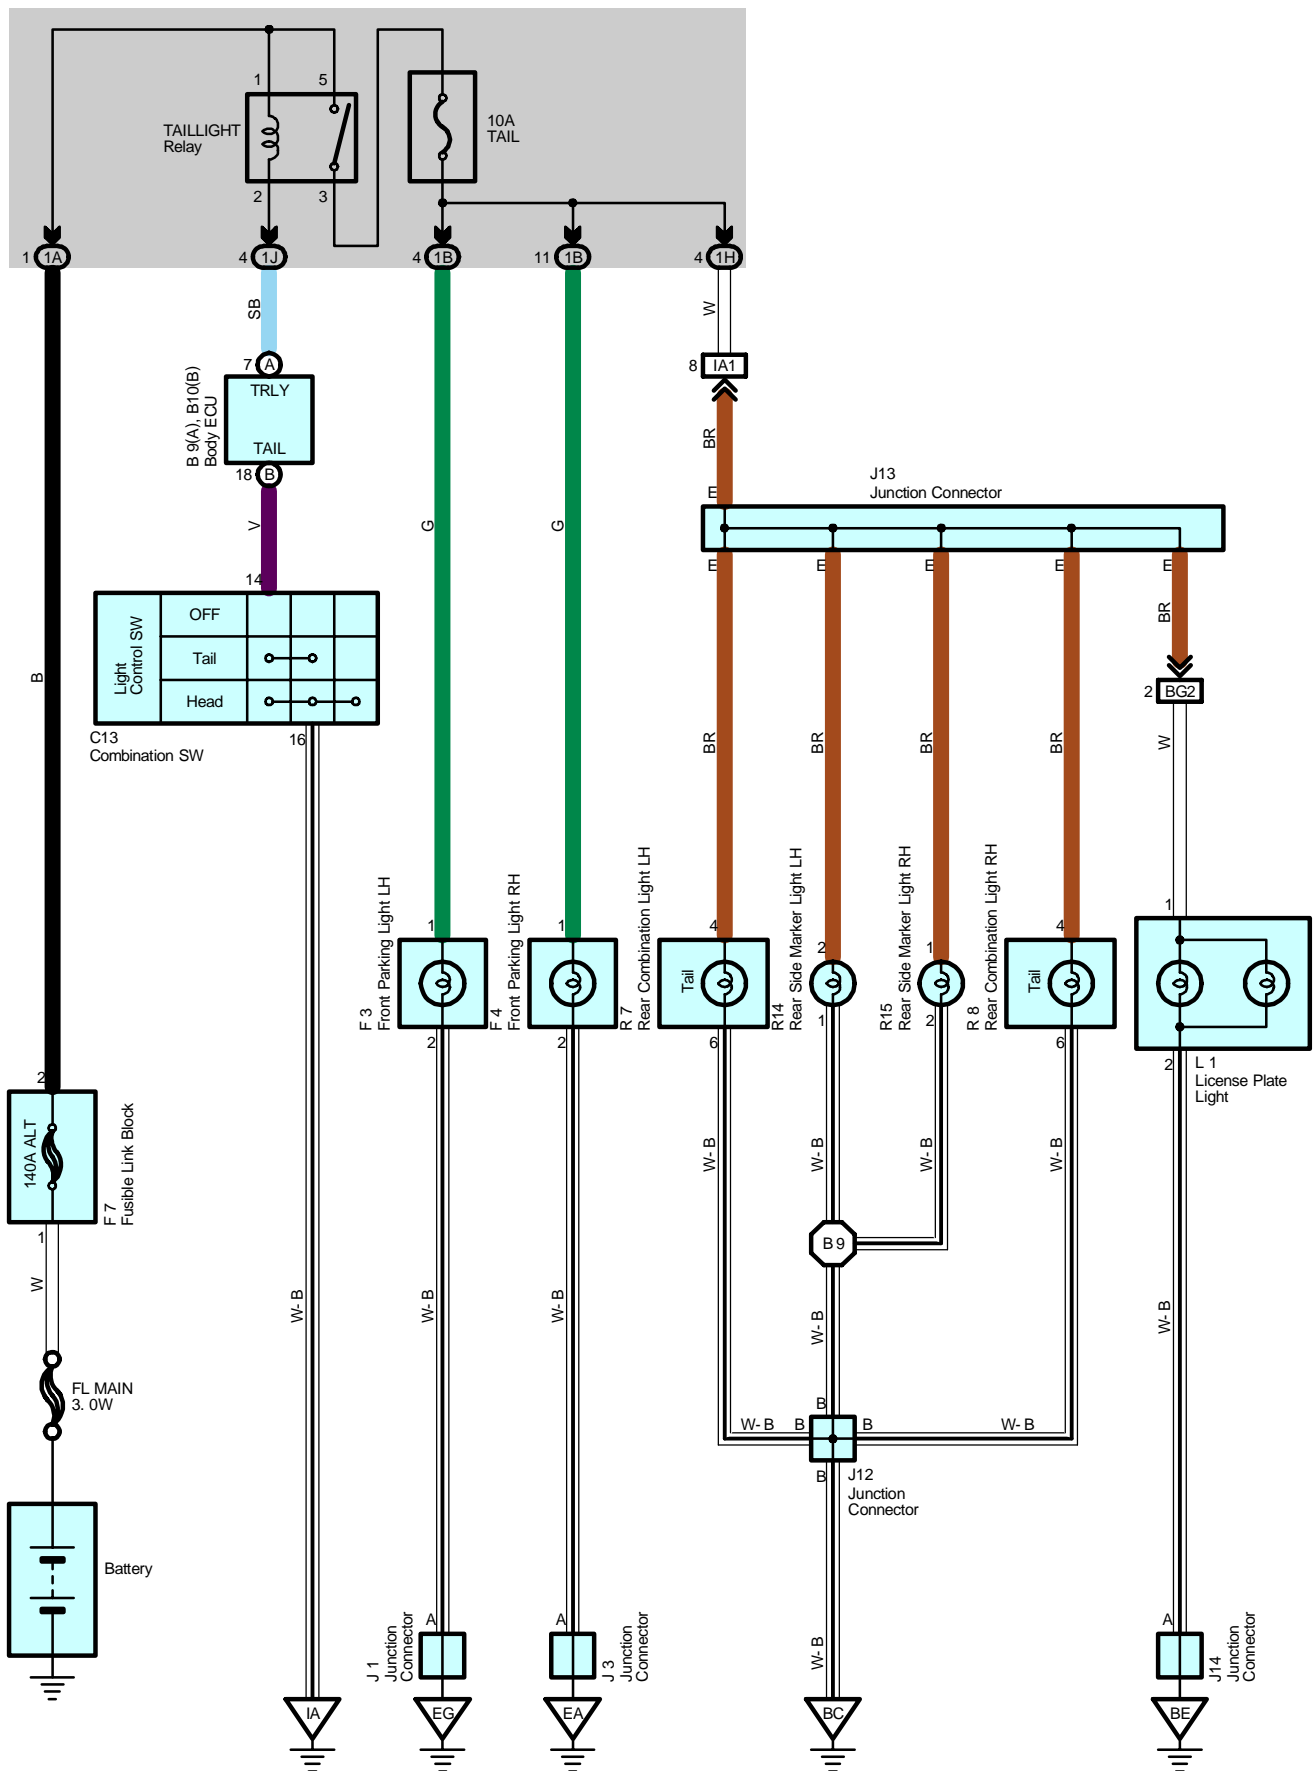

Service Hints

TAILLIGHT Relay

5-3 : Closed with the light control SW at TAIL or HEAD position

C13 Combination SW

14-16 : Closed with the light control SW at TAIL or HEAD position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B9	A	F7	38 (3MZ-FE)	J13	44
B10	B		40 (2AZ-FE)	J14	44
C13	42	J1	39 (3MZ-FE)	L1	44
F3	38 (3MZ-FE)		41 (2AZ-FE)	R7	45
	40 (2AZ-FE)	J3	39 (3MZ-FE)	R8	45
F4	38 (3MZ-FE)		41 (2AZ-FE)	R14	45
	40 (2AZ-FE)	J12	44	R15	45

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1B		
1H	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
BG2	56	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	48 (3MZ-FE)	Right Front Fender Apron
	50 (2AZ-FE)	
EG	48 (3MZ-FE)	Under the Left Headlight
	50 (2AZ-FE)	
IA	52	Left Cowl Side Panel
BC	56	Left Side of Rear Cross Member
BE	56	Left Side of Back Door

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B9	56	Floor No.2 Wire			