


Turn Signal and Hazard Warning Light

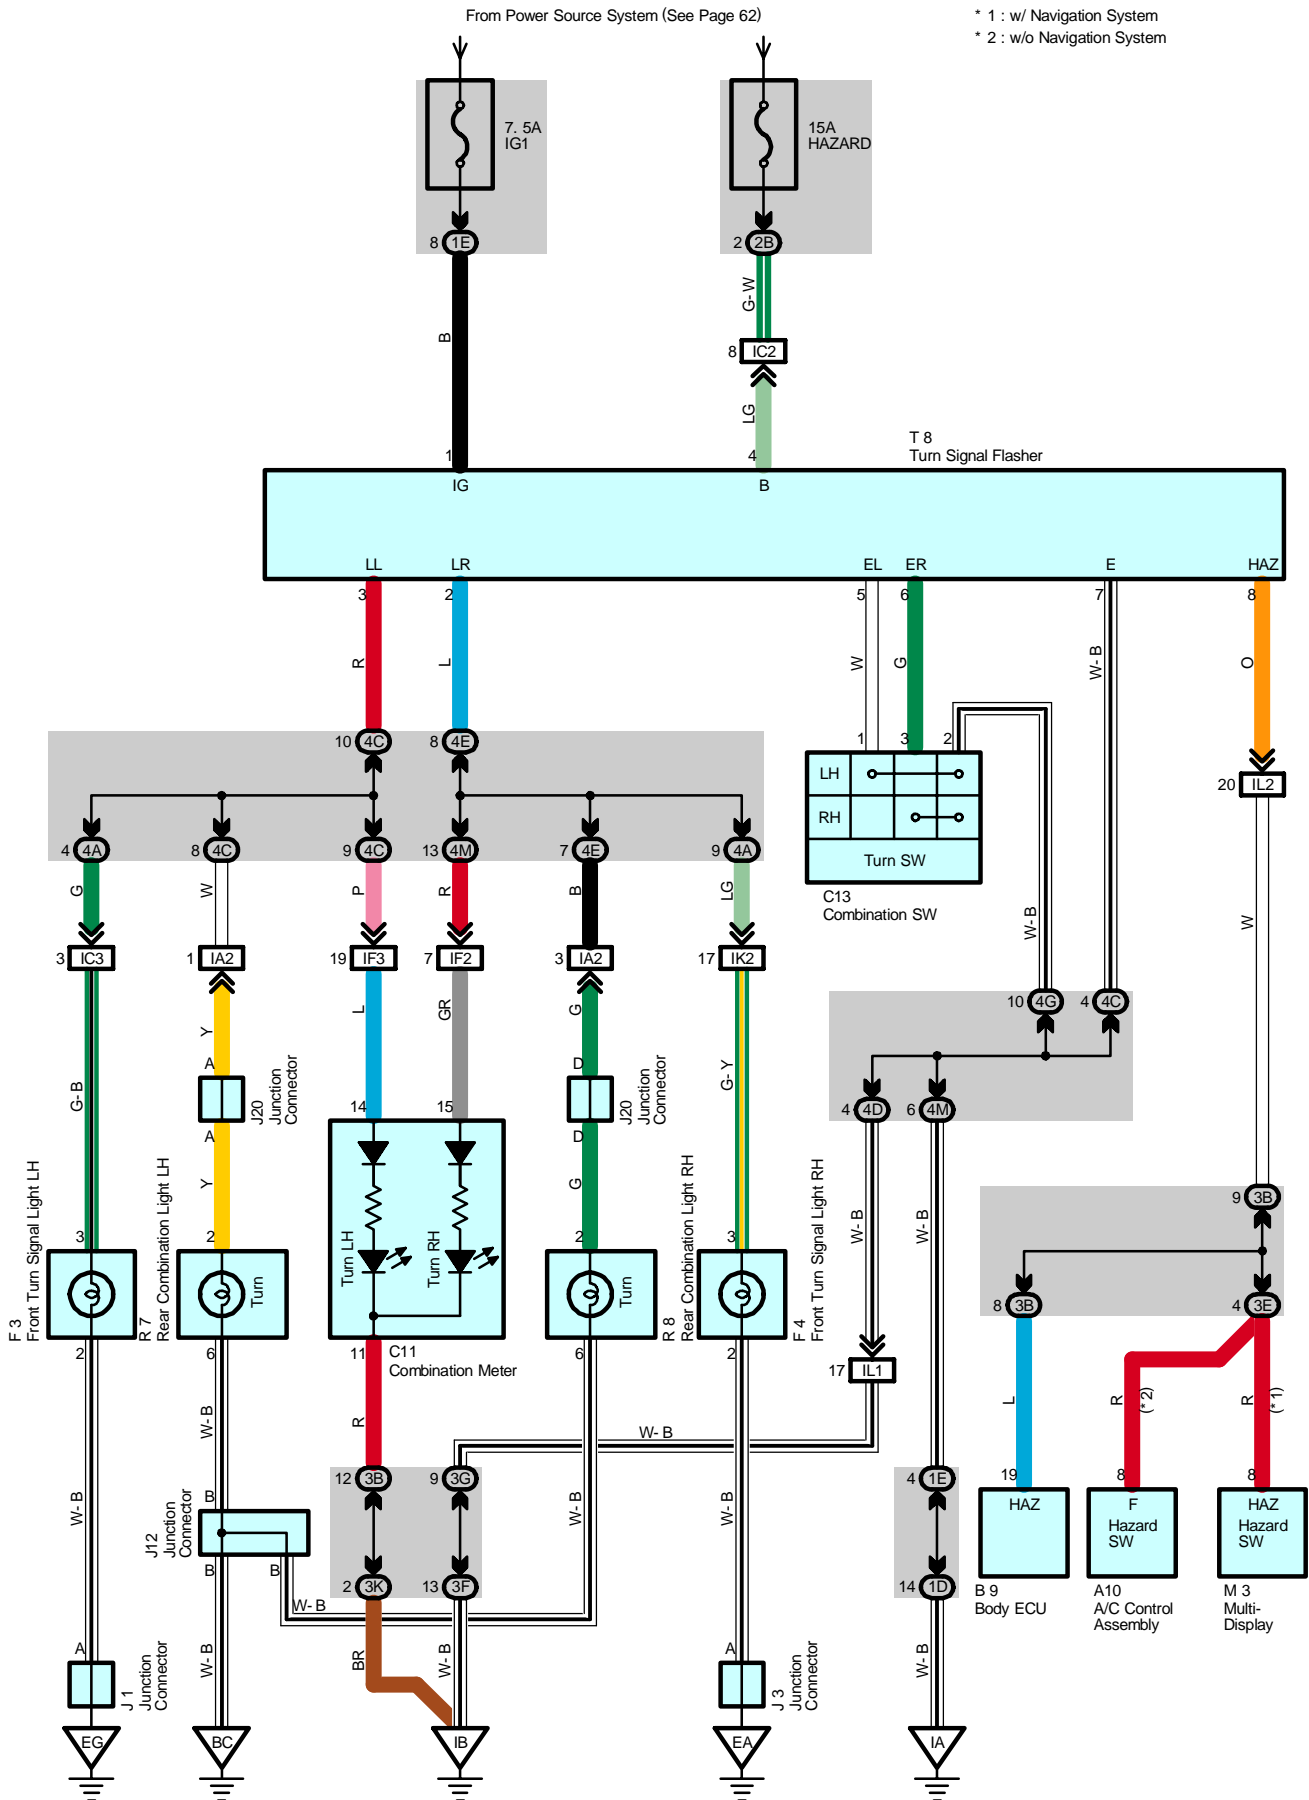

Service Hints

T8 Turn Signal Flasher

- 4-Ground : Always approx. 12 volts
- 7-Ground : Always continuity
- 1-Ground : Approx. 12 volts with the ignition SW at ON position
- 5-Ground : Continuity with the ignition SW at ON position and the turn signal SW at LEFT position
- 6-Ground : Continuity with the ignition SW at ON position and the turn signal SW at RIGHT position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A10	42	F4	38 (3MZ-FE)	J12	44
B9	42		40 (2AZ-FE)	J20	43
C11	42	J1	39 (3MZ-FE)	M3	43
C13	42		41 (2AZ-FE)	R7	45
F3	38 (3MZ-FE)	J3	39 (3MZ-FE)	R8	45
	40 (2AZ-FE)		41 (2AZ-FE)	T8	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
2B	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3B	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3E		
3F		
3G	31	
3K		
4A		
4C	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4D		
4E		
4G		
4M	32	

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	52	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IC2	52	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC3		
IF2	52	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IF3		
IK2	54	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	54	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IL2		

: GROUND POINTS

Code	See Page	Ground Points Location
EA	48 (3MZ-FE)	Right Front Fender Apron
	50 (2AZ-FE)	
EG	48 (3MZ-FE)	Under the Left Headlight
	50 (2AZ-FE)	
IA	52	Left Cowl Side Panel
IB	52	Right Instrument Panel Brace
BC	56	Left Side of Rear Cross Member