



Power Seat for Driver's Seat

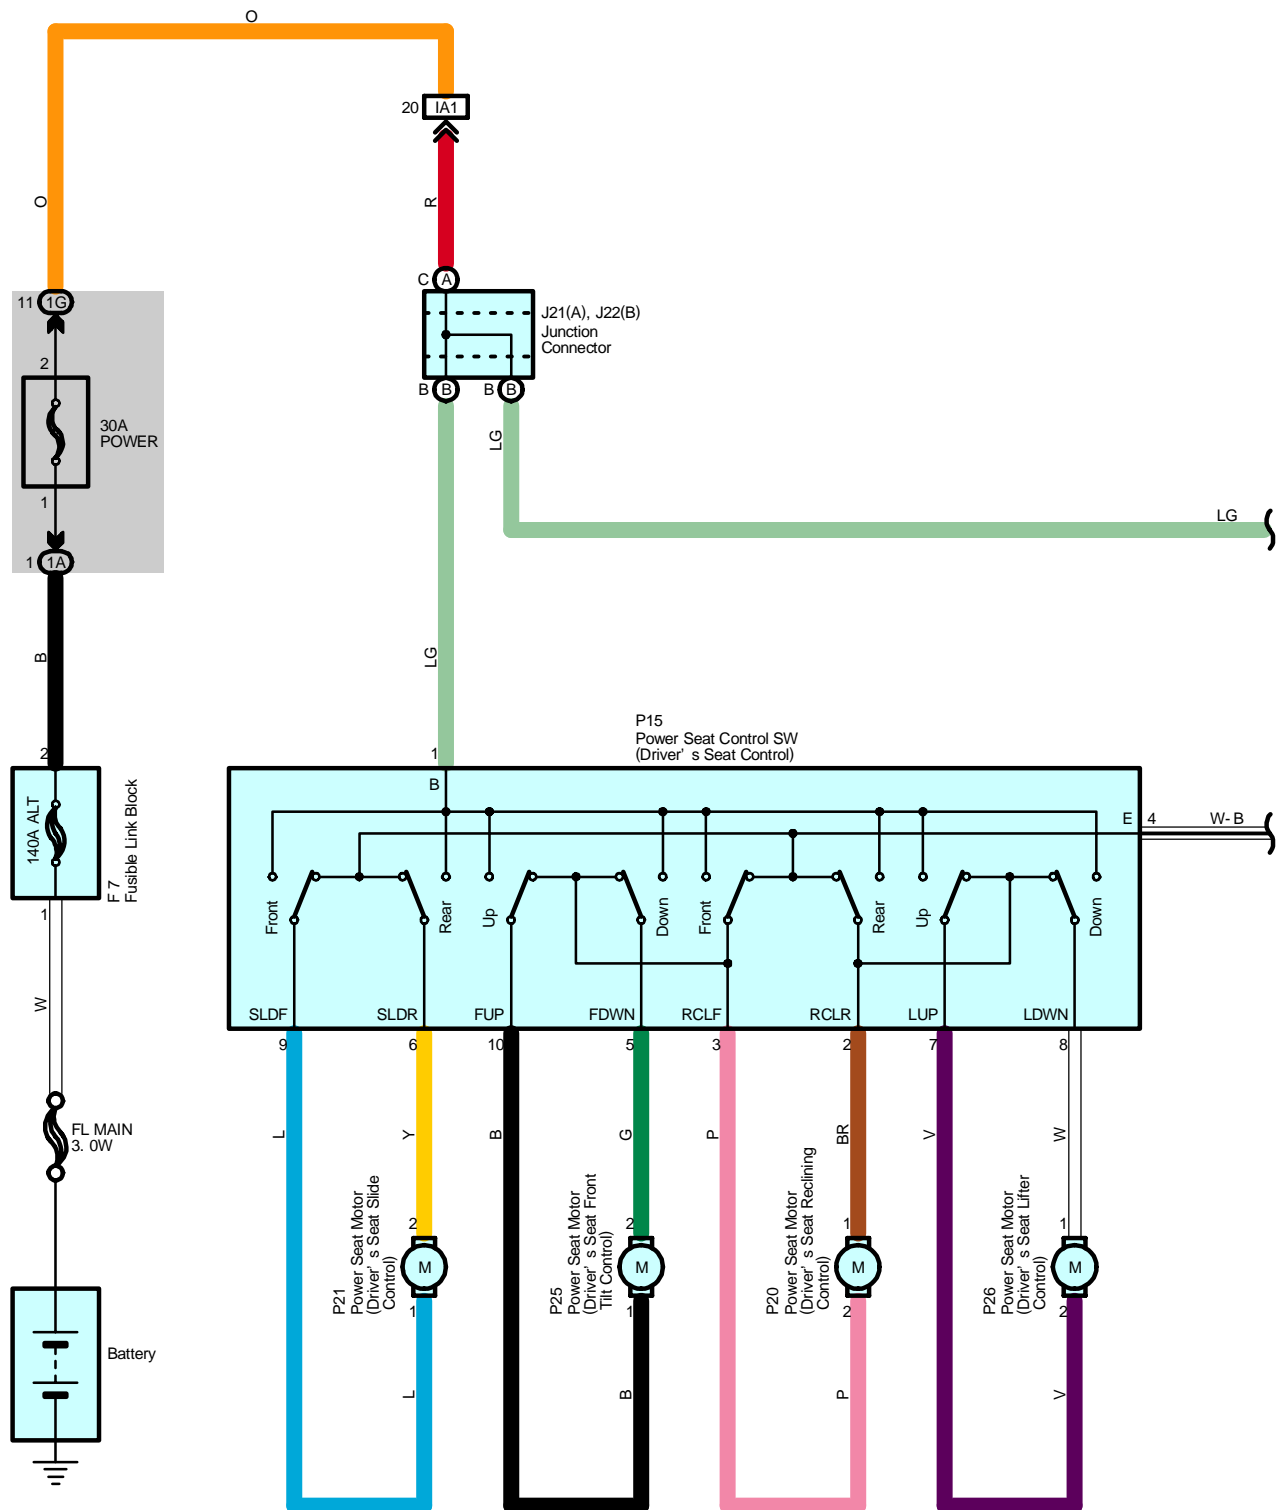

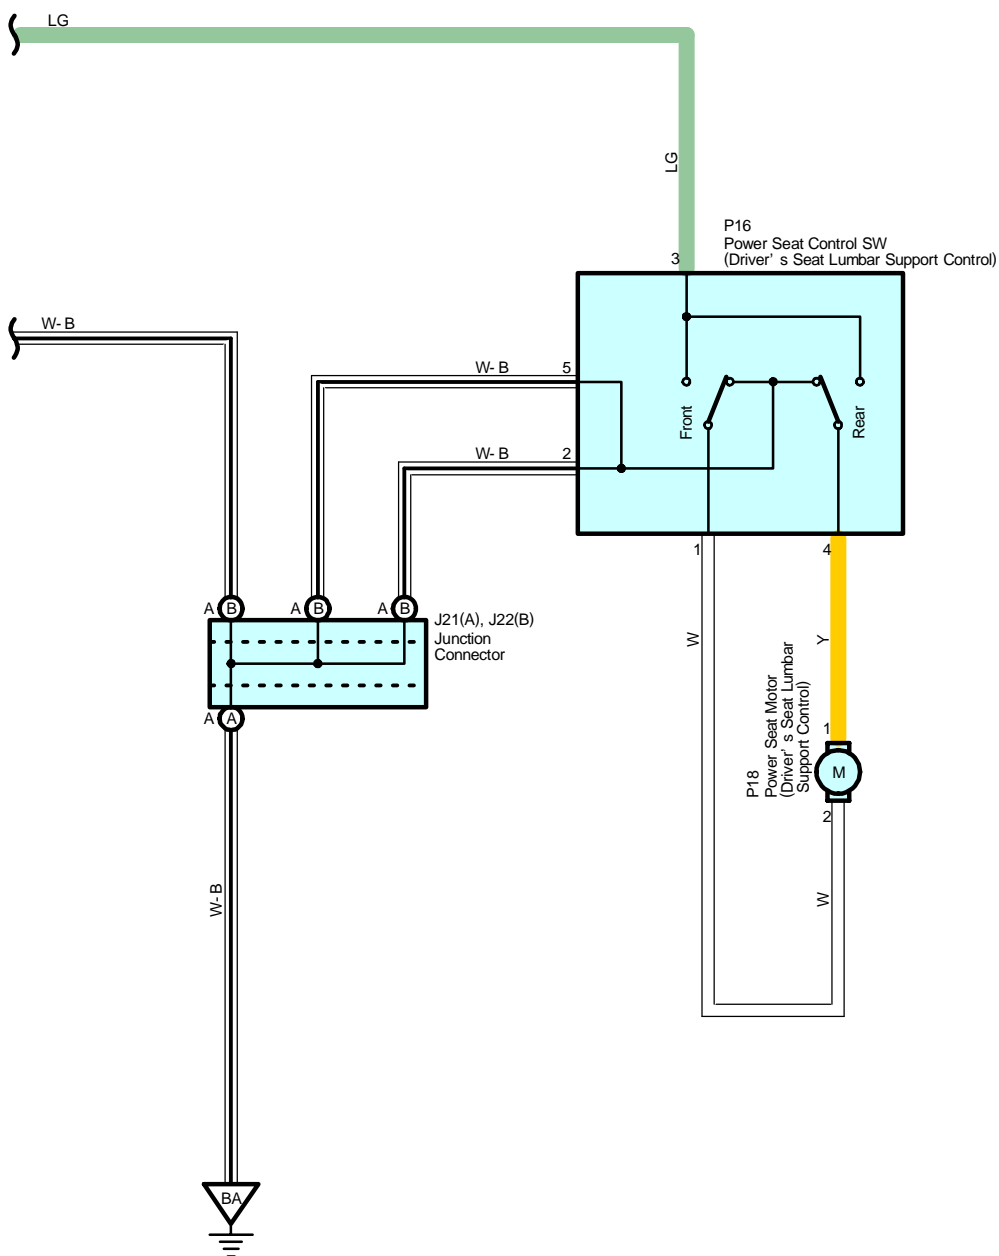

Power Seat for Driver's Seat

Service Hints

P15 Power Seat Control SW (Driver's Seat Control)

- 1-Ground : Always approx. 12 volts
- 4-Ground : Always continuity

P16 Power Seat Control SW (Driver's Seat Lumbar Support Control)

- 3-Ground : Always approx. 12 volts
- 2-Ground : Always continuity
- 5-Ground : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F7	38 (3MZ-FE)	P15	46 (w/ Power Seat)	P21	46 (w/ Power Seat)
	40 (2AZ-FE)	P16	46 (w/ Power Seat)	P25	46 (w/ Power Seat)
J21	A 46 (w/ Power Seat)	P18	46 (w/ Power Seat)	P26	46 (w/ Power Seat)
J22	B 46 (w/ Power Seat)	P20	46 (w/ Power Seat)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Cowl Wire and Floor No.2 Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BA	56	Left Center Pillar

