


Power Seat for Front Passenger's Seat

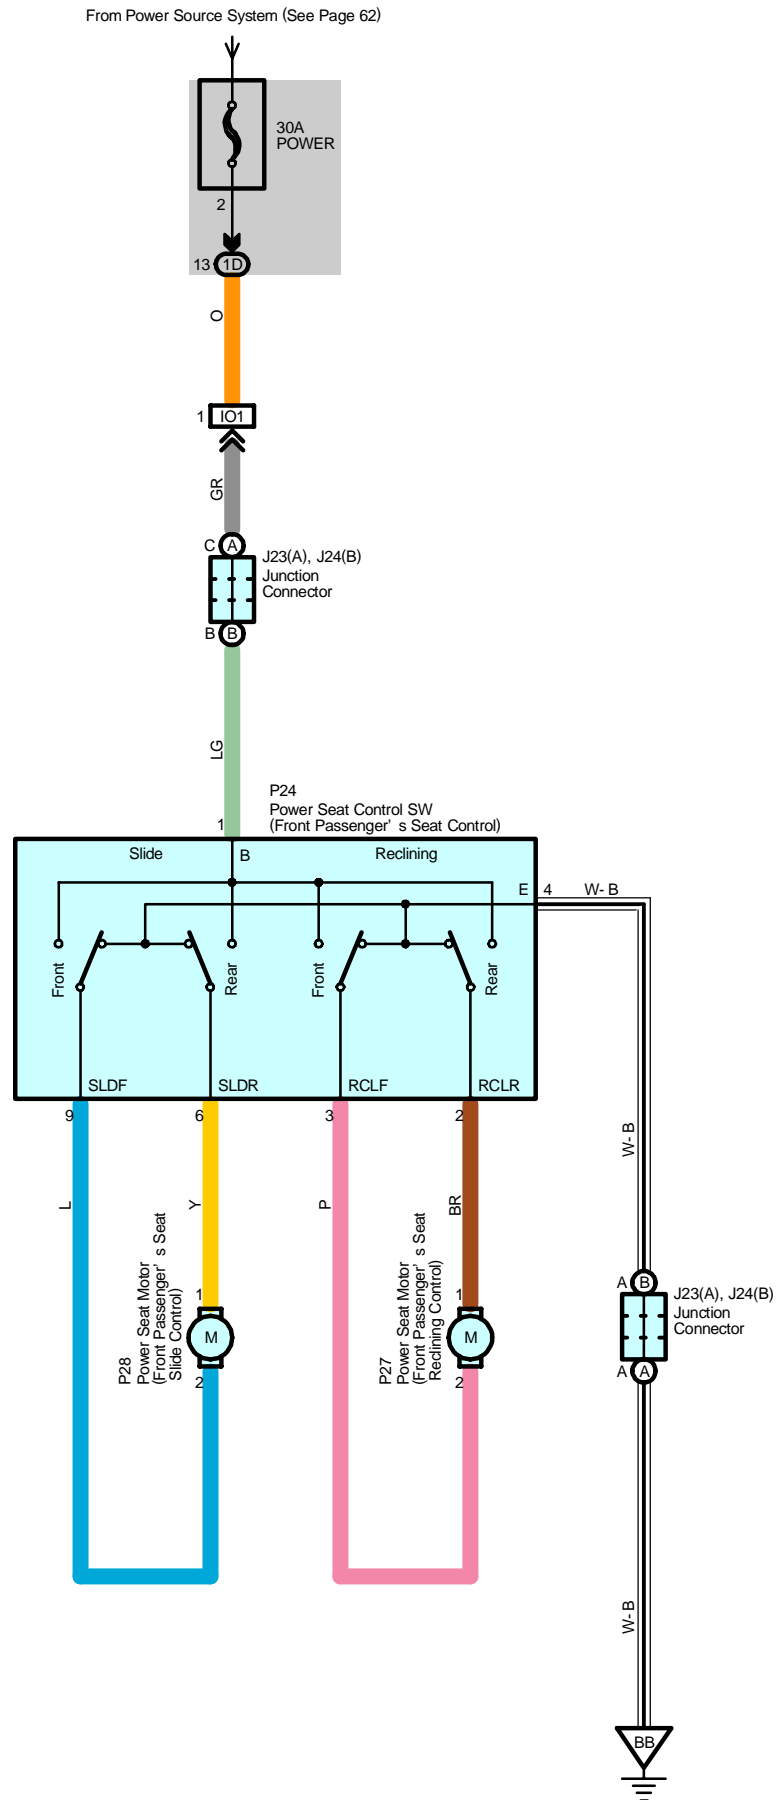

Service Hints

P24 Power Seat Control SW (Front Passenger's Seat Control)

- 1-3 : Closed with front passenger's seat at front reclining operation
- 1-2 : Closed with front passenger's seat at rear reclining operation
- 1-9 : Closed with front passenger's seat at front slide operation
- 1-6 : Closed with front passenger's seat at rear slide operation
- 4-Ground : Always continuity

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
J23	A	46 (w/ Power Seat)	P24	46 (w/ Power Seat)	P28	46 (w/ Power Seat)		
J24	B	46 (w/ Power Seat)	P27	46 (w/ Power Seat)				

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO1	54	Cowl Wire and Floor Wire (Right Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
BB	56	Right Center Pillar