



Service Hints

HORN Relay

5-3 : Closed with the horn SW on

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B12	42	H7	38 (3MZ-FE)	H8	38 (3MZ-FE)
C16	42		40 (2AZ-FE)		40 (2AZ-FE)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2E		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	52	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	54	Cowl Wire			