



# Power Outlet

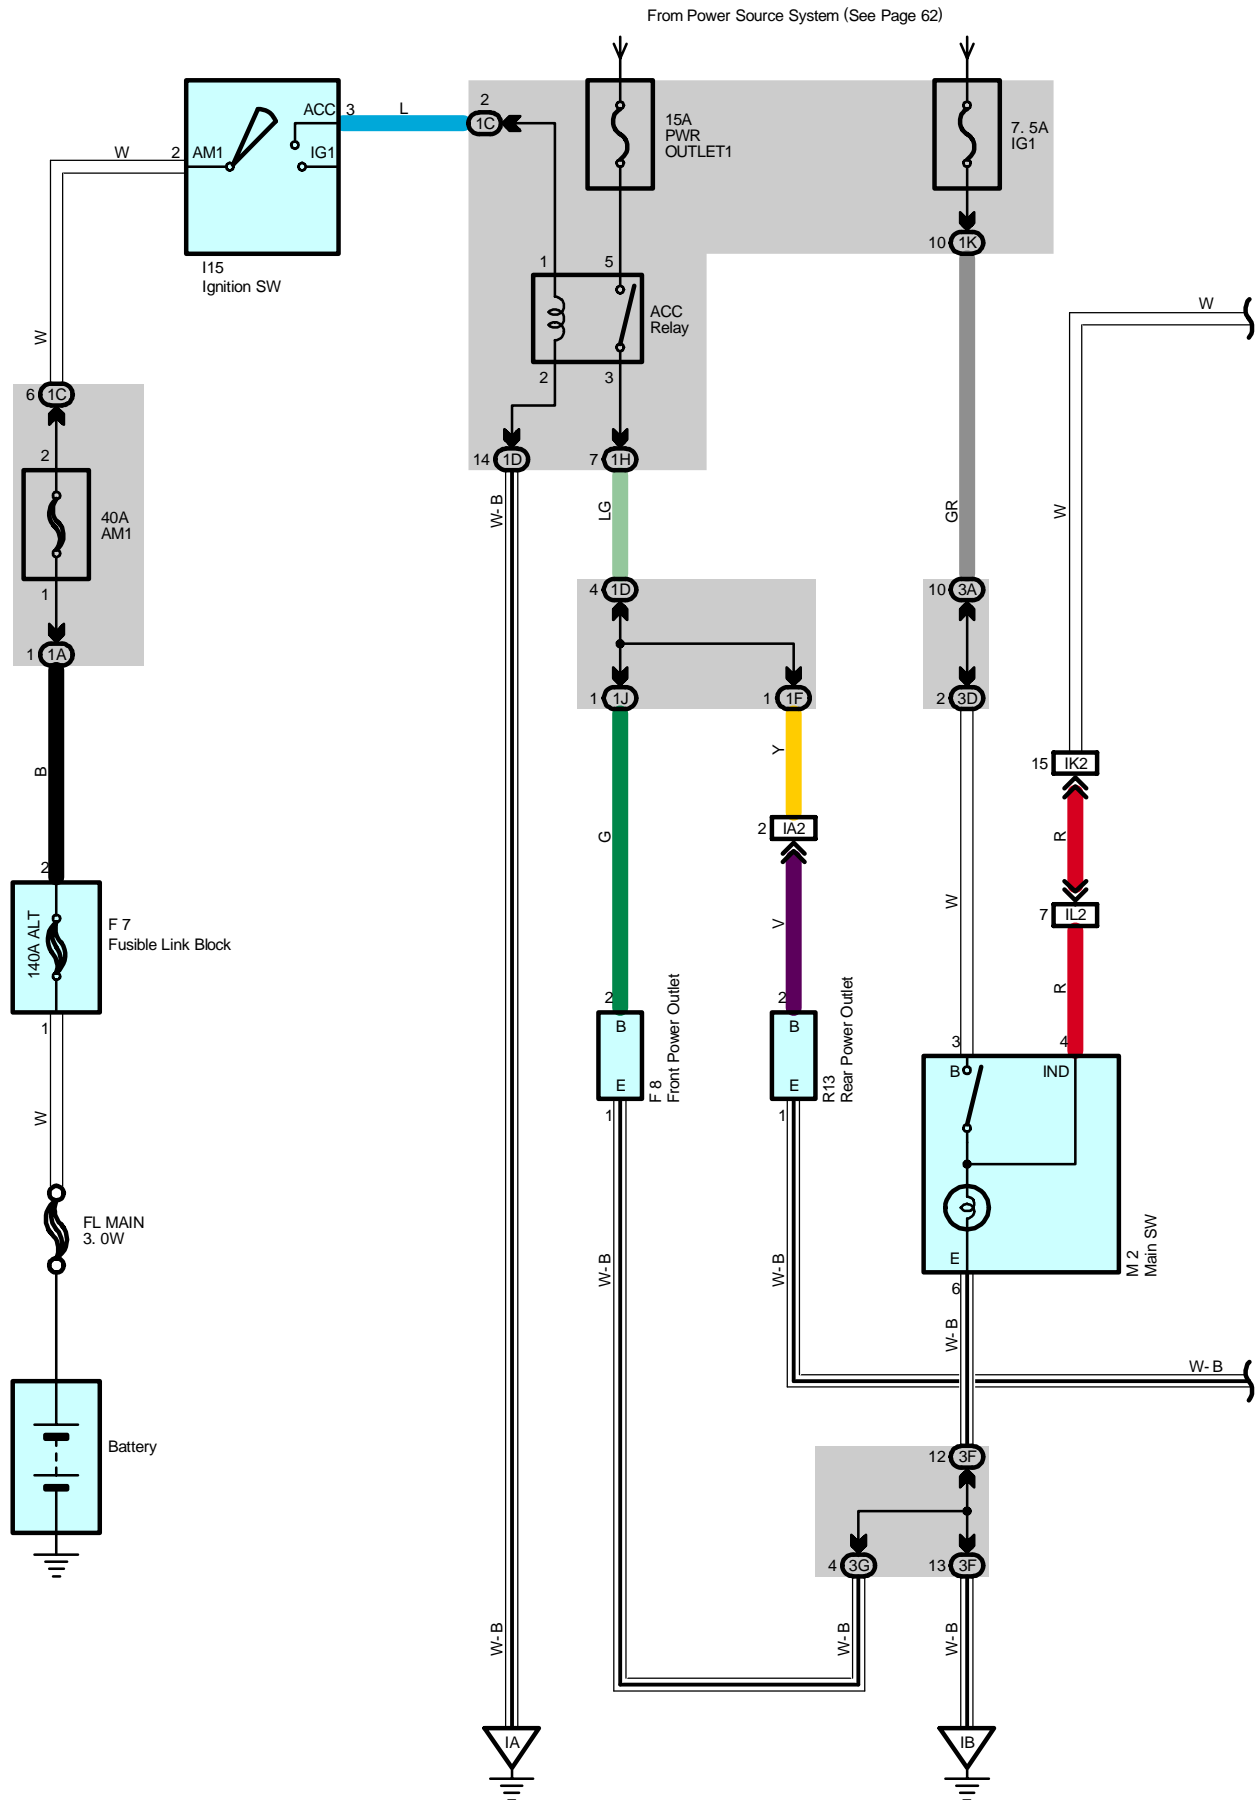

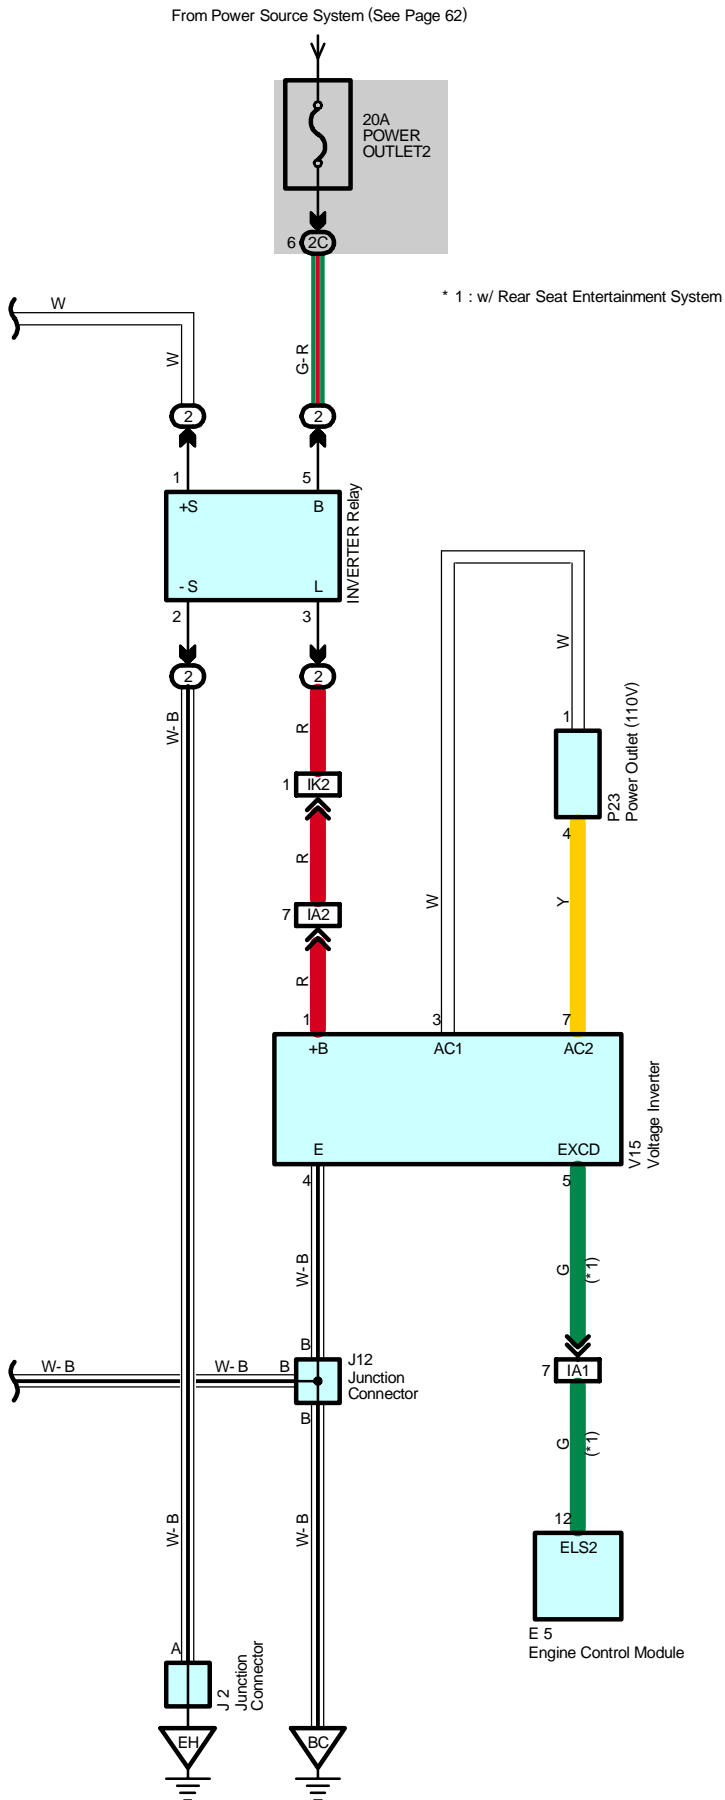

# Power Outlet

## Service Hints

### F8 Front Power Outlet

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

### R13 Rear Power Outlet

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

### M2 Main SW

- 3-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 6-Ground : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
E5	<a href="#">42</a>	I15	<a href="#">43</a>	M2	<a href="#">43</a>
F7	<a href="#">38 (3MZ-FE)</a>	J2	<a href="#">39 (3MZ-FE)</a>	P23	<a href="#">44</a>
	<a href="#">40 (2AZ-FE)</a>		<a href="#">41 (2AZ-FE)</a>	R13	<a href="#">45</a>
F8	<a href="#">43</a>	J12	<a href="#">44</a>	V15	<a href="#">45</a>

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	<a href="#">29</a>	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	<a href="#">29</a>	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1F		
1H		
1J	<a href="#">28</a>	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2C	<a href="#">27</a>	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	<a href="#">30</a>	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3D		
3F		
3G	<a href="#">31</a>	

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	<a href="#">52</a>	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA2		
IK2	<a href="#">54</a>	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL2	<a href="#">54</a>	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
EH	<a href="#">48 (3MZ-FE)</a>	Under the Left Headlight
	<a href="#">50 (2AZ-FE)</a>	
IA	<a href="#">52</a>	Left Cowl Side Panel
IB	<a href="#">52</a>	Right Instrument Panel Brace
BC	<a href="#">56</a>	Left Side of Rear Cross Member

