


# Rear Window Defogger

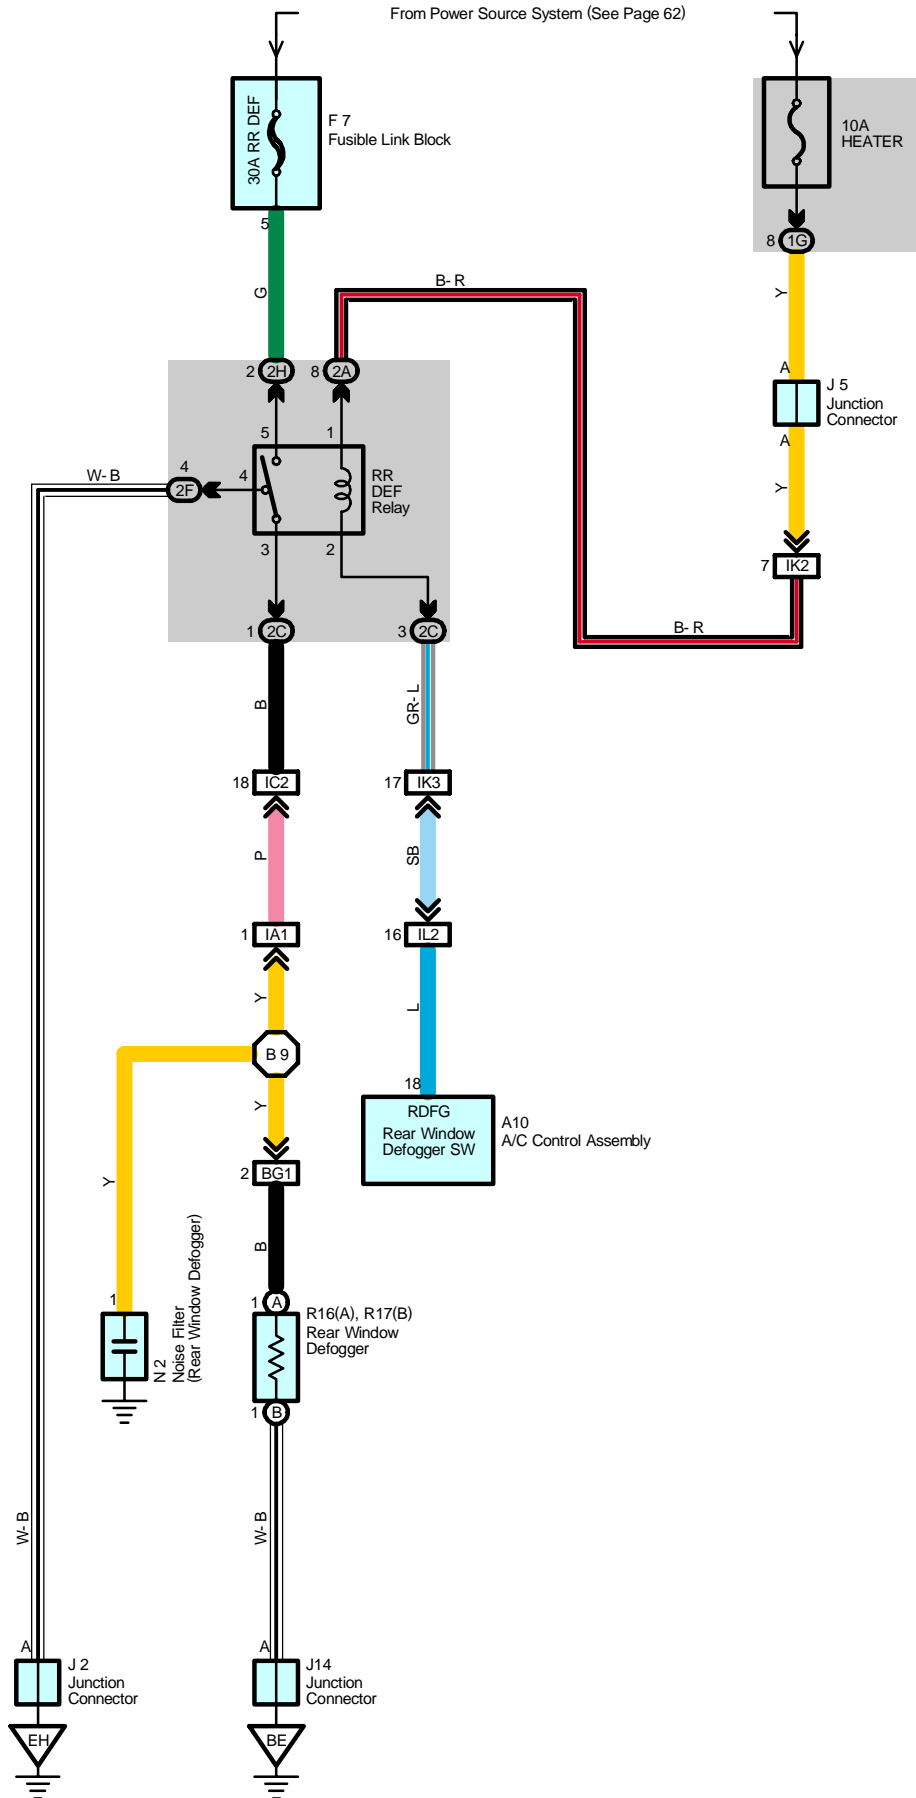

## Service Hints

### RR DEF Relay

5-3 : Closed with the ignition SW at ON position and rear window defogger SW on

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A10	42	J2	41 (2AZ-FE)	R16	B 45
F7	38 (3MZ-FE)	J5	43	R17	A 45
	40 (2AZ-FE)	J14	44		
J2	39 (3MZ-FE)	N2	44		

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		
2F		
2H		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IC2	52	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IK2	54	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK3		
IL2	54	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
BG1	56	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)

## : GROUND POINTS

Code	See Page	Ground Points Location
EH	48 (3MZ-FE)	Under the Left Headlight
	50 (2AZ-FE)	
BE	56	Left Side of Back Door

## : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B9	56	Floor No.2 Wire			