


Mirror Heater and Front Deicer

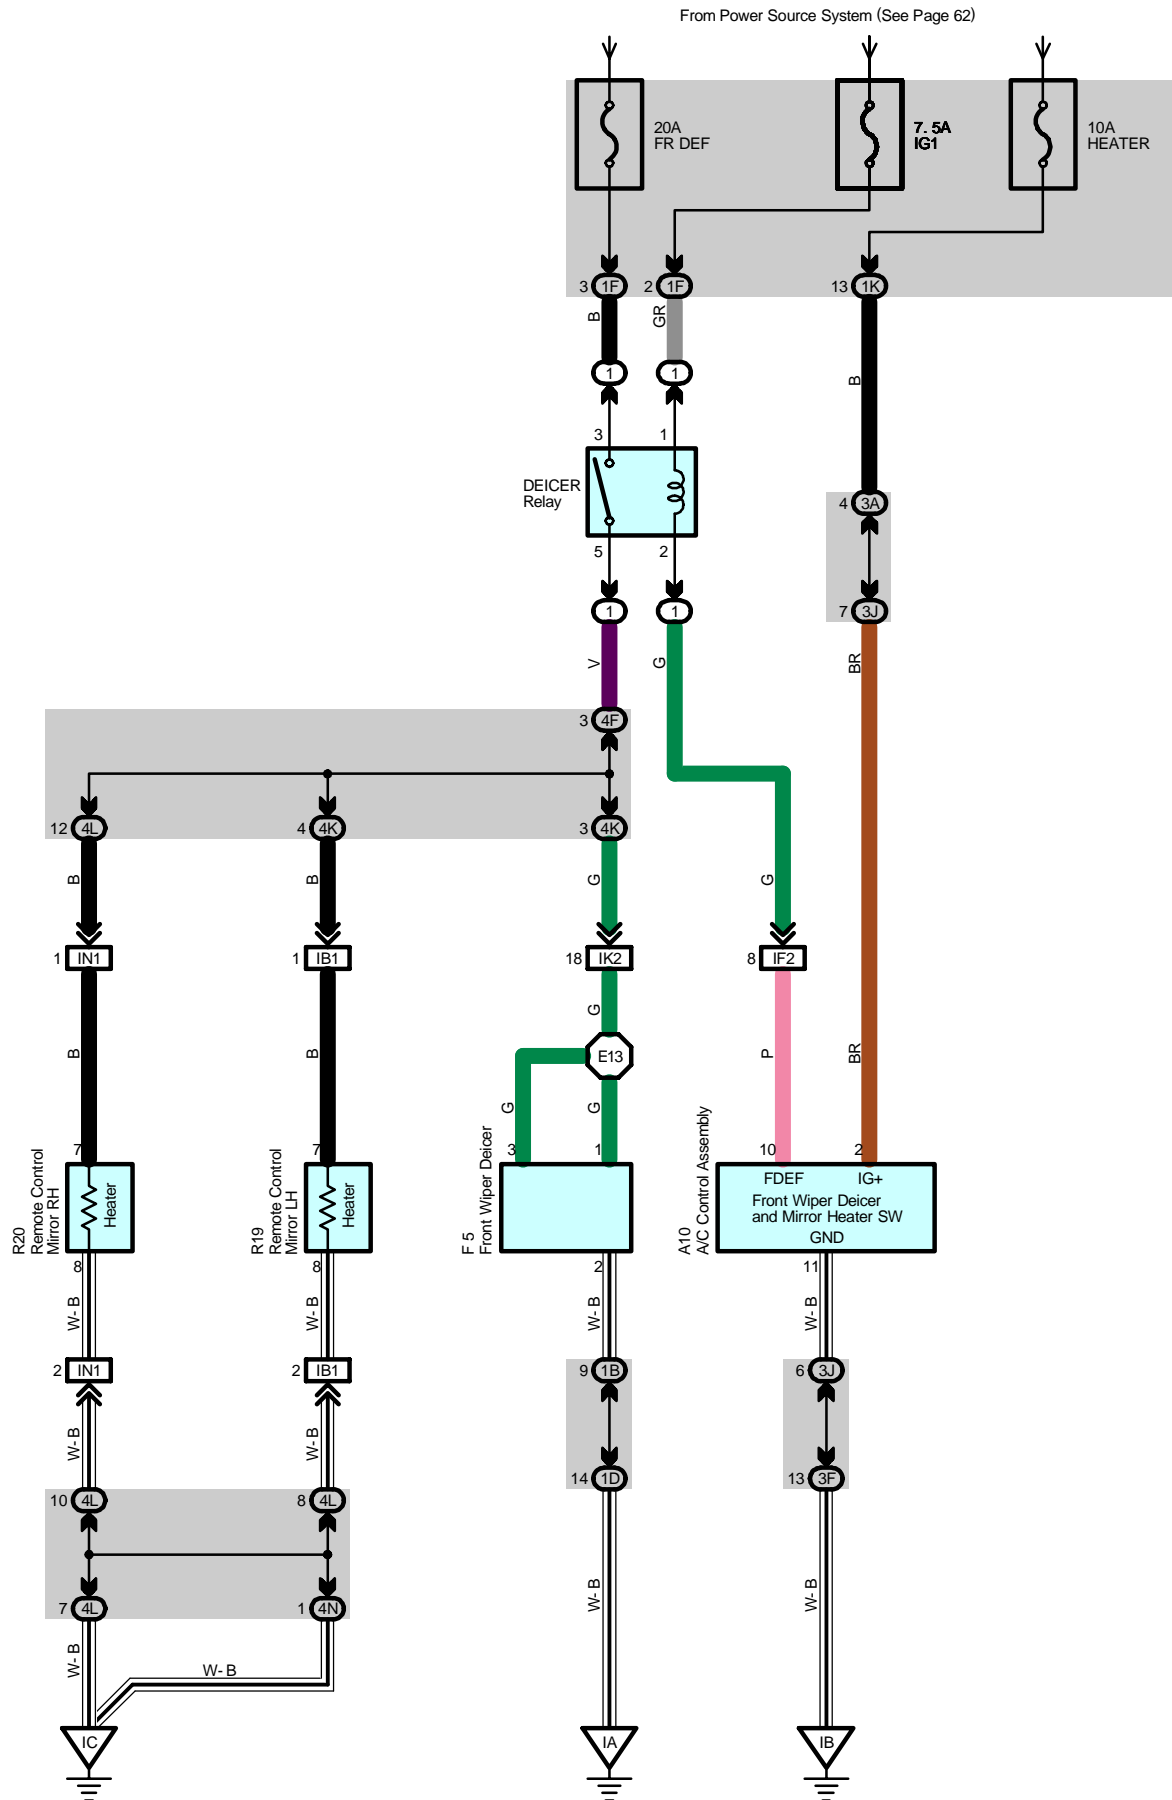

Service Hints

A10 A/C Control Assembly

2-Ground : Approx. 12 volts with the ignition SW at ON position

11-Ground : Always continuity

DEICER Relay

5-3 : Closed with the ignition SW at ON position and front wiper deicer and mirror heater SW at ON position

○ : PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|-------------|------|-------------|------|----------|
| A10 | 42 | F5 | 40 (2AZ-FE) | R20 | 45 |
| F5 | 38 (3MZ-FE) | R19 | 45 | | |

○ : RELAY BLOCKS

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|-------------------------------------|
| 1 | 24 | R/B No.1 (Lower Finish Panel) |

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|---|
| 1B | 29 | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel) |
| 1D | 29 | Cowl Wire and Instrument Panel J/B (Lower Finish Panel) |
| 1F | | |
| 1K | 28 | Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel) |
| 3A | 30 | Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center) |
| 3F | | |
| 3J | 31 | |
| 4F | 33 | Cowl Wire and Passenger Side J/B (Right Side of Grove Box) |
| 4K | | |
| 4L | 32 | |
| 4N | | |

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|--|
| IB1 | 52 | Front Door LH Wire and Cowl Wire (Left Kick Panel) |
| IF2 | 52 | Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B) |
| IK2 | 54 | Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel) |
| IN1 | 54 | Front Door RH Wire and Cowl Wire (Right Kick Panel) |

▽ : GROUND POINTS

| Code | See Page | Ground Points Location |
|------|----------|------------------------------|
| IA | 52 | Left Cowl Side Panel |
| IB | 52 | Right Instrument Panel Brace |
| IC | 52 | Right Cowl Side Panel |

○ : SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|-------------|---------------------------------|------|-------------|---------------------------------|
| E13 | 48 (3MZ-FE) | Engine Room Main Wire | E13 | 50 (2AZ-FE) | Engine Room Main Wire |