



Service Hints

O5 Overhead J/B

9, 10-Ground : Approx. 12 volts with ignition SW at ON or ST position

1, 2-Ground : Always continuity

I17 Inner Mirror

7-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I17	44	O5	44		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
4D	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4L	32	
4M		
4N		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	52	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)

: GROUND POINTS

Code	See Page	Ground Points Location
IA	52	Left Cowl Side Panel
IC	52	Right Cowl Side Panel