




Automatic Air Conditioning

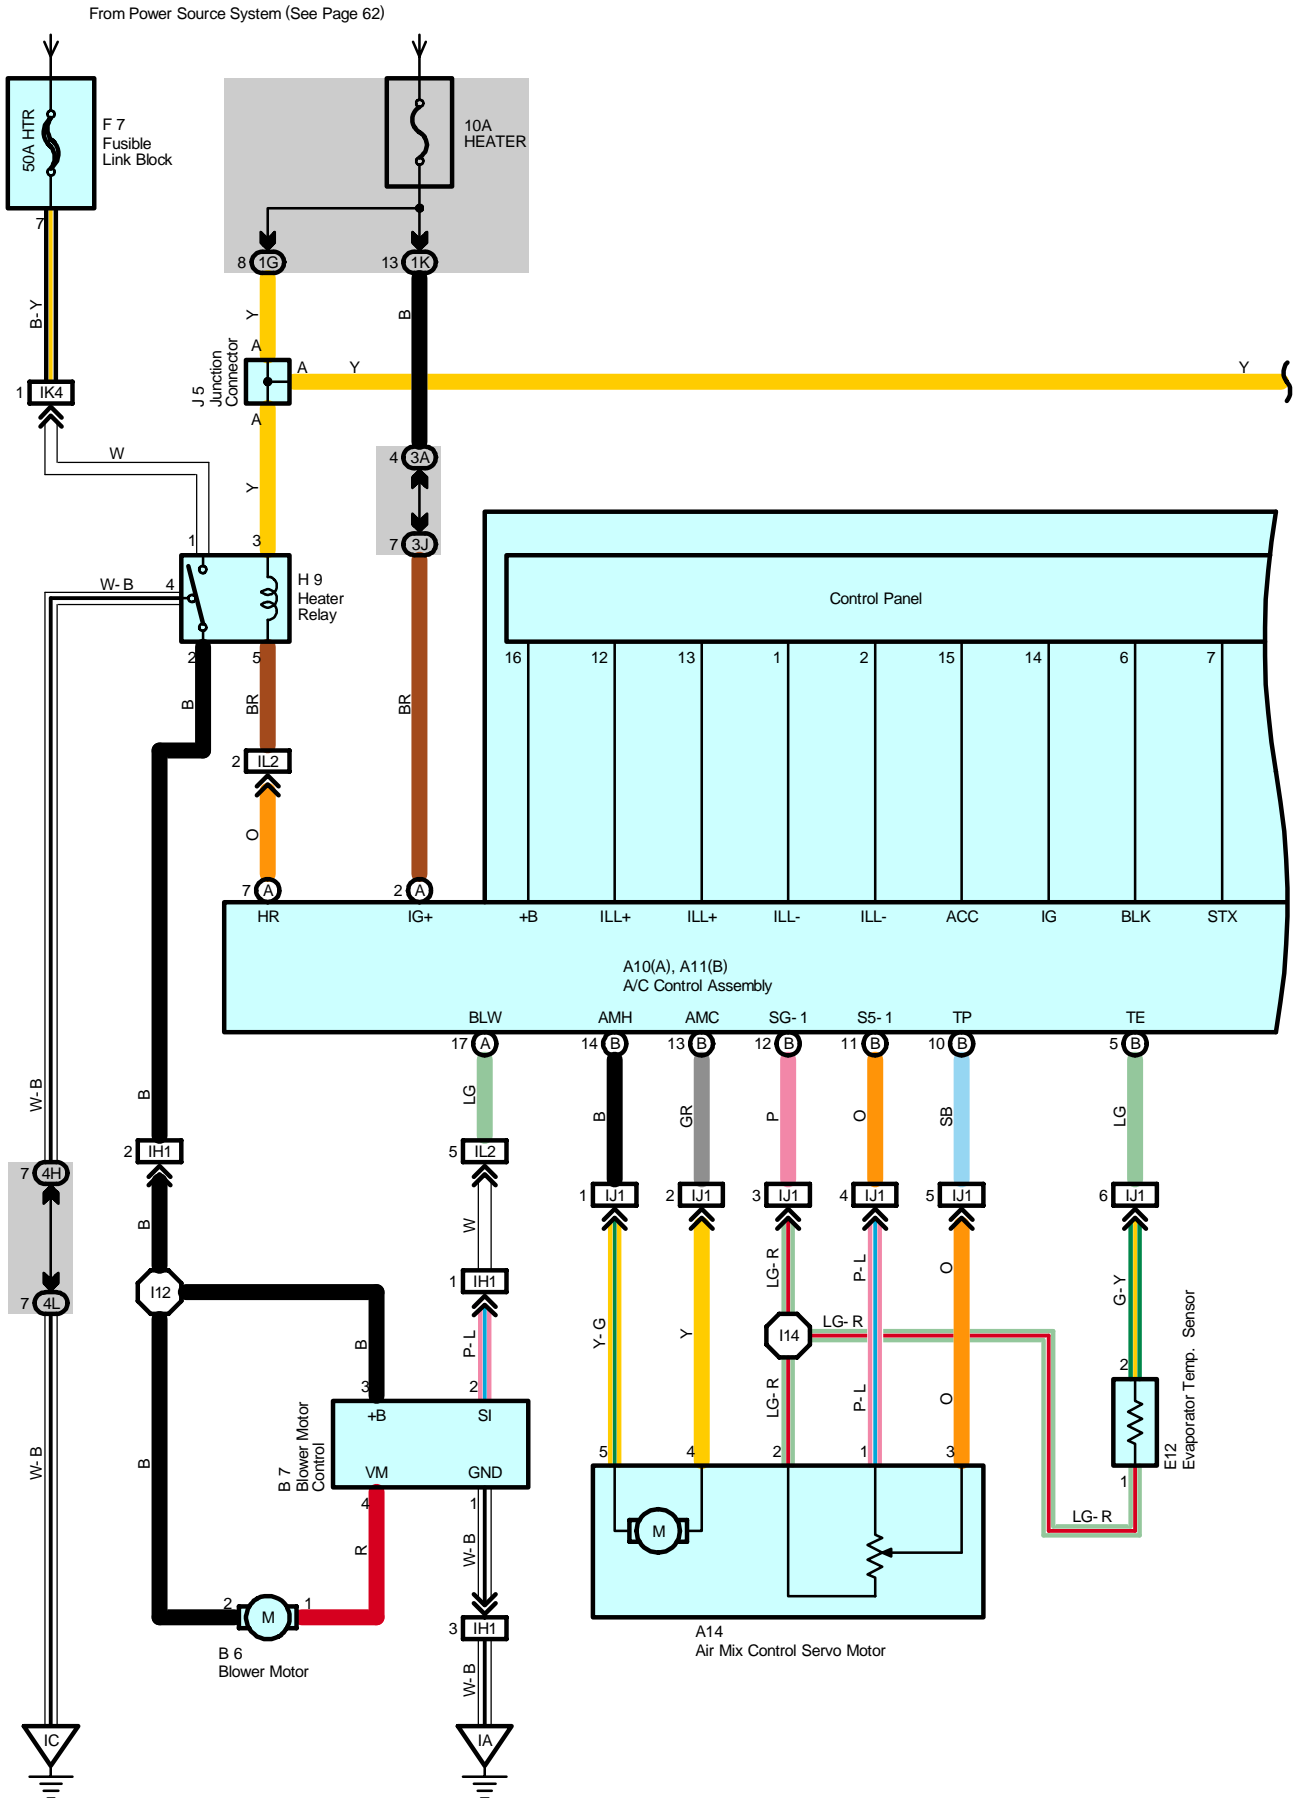

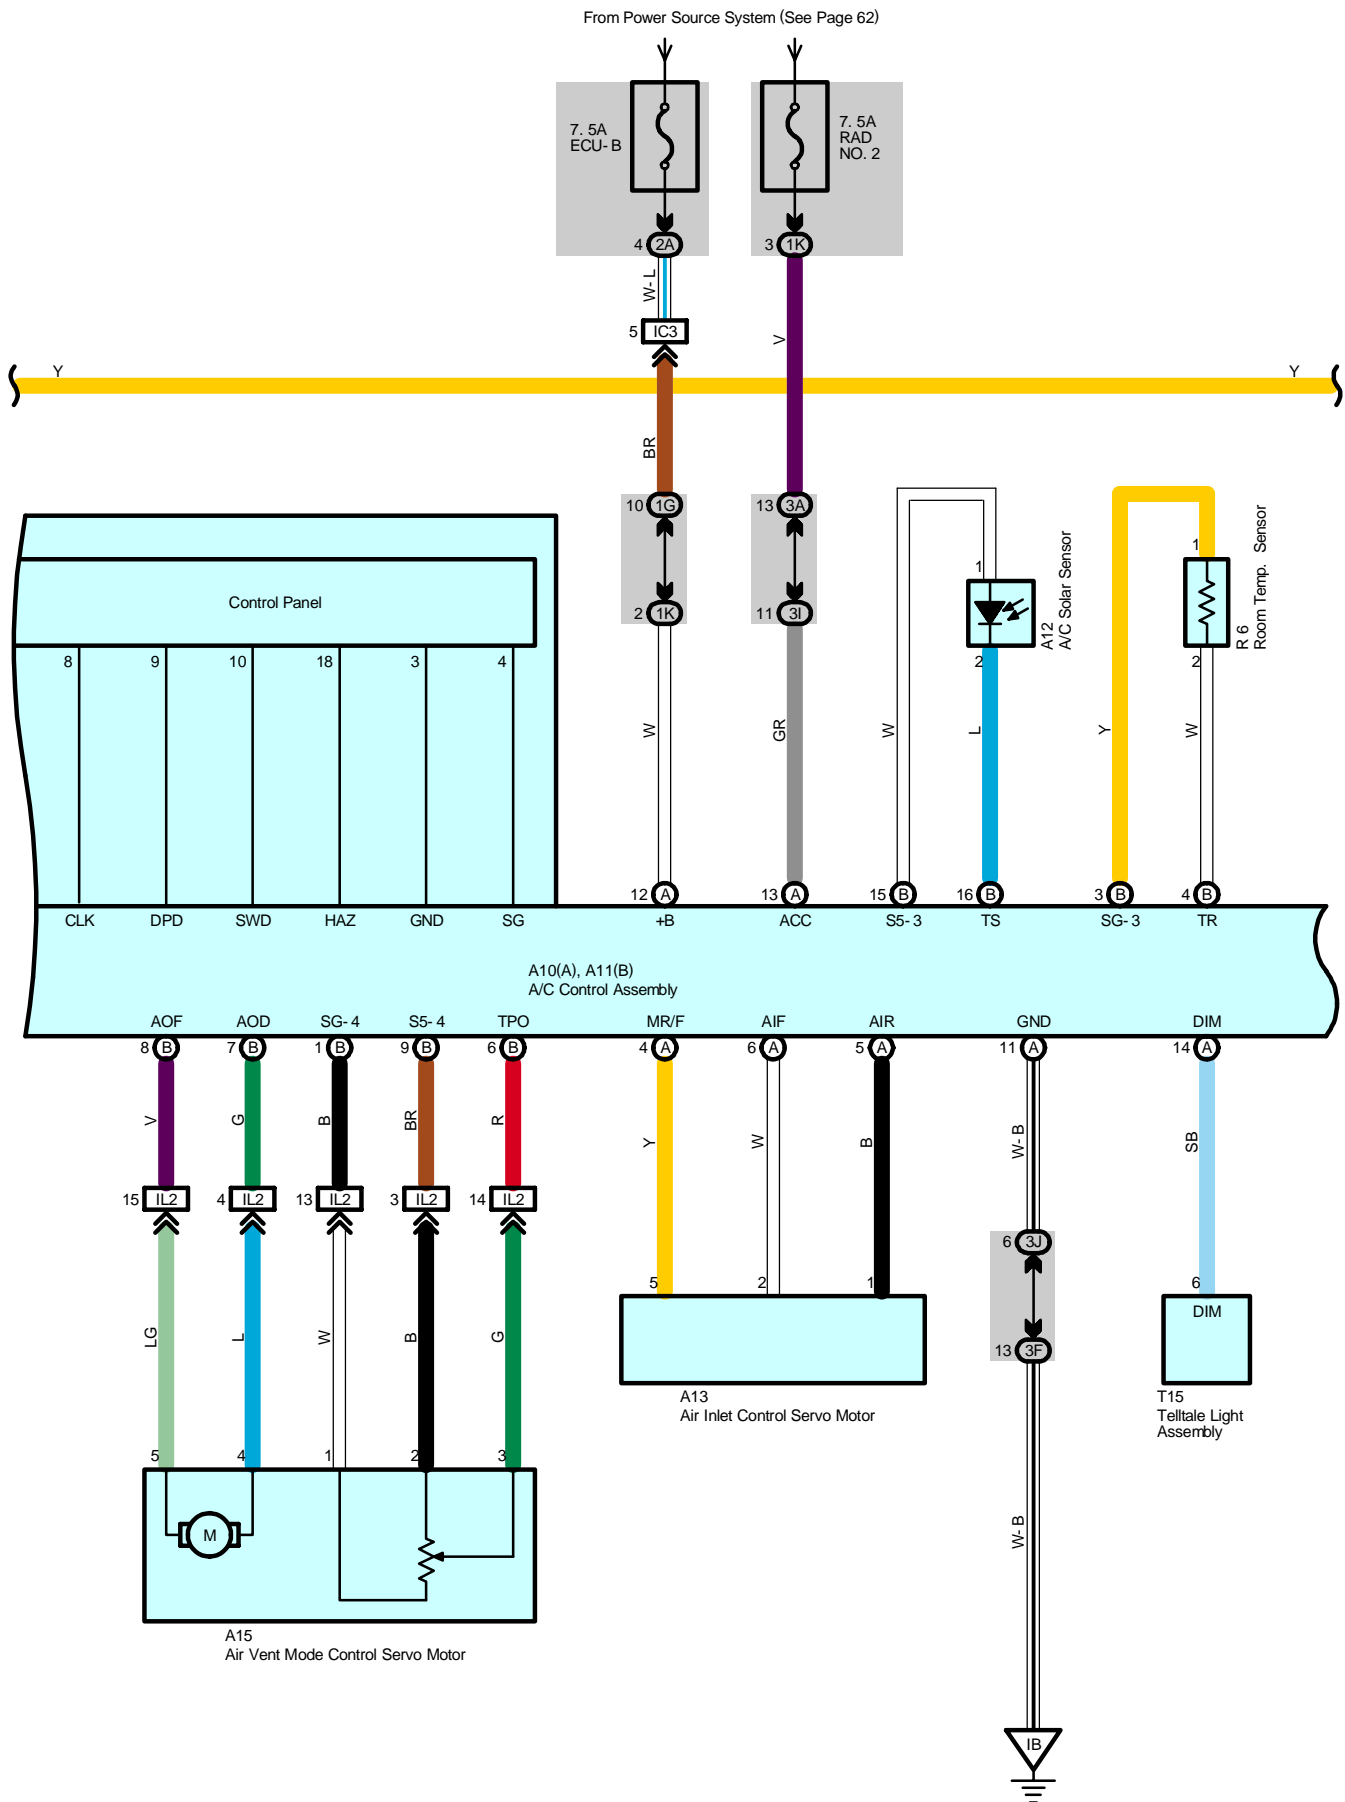

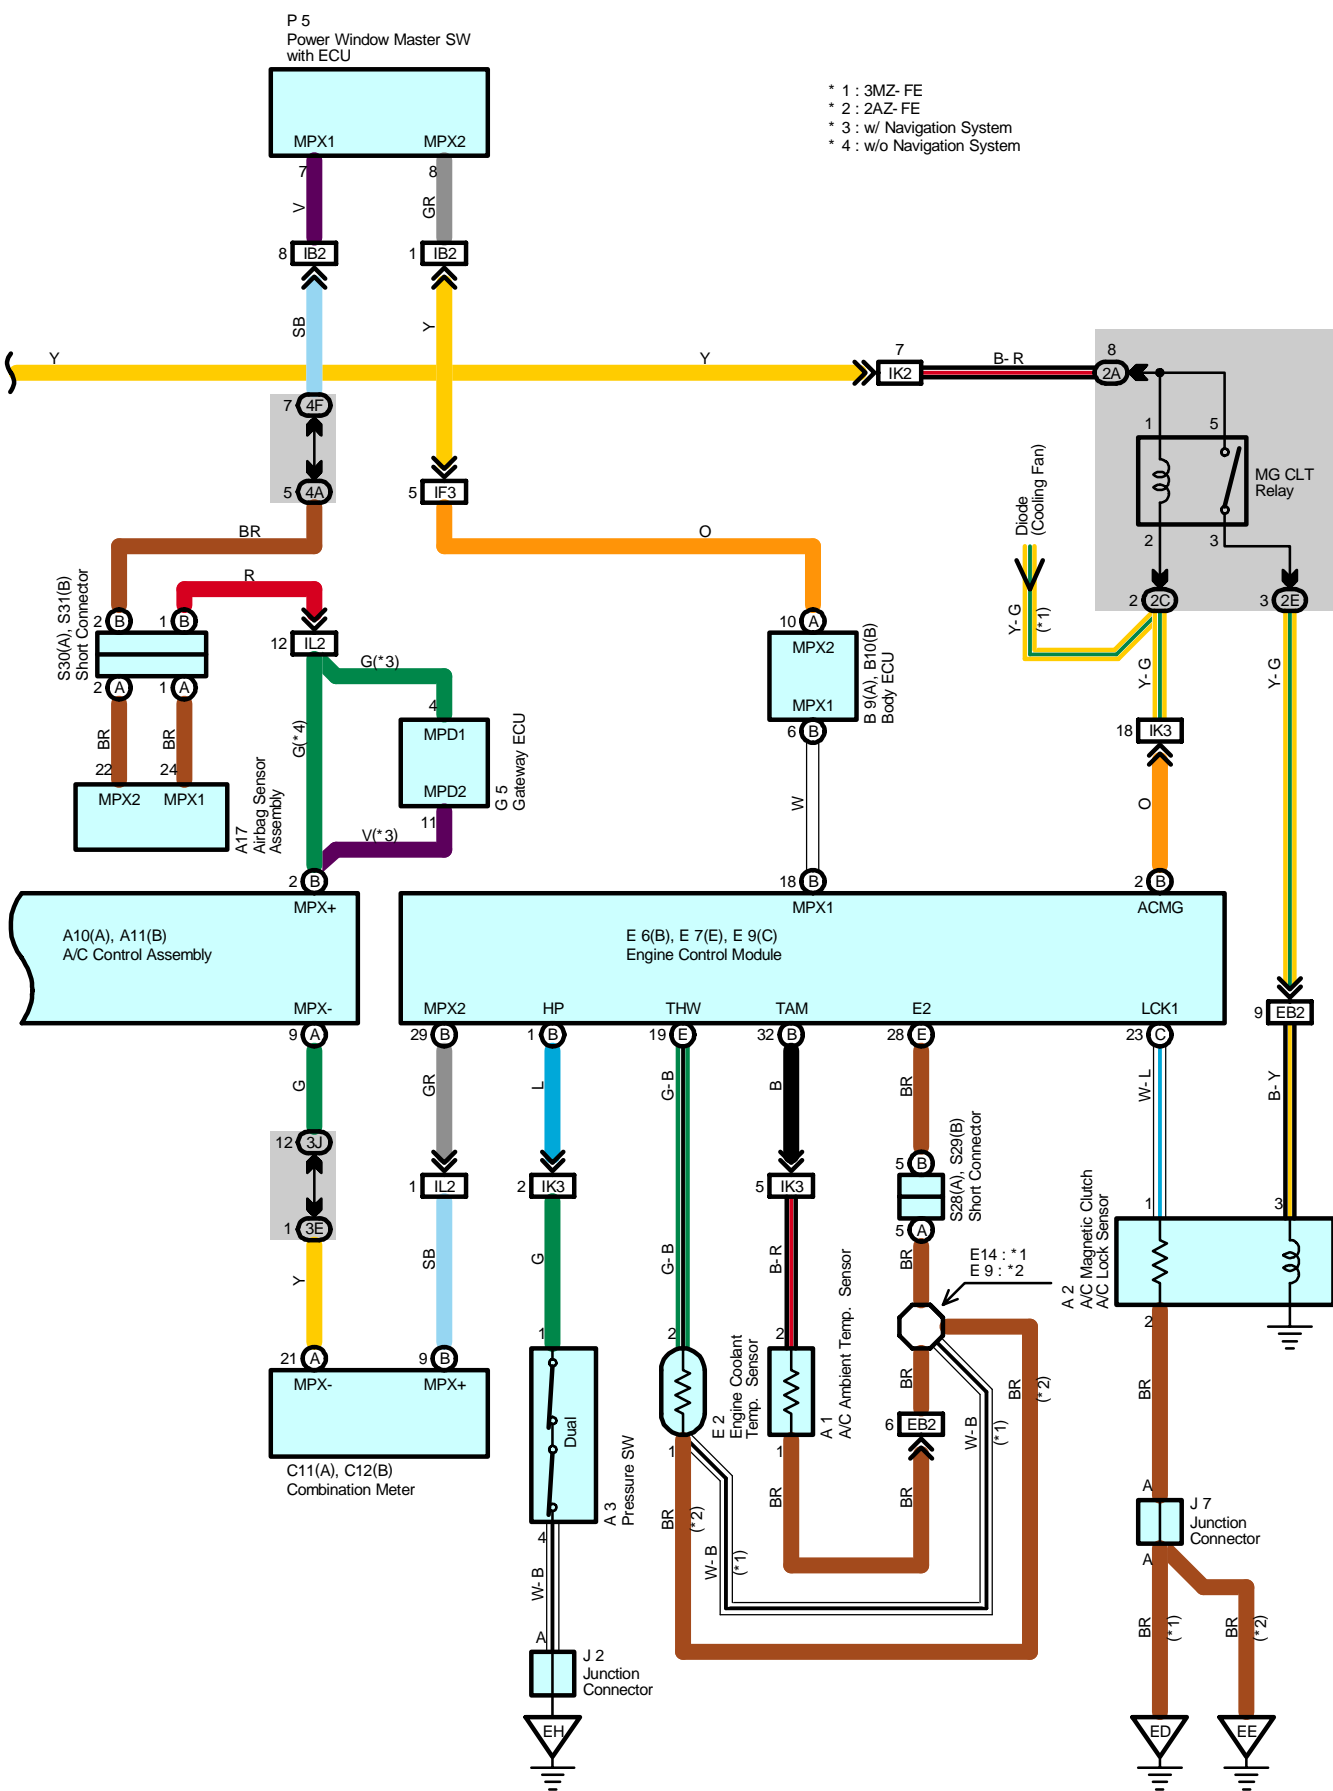

Service Hints

A3 Pressure SW

1-4 : Open with the pressure less than 2.0 kgf/cm² (28 psi, 196 kpa) or above 32 kgf/cm² (455 psi, 3138 kpa)

A10 (A) A/C Control Assembly

(A)12-Ground : Always approx. 12 volts

(A) 2-Ground : Approx. 12 volts with the ignition SW at ON position

(A)11-Ground : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A1	38 (3MZ-FE) 40 (2AZ-FE)	B7	42	H9	43
A2	38 (3MZ-FE) 40 (2AZ-FE)	B9	A	J2	39 (3MZ-FE) 41 (2AZ-FE)
A3	38 (3MZ-FE) 40 (2AZ-FE)	B10	B	J5	43
A10	A	C11	A	J7	43
A11	B	C12	B	P5	44
A12	42	E2	38 (3MZ-FE) 40 (2AZ-FE)	R6	43
A13	42	E6	B	S28	A
A14	42	E7	E	S29	B
A15	42	E9	C	S30	A
A17	42	E12	42	S31	B
B6	42	F7	38 (3MZ-FE) 40 (2AZ-FE)	T15	43
		G5	43		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		
2E		
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3E		
3F		
3I	31	
3J		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4F		
4H		
4L	32	

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	48 (3MZ-FE) 50 (2AZ-FE)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B)
IB2	52	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC3	52	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IF3	52	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IH1	54	Cowl Wire and A/C Sub No.2 Wire (Upper Portion of Right Instrument Panel Brace)
IJ1	54	Instrument Panel Wire and A/C Sub No.3 Wire (Upper Portion of Right Instrument Panel Brace)
IK2	54	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK3		
IK4		
IL2	54	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)

Automatic Air Conditioning



: GROUND POINTS

Code	See Page	Ground Points Location
ED	48 (3MZ-FE)	Rear Side of
EE	50 (2AZ-FE)	Intake Side of Cylinder Block
EH	48 (3MZ-FE)	Under the Left Headlight
	50 (2AZ-FE)	
IA	52	Left Cowl Side Panel
IB	52	Right Instrument Panel Brace
IC	52	Right Cowl Side Panel



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E9	50 (2AZ-FE)	Engine Wire	I12	54	A/C Sub No.2 Wire
E14	48 (3MZ-FE)		I14	54	A/C Sub No.3 Wire

