


VEHICLE POSITION MARK DEVIATES GREATLY

INSPECTION PROCEDURE

1 CHECK THE GPS MARK

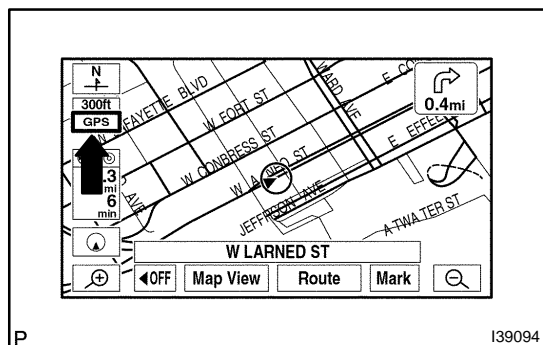

- (a) Check that the GPS mark is displayed.
OK: The GPS mark is displayed.


NG

GO TO "GPS MARK IS NOT DISPLAYED" IN THE FLOW CHART (SEE PAGE 05-1818)

OK

2 NAVIGATION CHECK MODE(VEHICLE SENSORS)

- (a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1765).

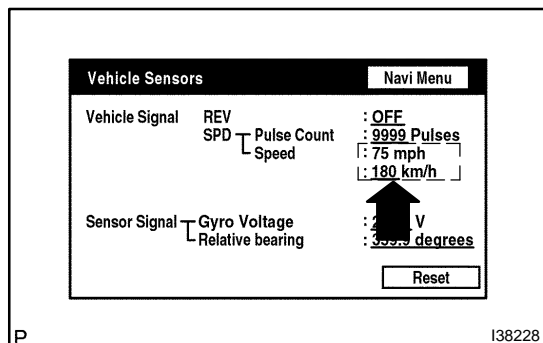

- (b) While driving, compare the "SPD" indicator to the reading on the speedometer. Check that these readings are almost the same.

OK: The readings are almost the same.


NG

GO TO "SPEED SIGNAL CIRCUIT (NAVIGATION ECU - COMBINATION METER ASSY)" IN THE FLOW CHART (SEE PAGE 05-1838)

OK

3

NAVIGATION CHECK MODE(VEHICLE SENSORS)

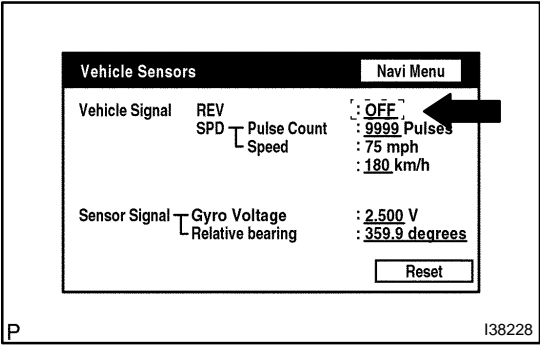

(a) Move the shift lever to the R or P position.

Standard:

Shift lever	Display
P	OFF
R	ON

HINT:

The display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

NG

GO TO "REVERSE SIGNAL CIRCUIT" IN THE FLOW CHART (SEE PAGE 05-1844)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1778)