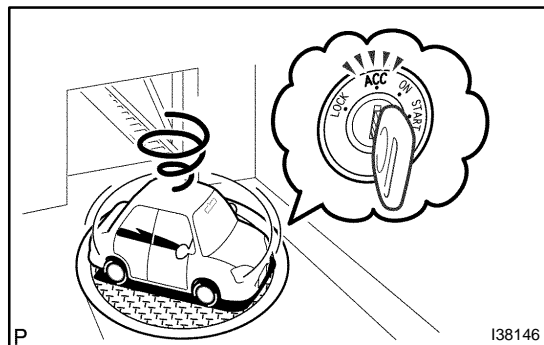


CURSOR OR MAP ROTATES WHEN VEHICLE IS STOPPED**INSPECTION PROCEDURE****1 CHECK CONDITION**

- (a) Check with the customer if the vehicle has been turned by a turn-table at parking.

OK: The vehicle has not been turned by a turntable.

HINT:

If the ignition switch is turned to the ACC or ON position while the vehicle is being turned by a turntable, the system may store the angular velocity at this time. For this reason, the vehicle position cursor could deviate.

NG

**TURN IGNITION SWITCH TO ON POSITION
WHEN VEHICLE IS COMPLETELY STOPPED**

OK

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1778)**