


GYRO ERROR

INSPECTION PROCEDURE

1 NAVIGATION CHECK MODE(VEHICLE SENSORS)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1765).

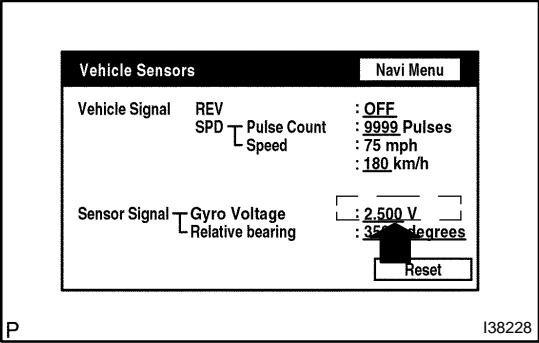

(b) Check the gyro voltage.
Standard: 0.1 to 4.5 V

NG REPLACE NAVIGATION ECU
(SEE PAGE 67-9)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART
(SEE PAGE 05-1791)