

PANEL SWITCH DOES NOT FUNCTION

INSPECTION PROCEDURE

1 CHECK THE PANEL SWITCH

- (a) Check for foreign matter around the switch that might prevent operation.

OK: No foreign matter is found.


NG

REMOVE ANY FOREIGN MATTER FOUND

OK

2 DISPLAY CHECK MODE(PANEL SWITCH CHECK MODE)

- (a) Enter the "Display Check" mode (Panel Switch Check Mode) (see page [05-1762](#)).

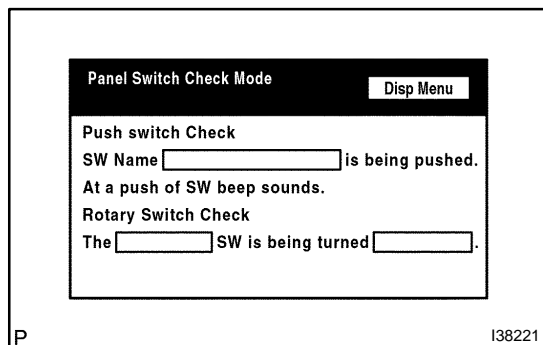

- (b) Operate the abnormal switch and check if the switch name and status are correctly displayed.

OK: The switch name and status are correctly displayed as operated.

OK

**REPLACE MULTI-DISPLAY
(SEE PAGE [67-8](#))**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE [05-1778](#))**