



# NAVIGATION CHECK MODE (VEHICLE SENSORS)

HINT:


- This mode checks the vehicle signal status to the navigation ECU.
  - Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.
1. Enter diagnostic mode (see page 05-1784 ).

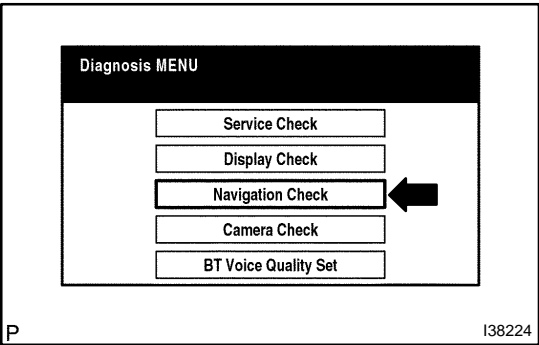

2. Select "Navigation Check" from the "Diagnosis MENU" screen.

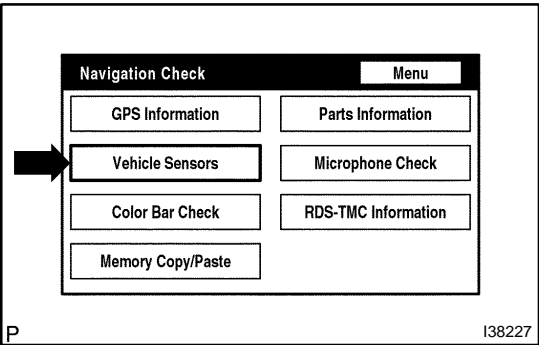

3. Select "Vehicle Sensors" from the "Navigation Check" screen.

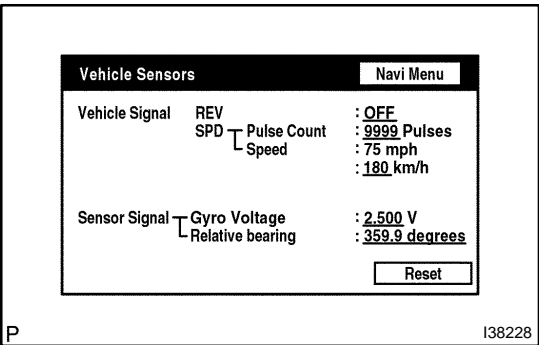

4. Check all the signals and sensors when vehicle signal information is displayed.

HINT:  
This screen is updated once per second when input signals to the vehicle are changed.