


DTC	P2716	PRESSURE CONTROL SOLENOID "D" ELECTRICAL (SHIFT SOLENOID SLT)
------------	--------------	--

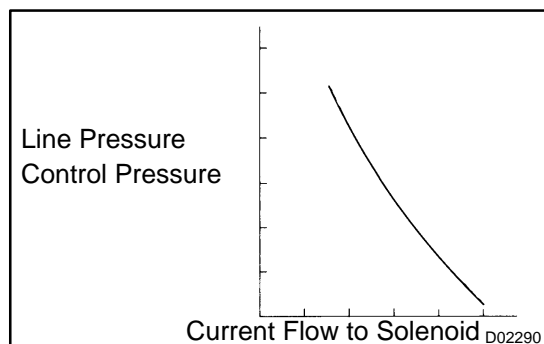


CIRCUIT DESCRIPTION

The linear solenoid valve (SLT) controls the transmission line pressure for smooth transmission operation based on signals from the throttle position sensor and the vehicle speed sensor. The ECM adjusts the duty cycle of the SLT solenoid valve to control hydraulic line pressure coming from the primary regulator valve. Appropriate line pressure assures smooth shifting with varying engine outputs.

(*): Duty Ratio

The duty ratio is the ratio of the period of continuity in one cycle. For example, if A is the period of continuity in one cycle, and B is the period of non-continuity, then

$$\text{Duty Ratio} = A / (A + B) \times 100 (\%)$$

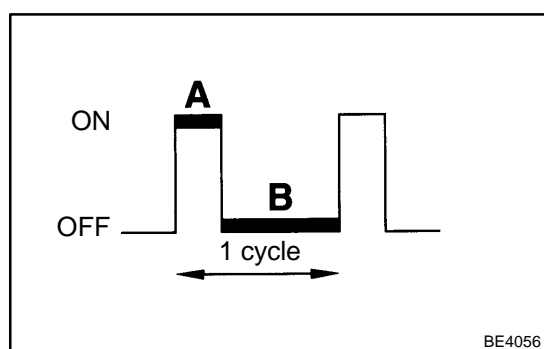

DTC No.	DTC Detection Condition	Trouble Area
P2716	Condition (a) or (b) below is detected 1 sec. or more: (1-trip detection logic) (a) SLT- terminal: 0V (b) SLT- terminal: 12V	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SLT circuit • Shift solenoid valve SLT • ECM

MONITOR DESCRIPTION

When an open or short in the linear solenoid valve (SLT) circuit is detected, the ECM interprets this as a fault. The ECM will turn ON the MIL and store the DTC.

MONITOR STRATEGY

Related DTCs	P2716: Shift solenoid valve SLT/Range check
Required sensors/Components	Shift solenoid valve SLT
Frequency of operation	Continuous
Duration	1 sec.
MIL operation	Immediate
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

The monitor will run whenever this DTC is not present.	See page 05-895
Battery voltage	11 V or more
Solenoid current cut status	Not cut
CPU commanded duty ratio to SLT	19% or more
Ignition switch	ON
Starter	OFF


TYPICAL MALFUNCTION THRESHOLDS

Solenoid status from IC	Fail (Open or short)
-------------------------	----------------------

COMPONENT OPERATING RANGE


Shift solenoid valve SLT	Resistance: 5.0 to 5.6 Ω at 20°C (68°F)
--------------------------	--

WIRING DIAGRAM

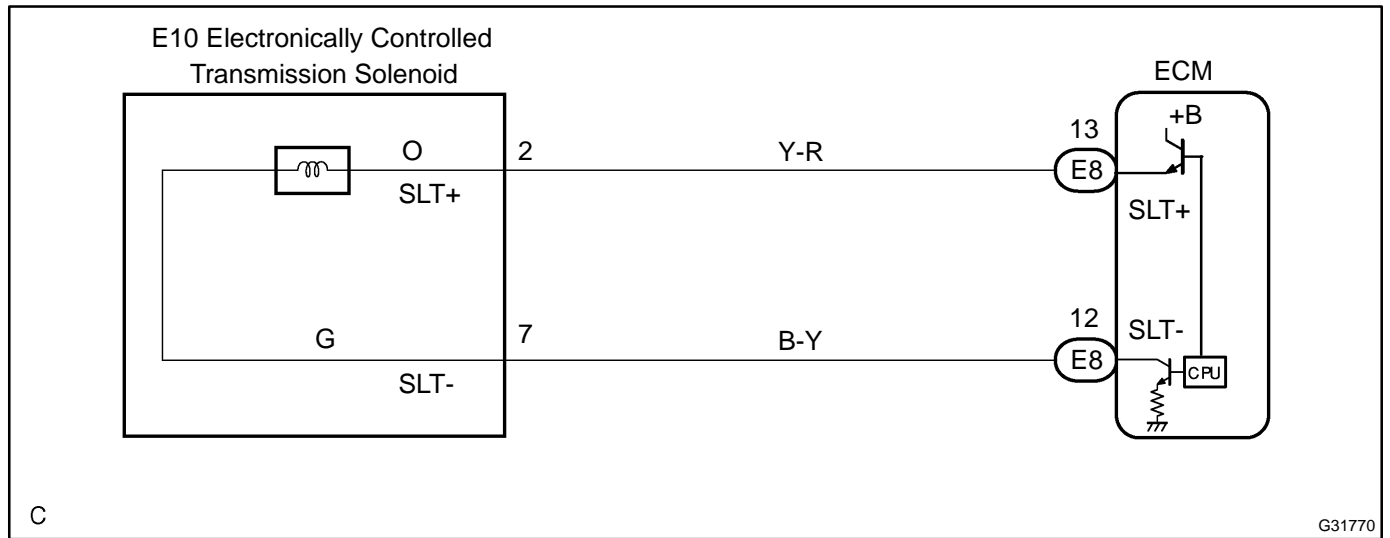

INSPECTION PROCEDURE

1	INSPECT TRANSMISSION WIRE(SLT)
---	--------------------------------

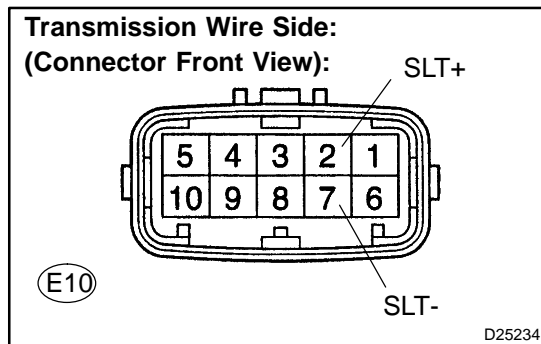

- Disconnect the transmission wire connector from the transaxle.
- Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Specified Condition 20 °C (68 °F)
2 (SLT+) - 7 (SLT-)	5.0 to 5.6 Ω

- Measure the resistance according to the value(s) in the table below.

Standard (Check for short):


Tester Connection	Specified Condition
2 (SLT+) - Body ground	10 k Ω or higher
7 (SLT-) - Body ground	↑

NG

Go to step 3

OK

2 CHECK HARNESS AND CONNECTOR(TRANSMISSION WIRE - ECM)

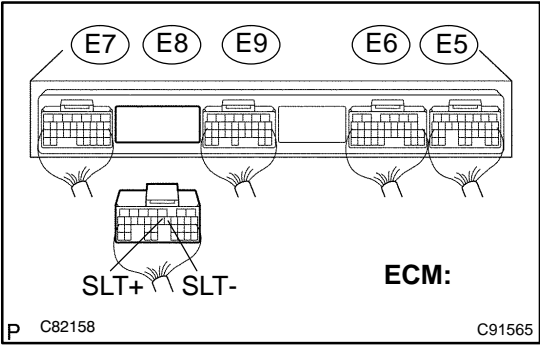

- (a) Connect the transmission wire connector to the transaxle.
- (b) Disconnect the ECM connector.
- (c) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Specified Condition 20 °C (68 °F)
E8 - 13 (SLT+) - E8 - 12 (SLT-)	5.0 to 5.6 Ω

- (d) Measure the resistance according to the value(s) in the table below.

Standard (Check for short):

Tester Connection	Specified Condition
E8 - 13 (SLT+) - Body ground	10 kΩ or higher
E8 - 12 (SLT-) - Body ground	↑

NG


REPAIR OR REPLACE HARNESS OR
CONNECTOR (SEE PAGE 01-36)

OK

REPLACE ECM (SEE PAGE 10-9)

3 INSPECT SHIFT SOLENOID VALVE(SLT)

Shift Solenoid Valve SLT:

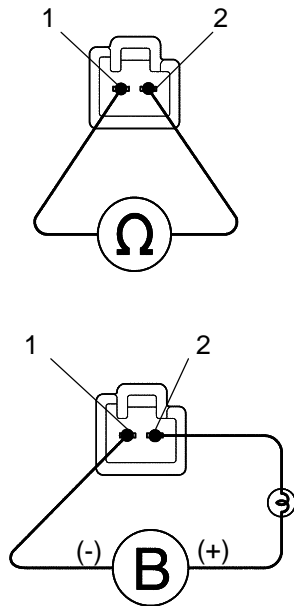

D25466

- Remove the shift solenoid valve (SLT).
- Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Specified Condition 20 °C (68 °F)
1 - 2	5.0 to 5.6 Ω

- Connect the positive (+) lead with a 21 W bulb to terminal 2 and the negative (-) lead to terminal 1 of the solenoid valve connector, then check the movement of the valve.

OK:

The solenoid makes an operating noise.

NG

REPLACE SHIFT SOLENOID VALVE(SLT)

OK

REPAIR OR REPLACE TRANSMISSION WIRE (SEE PAGE 40-34)