


INTAKE AIR CONTROL SYSTEM (3MZ-FE)

ON-VEHICLE INSPECTION

1307N-02

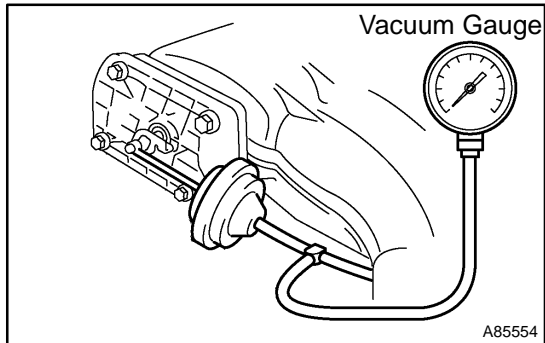

1. INSPECT INTAKE AIR CONTROL SYSTEM

- Using a 3-way connector, connect a vacuum gauge to the actuator hose.
- Connect the hand-held tester to the DLC3.
- Start the engine.
- On the hand-held tester, enter the ACTIVE TEST mode.

Standard:

Switch Condition	Vacuum
VSV ON	Approx. 27.6 kPa (200 mmHg, 7.9 in.Hg)
VSV OFF	0 kPa (0 mmHg, 0 in.Hg)