

# WIPER RUBBER LH

## REPLACEMENT

660HQ-01

**HINT:**

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

**1. REMOVE FR WIPER BLADE LH**


- (a) Remove the front wiper blade LH from the front wiper arm LH.

**NOTICE:**

**Do not fold down the front wiper arm with the front wiper blade removed from it.**

**2. REMOVE WIPER RUBBER LH**


- (a) Remove the front wiper rubber LH from the front wiper blade.  
(b) Remove the 2 wiper rubber backing plates from the wiper rubber LH.

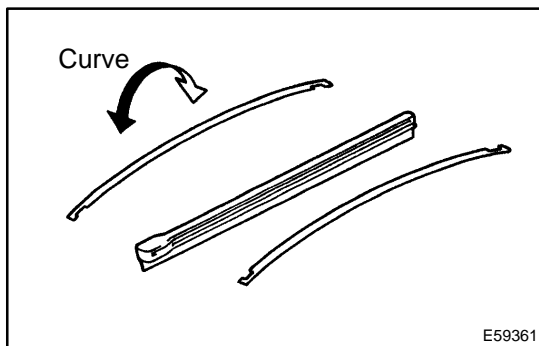**3. INSTALL WIPER RUBBER LH**

- (a) Install the 2 wiper rubber backing plates to the wiper rubber LH.

**NOTICE:**

**Install the backing plates in the correct direction.**

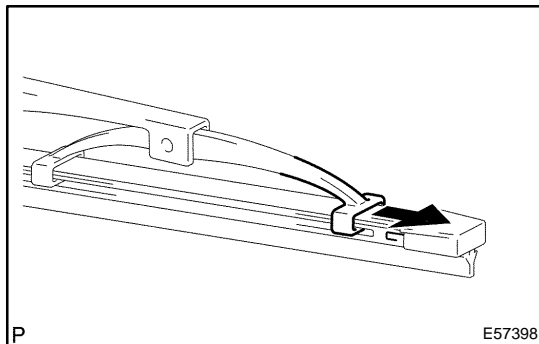

- (b) Install the wiper rubber LH so that the head part (larger side) of the wiper rubber faces the arm axle side.

**NOTICE:**

**Push the front wiper blade into the grooves of the wiper rubber to engage them completely.**