


CENTER STOP LAMP ASSY REPLACEMENT

6512I-01

HINT:

Installation is in the reverse order of removal.

- 1. REMOVE BACK WINDOW PANEL TRIM UPPER (SEE PAGE 75-20)**
- 2. REMOVE CENTER STOP LAMP SOCKET & WIRE**
 - (a) Disconnect the connector, and remove the center stop lamp socket & wire.

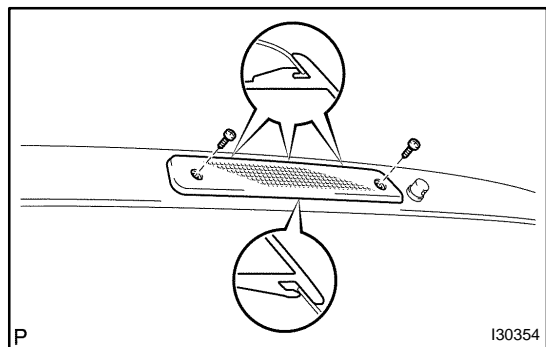

- 3. REMOVE CENTER STOP LAMP ASSY**
 - (a) Remove the 2 screws.
 - (b) Disengage the 4 claws, and remove the center stop lamp assy.

- 4. REMOVE CENTER STOP LAMP GASKET**
- 5. INSTALL CENTER STOP LAMP ASSY**
 - (a) Remove adhesive tape from the body.
 - (b) Wipe off stains with a cleaner.
 - (c) Install the center stop lamp assy with the 2 screws.