


FRONT SIDE MEMBER (ASSY)**REPLACEMENT**

With the front fender apron and front crossmember No.1 reinforcement removed.

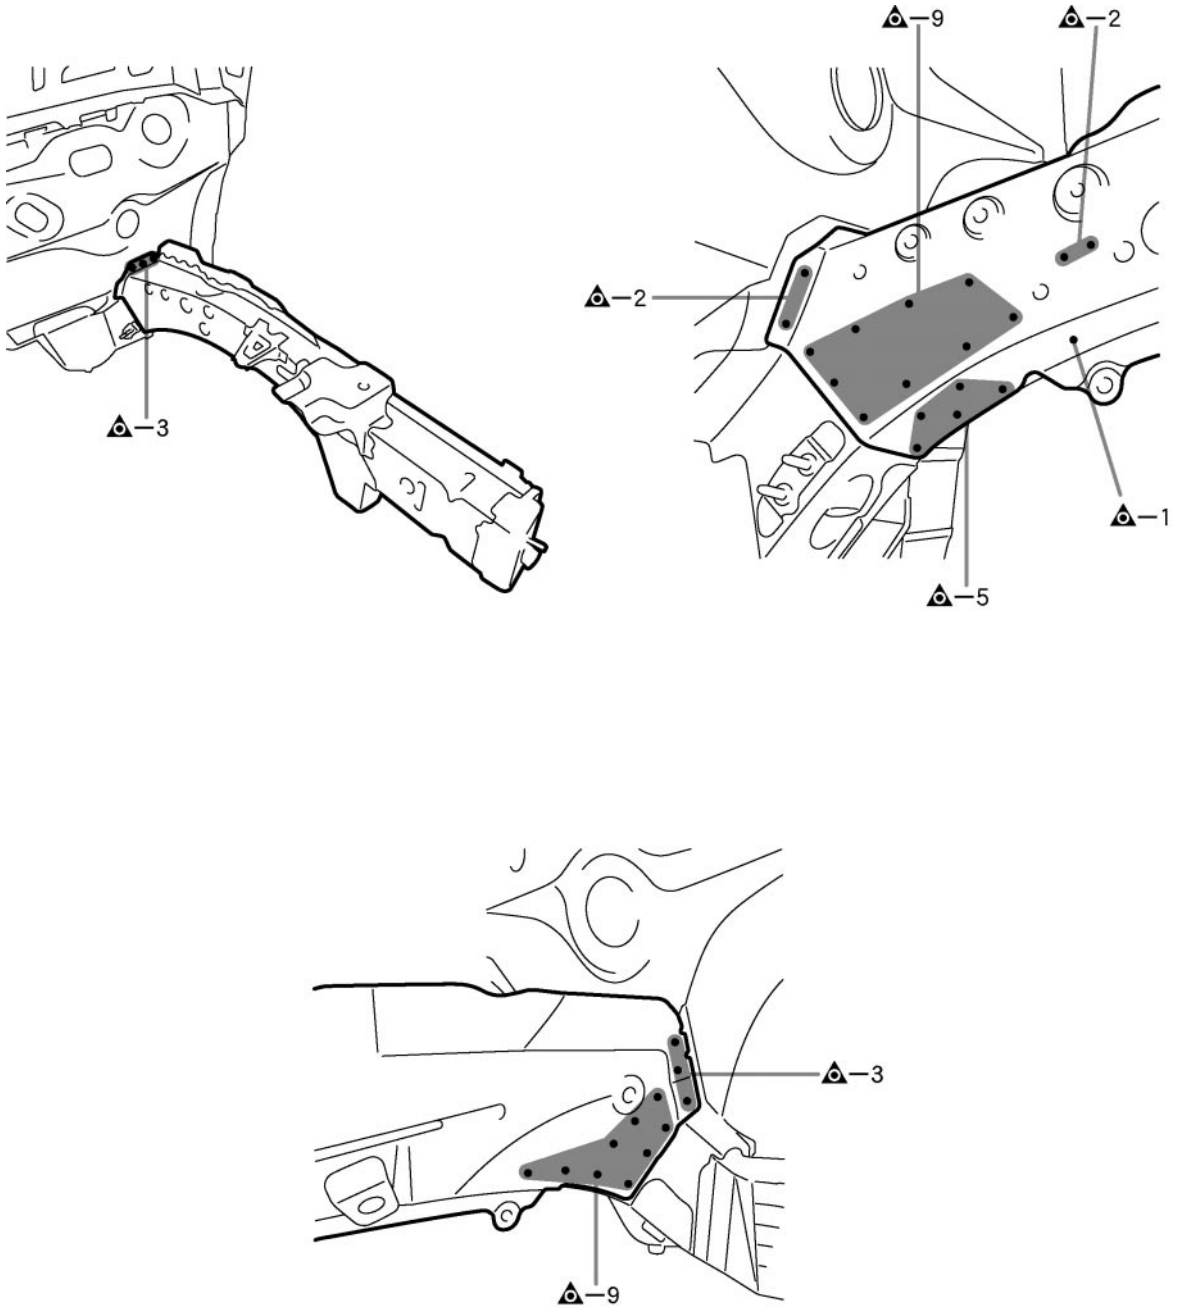


F16705A

REMOVAL

F16705

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

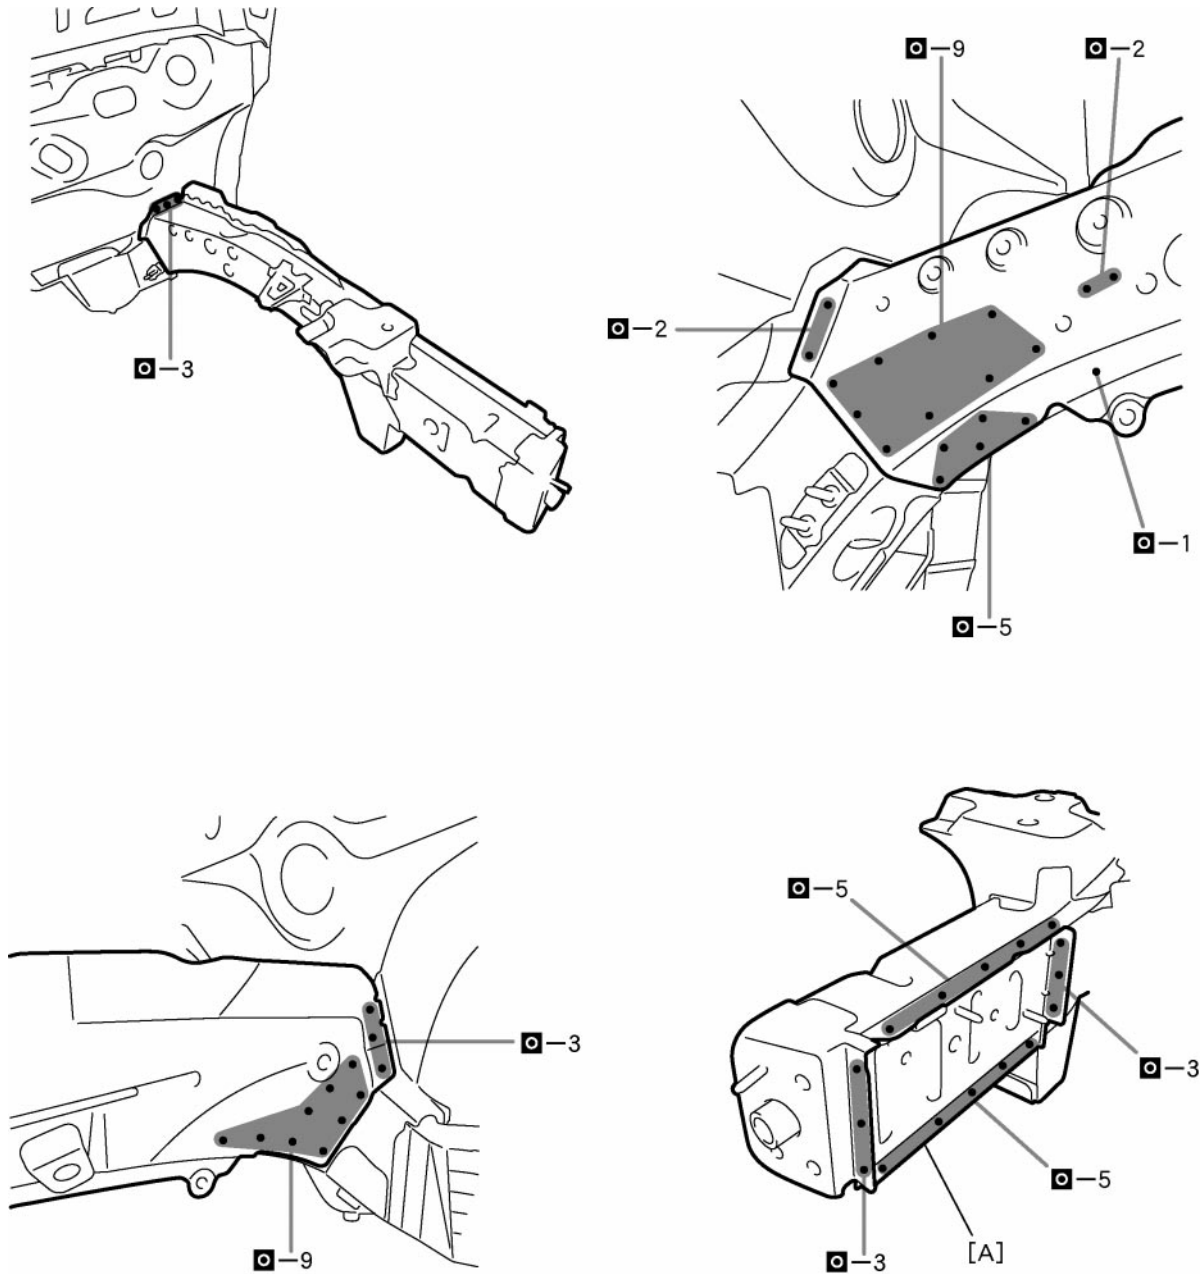

F16706

POINT

- 1 Make sure each measurement is correct, as this parts affects the front wheel alignment.

PART NAME

[A] Front Side Member Extension