



## LOCATION

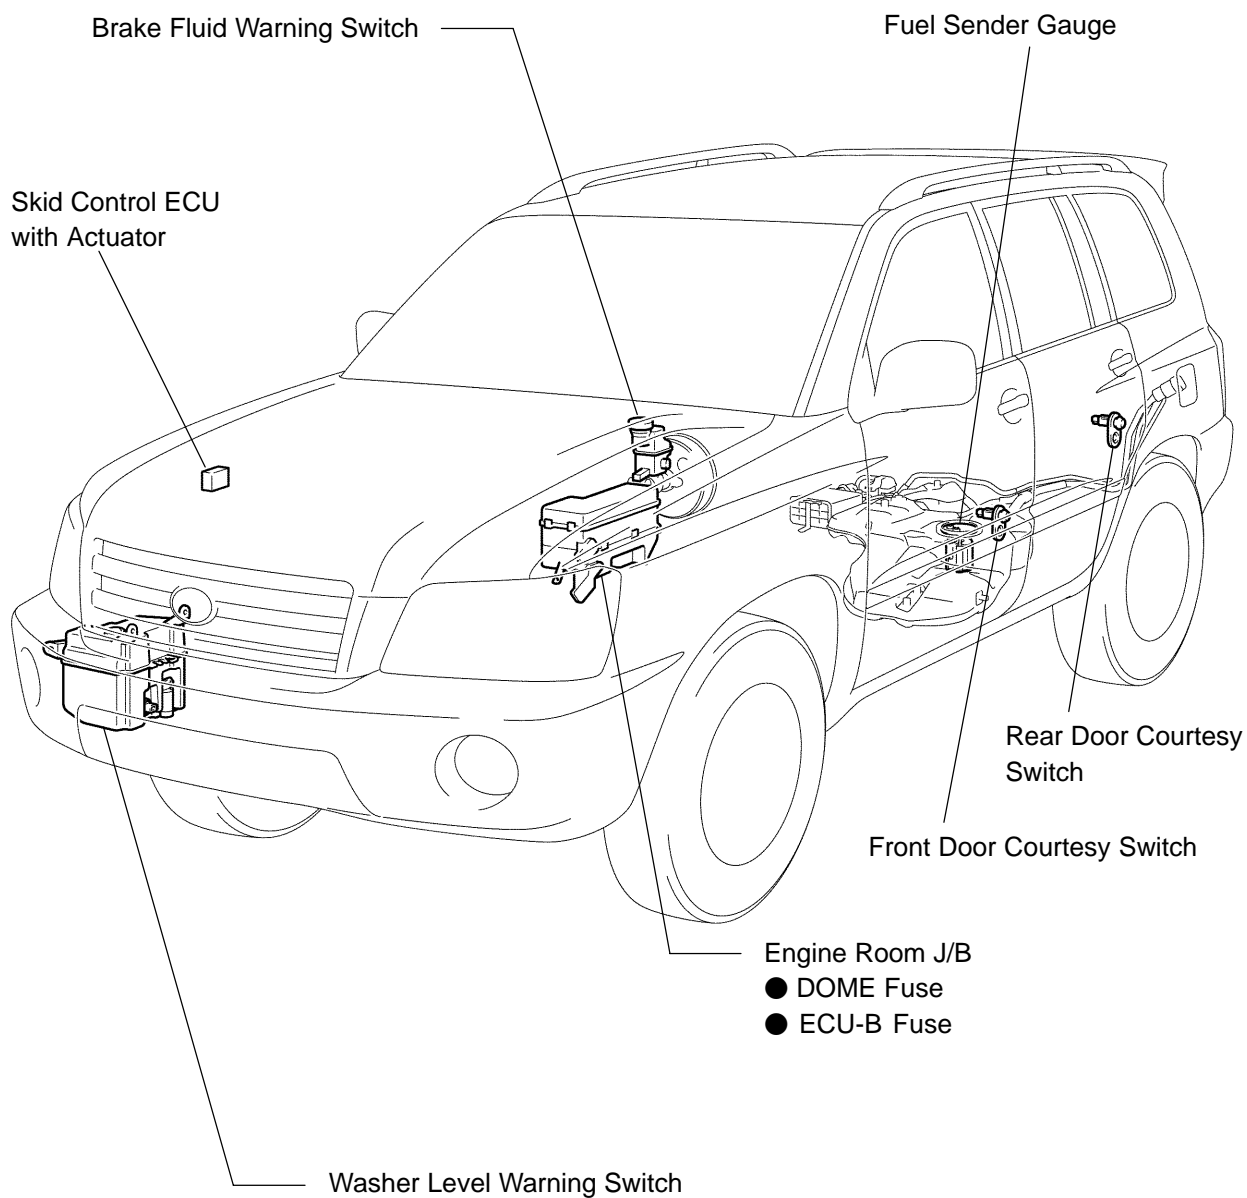


P


I40697

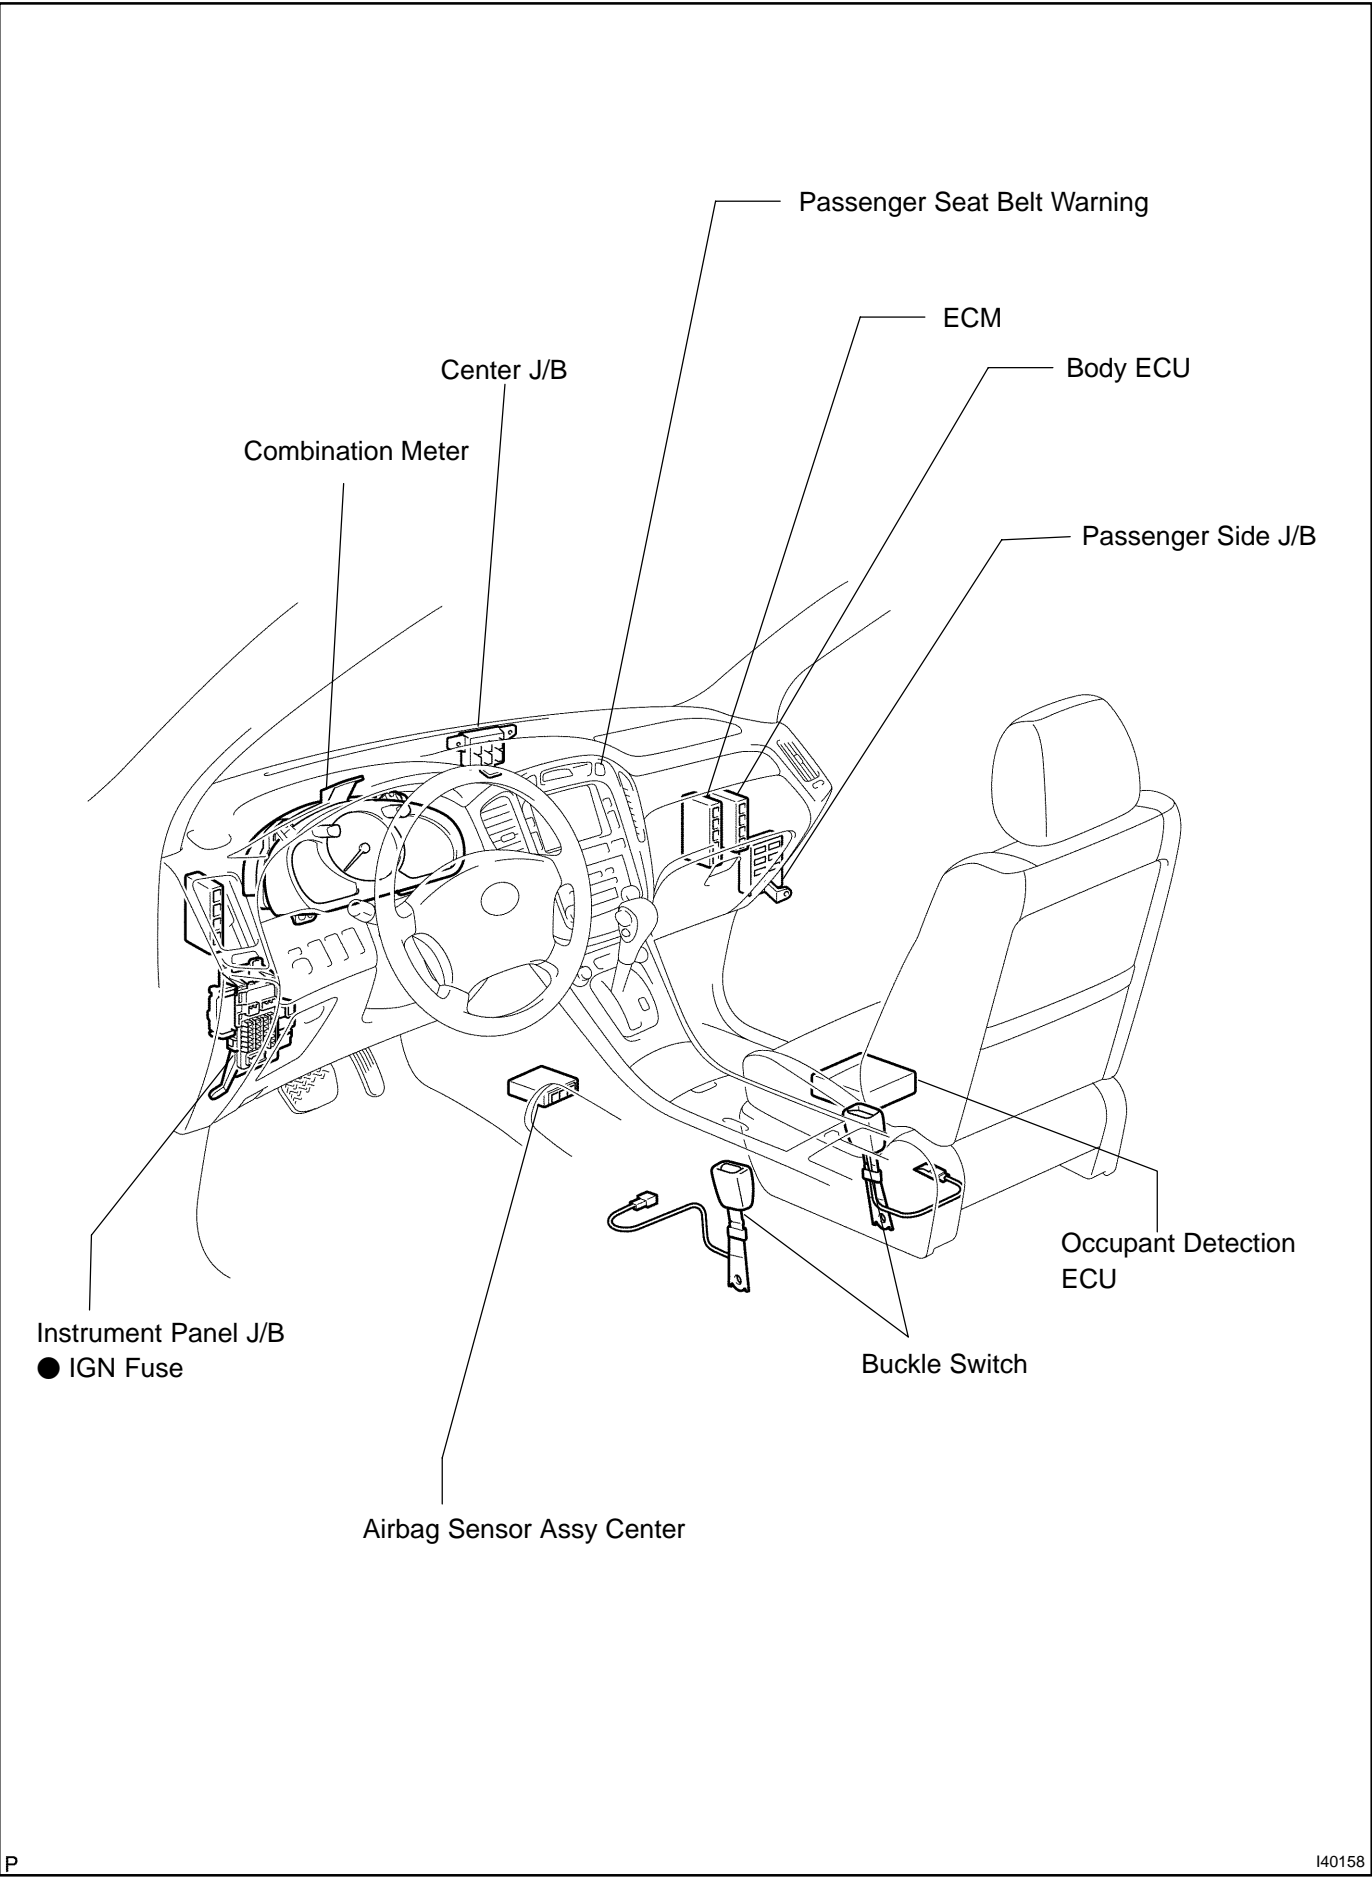


## 2AZ-FE Engine:

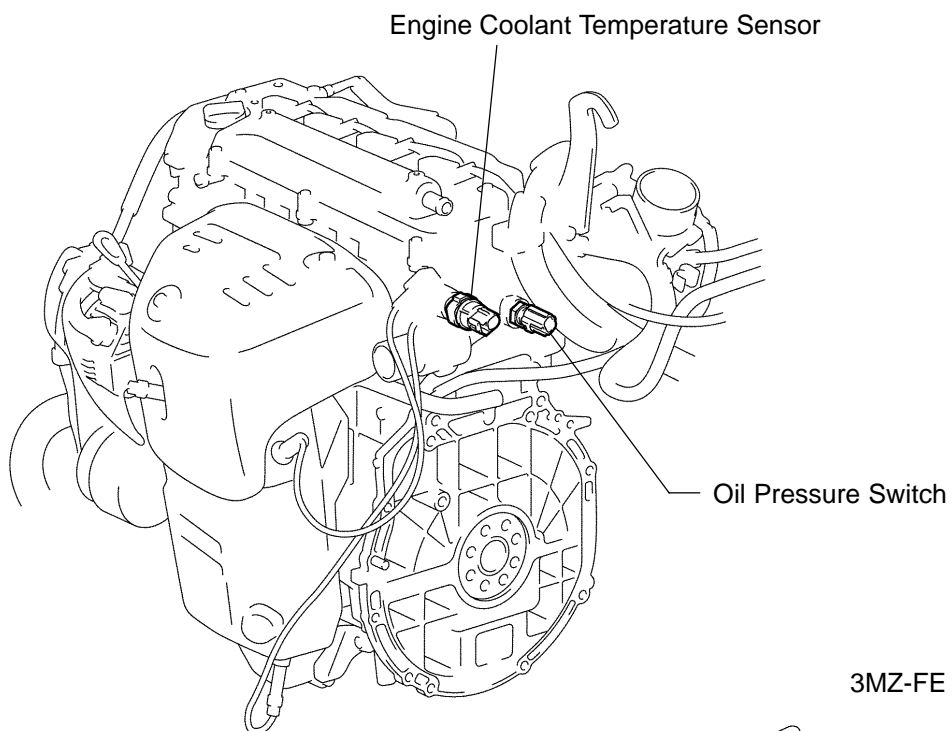


## 3MZ-FE Engine:

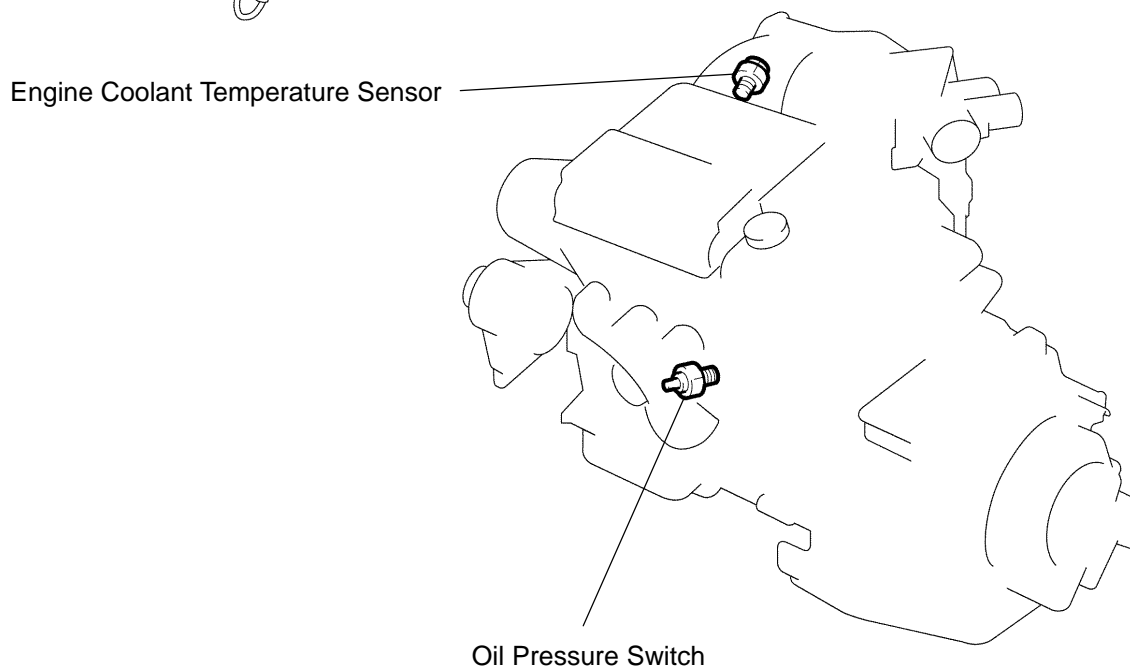

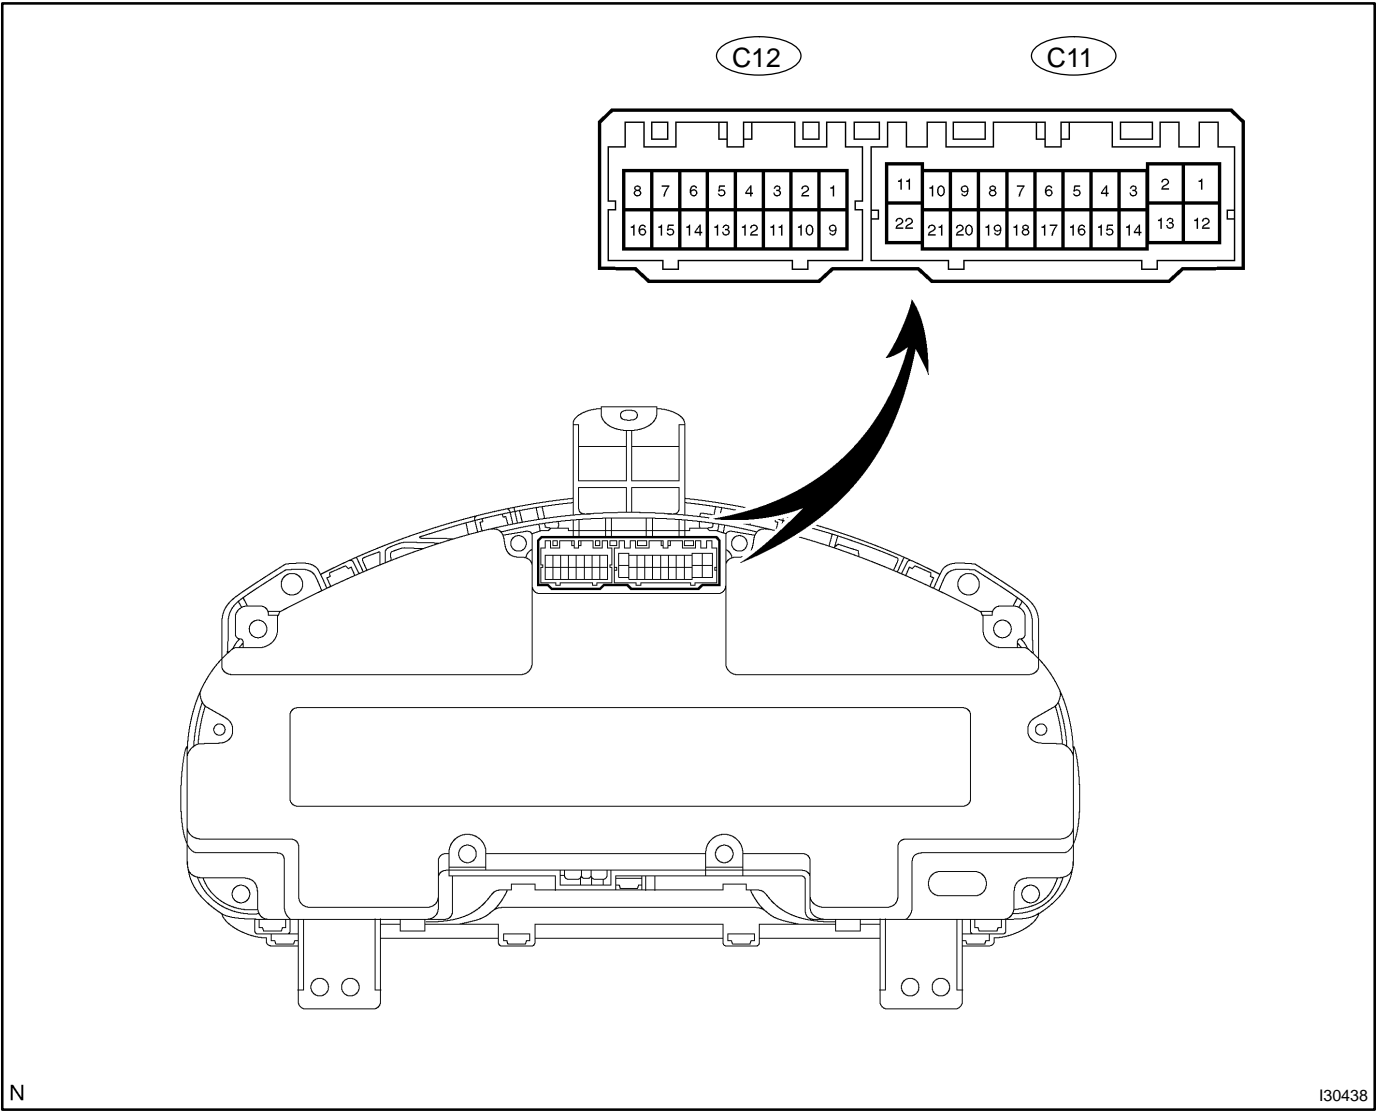


N

I30438

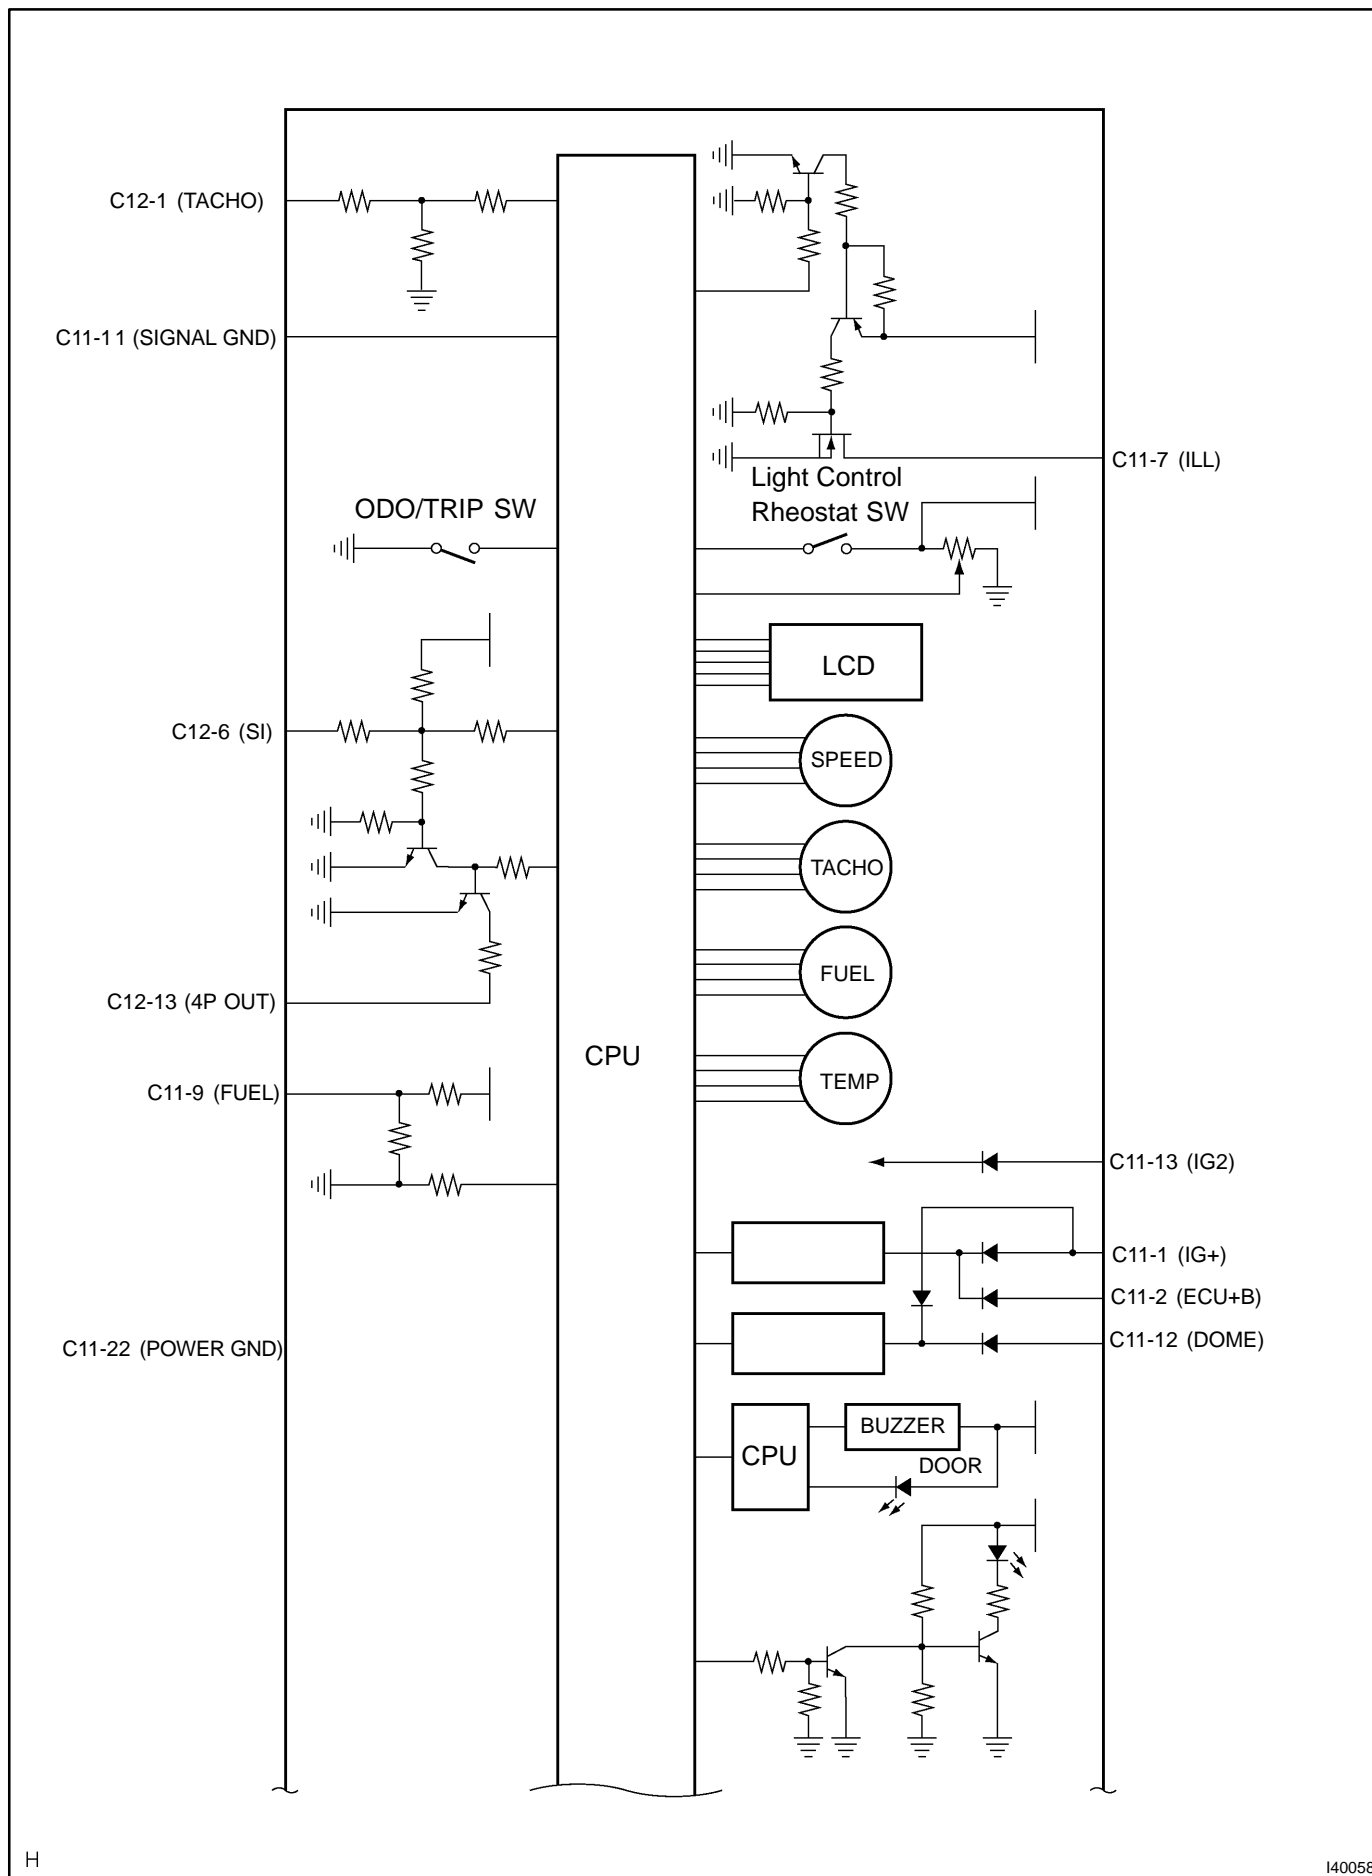

H

I40058

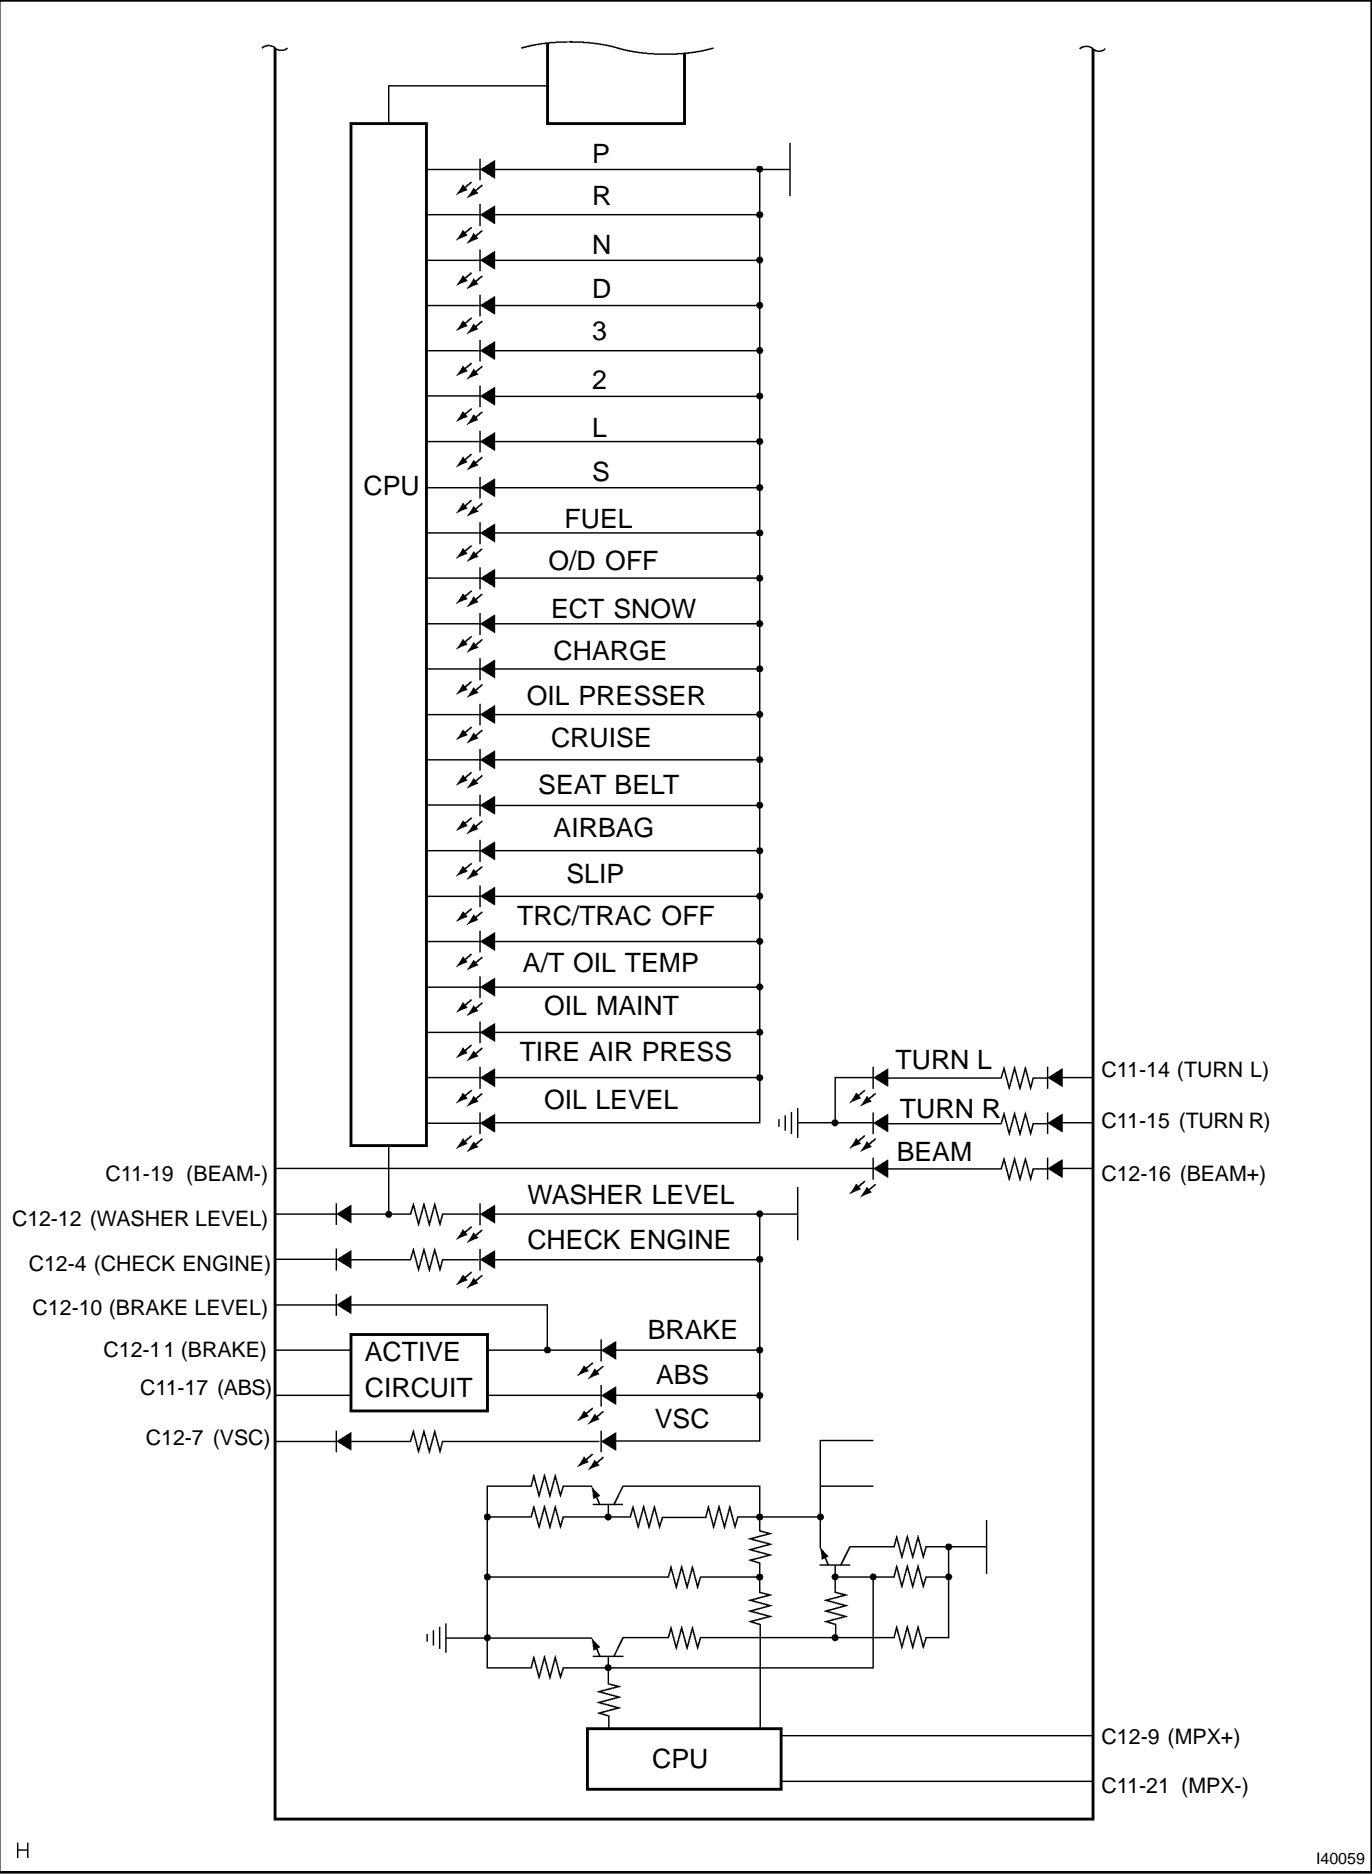

H

I40059

Terminal No.		Wire Harness Side
C11	1	HEATER Fuse
	2	ECU-B Fuse
	7	PANEL Fuse
	9	Fuel sender gauge
	11	Ground (Signal Ground)
	12	DOME Fuse
	13	IGN Fuse
	14	Turn Signal Flasher
	15	Turn Signal Flasher
	17	Skid Control ECU
	19	Headlight Dimmer Switch
	21	Multiplex Communication Line (MPX-)
	22	Ground (Power Ground)
C12	1	ECM
	4	ECM
	6	Skid Control ECU (SI)
	7	Skid Control ECU (VSC)
	9	Multiplex Communication Line (MPX+)
	10	Brake Warning Switch
	11	Skid Control ECU
	12	Washer Level Warning Switch
	13	Speed Control Unit (4P-OUT)
	16	Headlight Relay