

DISPLAY DOES NOT DIM (NIGHT SCREEN) WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1 CHECK SYSTEM

- (a) Turn the light control switch to the TAIL or HEAD position.
Check if the illumination of the switches such as on the radio receiver assy comes on.


OK: Illumination of the switches comes on.

NG

GO TO COMBINATION METER SYSTEM (SEE PAGE 05-1868)

OK

2 CHECK IMAGE QUALITY SETTING

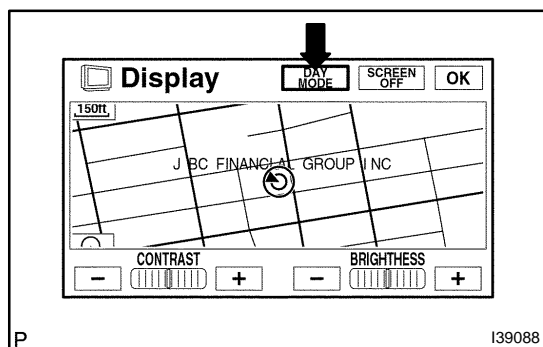

- (a) Enter the display adjustment screen by pressing the "DISPLAY" switch.
(b) Turn the light control switch to TAIL.
(c) Check if "DAY MODE" on the display adjustment is ON.
OK: "DAY MODE" is ON.

OK

TURN FORCED "DAY MODE" SETTING OFF

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1778)