



SCREEN FLICKER OR COLOR DISTORTION

INSPECTION PROCEDURE


1 CHECK DISPLAY SETTING

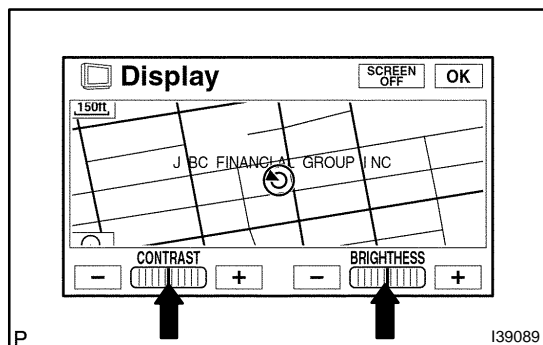

- (a) Enter the display adjustment screen by pressing the "DISPLAY" switch.
- (b) Reset display settings (contrast, brightness) and check if the screen appears normal.

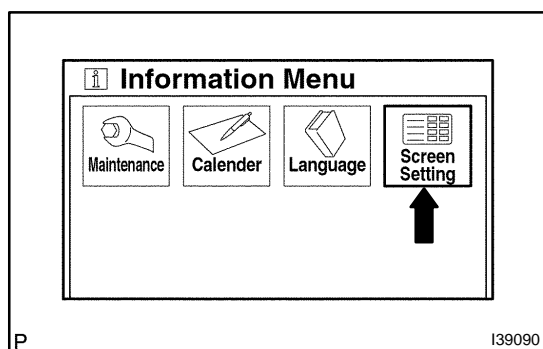

- (c) Press the "INFO" switch and then the "Screen Setting" switch.

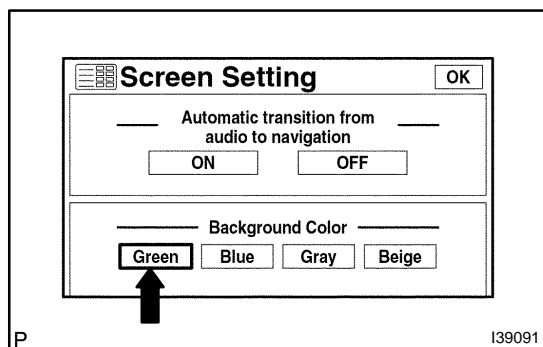

- (d) Set the "Background Color" to "Green" (initial setting) and check if it is normal.

OK: Returns to normal.

OK → **END**

NG

2 CHECK CABIN

- (a) Check if the cabin temperature is -20°C (-4.0°F) or less.
OK: Cabin is warmer than -20°C (-4.0°F).

NG →

HEAT THE CABIN AND RECHECK THE TEMPERATURE






OK

(a) Enter the "Display Check" mode (Color Bar Check Mode) (see page 05-1760).

-
- The diagram illustrates the 'Color Bar Check Mode' screen. At the top, it says 'Color Bar Check Mode' and 'Disp MENU'. Below this, it says 'Please Check to see that each color name corresponds to each color on the bar.' There is a color bar with six sections: Black, Red, Green, Blue, White, and Stripe. Each section has a corresponding color swatch. Below the color bar, there is a large box with the text: 'The entire screen is changed to the color which is selected in the color bar check mode.' Arrows indicate the flow of information from the color bar to the main screen.
- | Black | Red | Green | Blue | White | Stripe |
|----------------|--------------|----------------|---------------|----------------|-----------------|
| [Black Swatch] | [Red Swatch] | [Green Swatch] | [Blue Swatch] | [White Swatch] | [Stripe Swatch] |
- The entire screen is changed to the color which is selected in the color bar check mode.

**REPLACE MULTI-DISPLAY
(SEE PAGE 67-8)**

4	NAVIGATION CHECK MODE(NAVI COLOR BAR CHECK)
---	---

-
- NAVI Color Bar Check
- Navi Menu
- Need to confirm if the set color matches the display color
- | Black | Red | Green | Blue | White |
|---|---|---|---|---|
|  |  |  |  |  |
- 138230

- REPLACE MULTI-DISPLAY
(SEE PAGE 67-8)**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1778)**