


THERMOSTAT (2AZ-FE)

REPLACEMENT

160U9-01


1. DRAIN ENGINE COOLANT (See page 16-6)
2. REMOVE FAN AND GENERATOR V BELT (See page 14-5)
3. REMOVE GENERATOR ASSY (See page 19-16)
4. DISCONNECT RADIATOR HOSE INLET

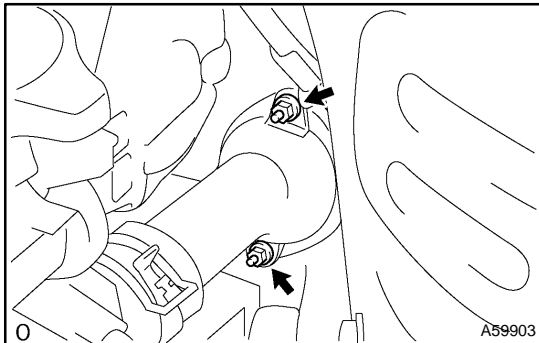

5. REMOVE WATER INLET

- (a) Remove the 2 nuts and disconnect the water inlet from the cylinder block.

6. REMOVE THERMOSTAT

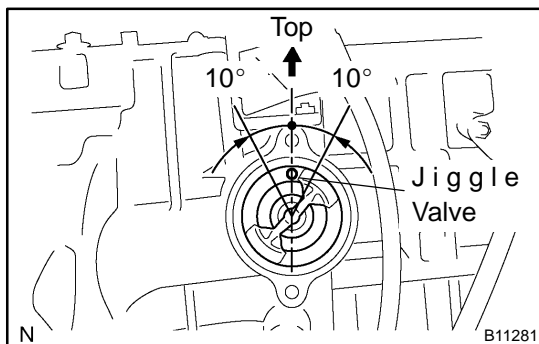


7. INSTALL THERMOSTAT

- (a) Install a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve facing up.

HINT:

The jiggle valve may be set within 10° on either side of the prescribed position.

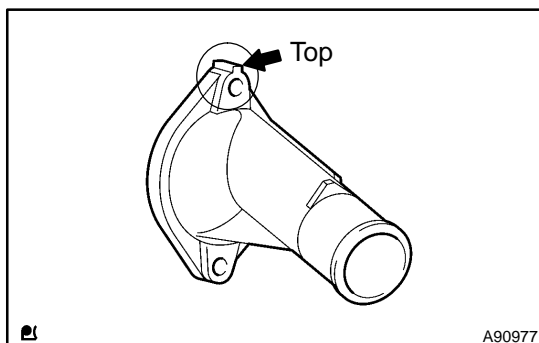

8. INSTALL WATER INLET

- (a) Install the water inlet with the 2 nuts, as shown in the illustration.

Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

9. INSTALL RADIATOR HOSE INLET
10. INSTALL GENERATOR ASSY (See page 19-16)
11. INSTALL FAN AND GENERATOR V BELT (See page 14-5)
12. ADD ENGINE COOLANT (See page 16-6)
13. CHECK FOR ENGINE COOLANT LEAKS (See page 16-1)

2005 HIGHLANDER REPAIR MANUAL (RM1144U)