

DTC	P0031	OXYGEN (A/F) SENSOR HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 1)
------------	--------------	---

DTC	P0032	OXYGEN SENSOR HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 1)
------------	--------------	--

HINT:


Although the title (DTC description) says "oxygen sensor", this DTC is related to the "A/F sensor".

CIRCUIT DESCRIPTION

Refer to DTC P2195 on page [05-269](#) .

HINT:

The ECM provides a pulse width modulated control circuit to adjust current through the heater. The A/F sensor heater circuit uses a relay on the +B side of the circuit.

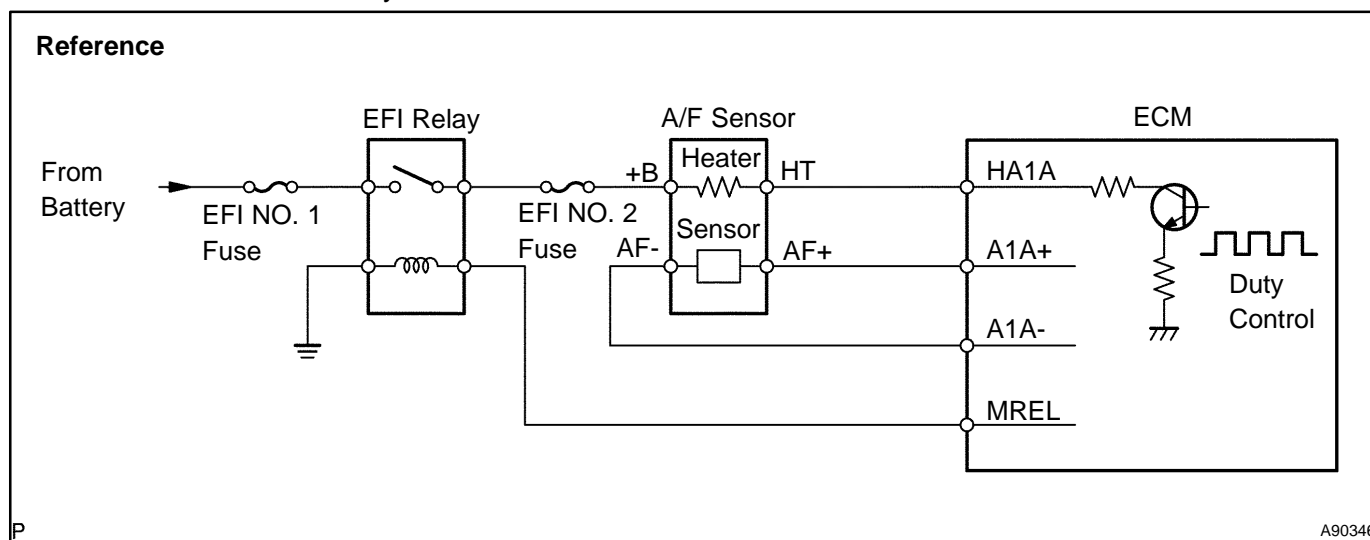

DTC No.	DTC Detection Condition	Trouble Area
P0031	Heater current of 0.8 A or less when heater operates (1 trip detection logic)	<ul style="list-style-type: none"> • Open in heater circuit of A/F sensor • A/F sensor heater • EFI relay • ECM
P0032	Heater current exceeds 10 A when heater operates (1 trip detection logic)	<ul style="list-style-type: none"> • Short in heater circuit of A/F sensor • A/F sensor heater • EFI relay • ECM

HINT:

Sensor 1 is the sensor closest to the engine assembly.

MONITOR DESCRIPTION

The ECM uses A/F sensor information to keep the air/fuel ratio close to the stoichiometric ratio. This maximizes the catalytic converter's ability to purify exhaust gas. The sensor detects oxygen levels in the exhaust gas and sends this signal to the ECM.

The inner surface of the sensor element is exposed to outside air. The outer surface of the sensor element is exposed to exhaust gas. The sensor element is made of platinum coated zirconia and includes an integrated heating element. The zirconia element generates small voltage when there is a large difference in the oxygen concentrations of the exhaust and the outside air. The platinum coating amplifies the voltage generation. When heated, the sensor becomes very efficient. If the temperature of the exhaust is low, the sensor will not generate useful voltage signals without supplemental heating. The ECM regulates the supplemental heating using a duty-cycle approach to regulate the average current in the heater element. If the heater current is out of the normal range, the sensor's output signals will be inaccurate and the ECM cannot regulate the A/F ratio properly.

When the heater current is out of the normal operating range, the ECM interprets this as a malfunction and sets a DTC.

MONITOR STRATEGY

Related DTCs	P0031: A/F sensor heater range check (Low current) P0032: A/F sensor heater range check (High current)
Required sensors / components (Main)	A/F sensor heater
Required sensors / components (Related)	-
Frequency of operation	Continuous
Duration	10 sec.
MIL operation	Immediate
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

All:

The monitor will run whenever these DTCs are not present	See page 05-16
--	--------------------------------

P0031:

Battery voltage	Less than 10.5 V
A/F sensor heater duty ratio	50 % or more
Time after engine start	10 sec. or more

P0032:

Time after engine start	10 sec. or more
-------------------------	-----------------

TYPICAL MALFUNCTION THRESHOLDS

P0031:

A/F sensor heater current	Less than 0.8 A
---------------------------	-----------------

P0032:

A/F sensor heater current	More than 10 A
---------------------------	----------------

COMPONENT OPERATING RANGE

A/F sensor heater current	1.8 to 3.4 A at 20°C (68°F)
---------------------------	-----------------------------

MONITOR RESULT

Refer to page 05-24 for detailed information.

The test value and test limit information are described as shown in the following table. Check the monitor result and test values after performing the monitor drive pattern (see page 05-26).

- TID (Test Identification Data) is assigned to each emissions-related component.
- TLT (Test Limit Type):
If TLT is 0, the component is malfunctioning when the test value is higher than the test limit.
If TLT is 1, the component is malfunctioning when the test value is lower than the test limit.
- CID (Component Identification Data) is assigned to each test value.
- Unit Conversion is used to calculate the test value indicated on generic OBD II scan tools.

TID \$07: A/F sensor heater

TLT	CID	Unit Conversion	Description of Test Data	Description of Test Limit
1	\$01	Multiply by 0.00017 (A)	Maximum heater current	Malfunction criterion for A/F sensor heater

WIRING DIAGRAM


Refer to DTC P2195 on page 05-269 .

INSPECTION PROCEDURE

HINT:

Read freeze frame data using the hand-held tester or the OBD II scan tool. Freeze frame data records the engine conditions when a malfunction is detected. When troubleshooting, freeze frame data can help determine if the vehicle was running or stopped, if the engine was warmed up or not, if the air-fuel ratio was lean or rich, and other data from the time the malfunction occurred.

1 INSPECT AIR FUEL RATIO SENSOR (HEATER RESISTANCE)

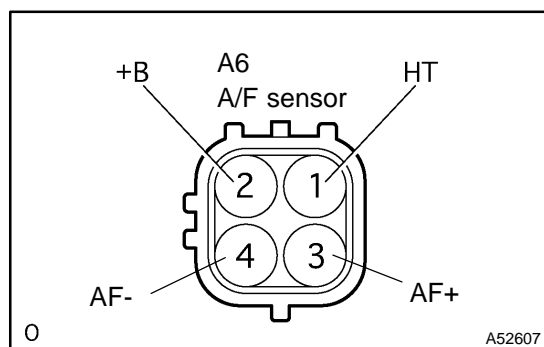

- Disconnect the A6 A/F sensor connector.
- Measure the resistance between the terminals of the A/F sensor.

Standard:

Tester Connection	Condition	Specified Condition
1 (HT) - 2 (+B)	20°C (68°F)	1.8 to 3.4 Ω
1 (HT) - 4 (AF-)	-	10 kΩ or higher


NG

REPLACE AIR FUEL RATIO SENSOR

OK

2

INSPECT RELAY (EFI)

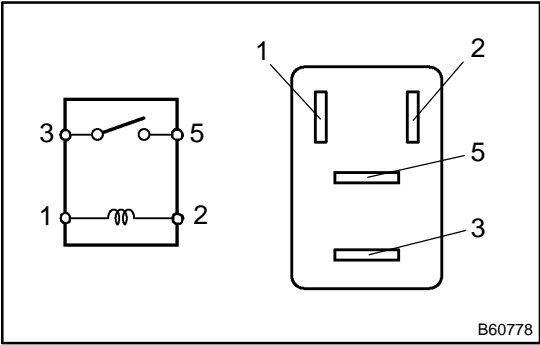

- (a) Remove the EFI relay from the engine room J/B.
- (b) Measure the resistance of the EFI relay.

Standard:

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)


NG

REPLACE RELAY

OK

3

CHECK ECM (HA1A VOLTAGE)

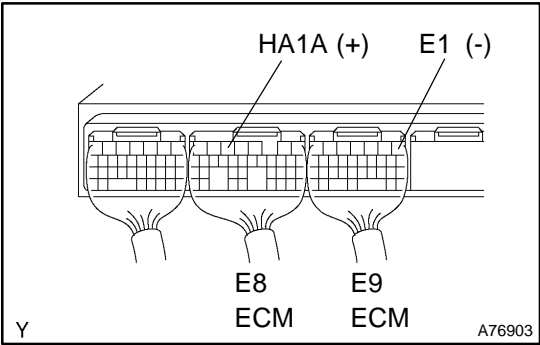

- (a) Turn the ignition switch ON.
- (b) Measure the voltage of the ECM connectors.

Standard:


Tester Connection	Specified Condition
E8-5 (HA1A) - E9-1 (E1)	9 to 14 V

OK

REPLACE ECM (See page 10-9)

NG

4 CHECK WIRE HARNESS (ECM - A/F SENSOR, A/F SENSOR - EFI RELAY)

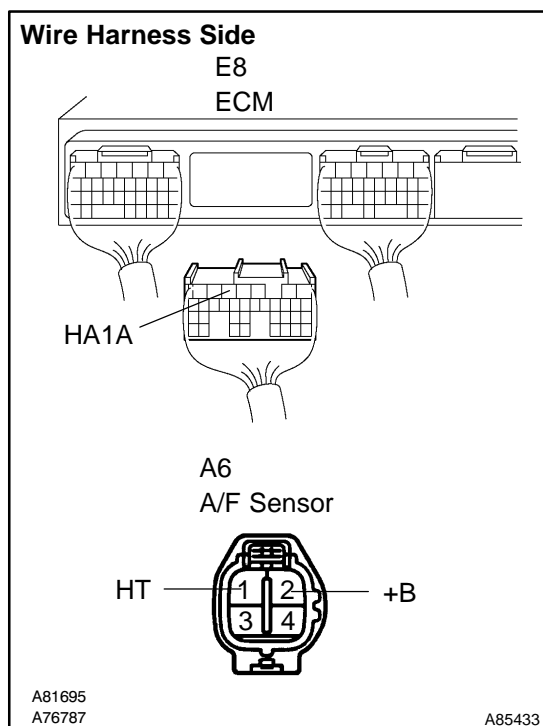


(a) Check the wire harness between the ECM and A/F sensor.

- (1) Disconnect the E8 ECM connector.
- (2) Disconnect the A6 A/F sensor connector.
- (3) Measure the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
A6-1 (HT) - E8-5 (HA1A)	Below 1 Ω
A6-1 (HT) or E8-5 (HA1A) - Body ground	10 k Ω or higher

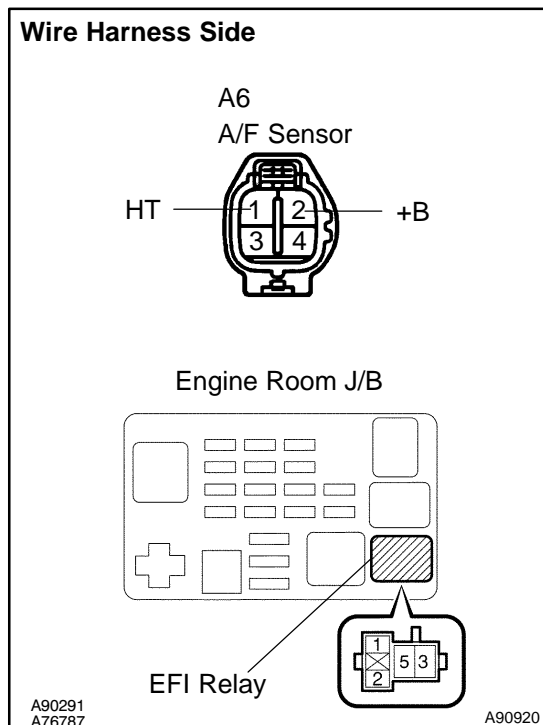

(b) Check the wire harness between the A/F sensor and EFI relay.

- (1) Disconnect the A6 A/F sensor connector.
- (2) Remove the EFI relay from the engine room J/B.
- (3) Measure the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
A6-2 (+B) - J/B EFI relay terminal 3	Below 1 Ω
A6-2 (+B) or J/B EFI relay terminal 3 - Body ground	10 k Ω or higher

NG

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPLACE ECM (See page 10-9)