


FUEL PUMP CONTROL CIRCUIT

CIRCUIT DESCRIPTION

When the engine is cranked, current flows from the ignition switch terminal ST1 to the starter relay (Marking: STARTER), and current flows to terminal STA of ECM (STA signal).

When the STA signal and NE signal are input to the ECM, Tr is turned ON, current flows to coil of the circuit opening relay, the relay switches on, power is supplied to the fuel pump and the fuel pump operates.


While the NE signal is generated and the engine is running, the ECM keeps Tr ON (Circuit Opening relay ON) and the fuel pump also keeps operating.

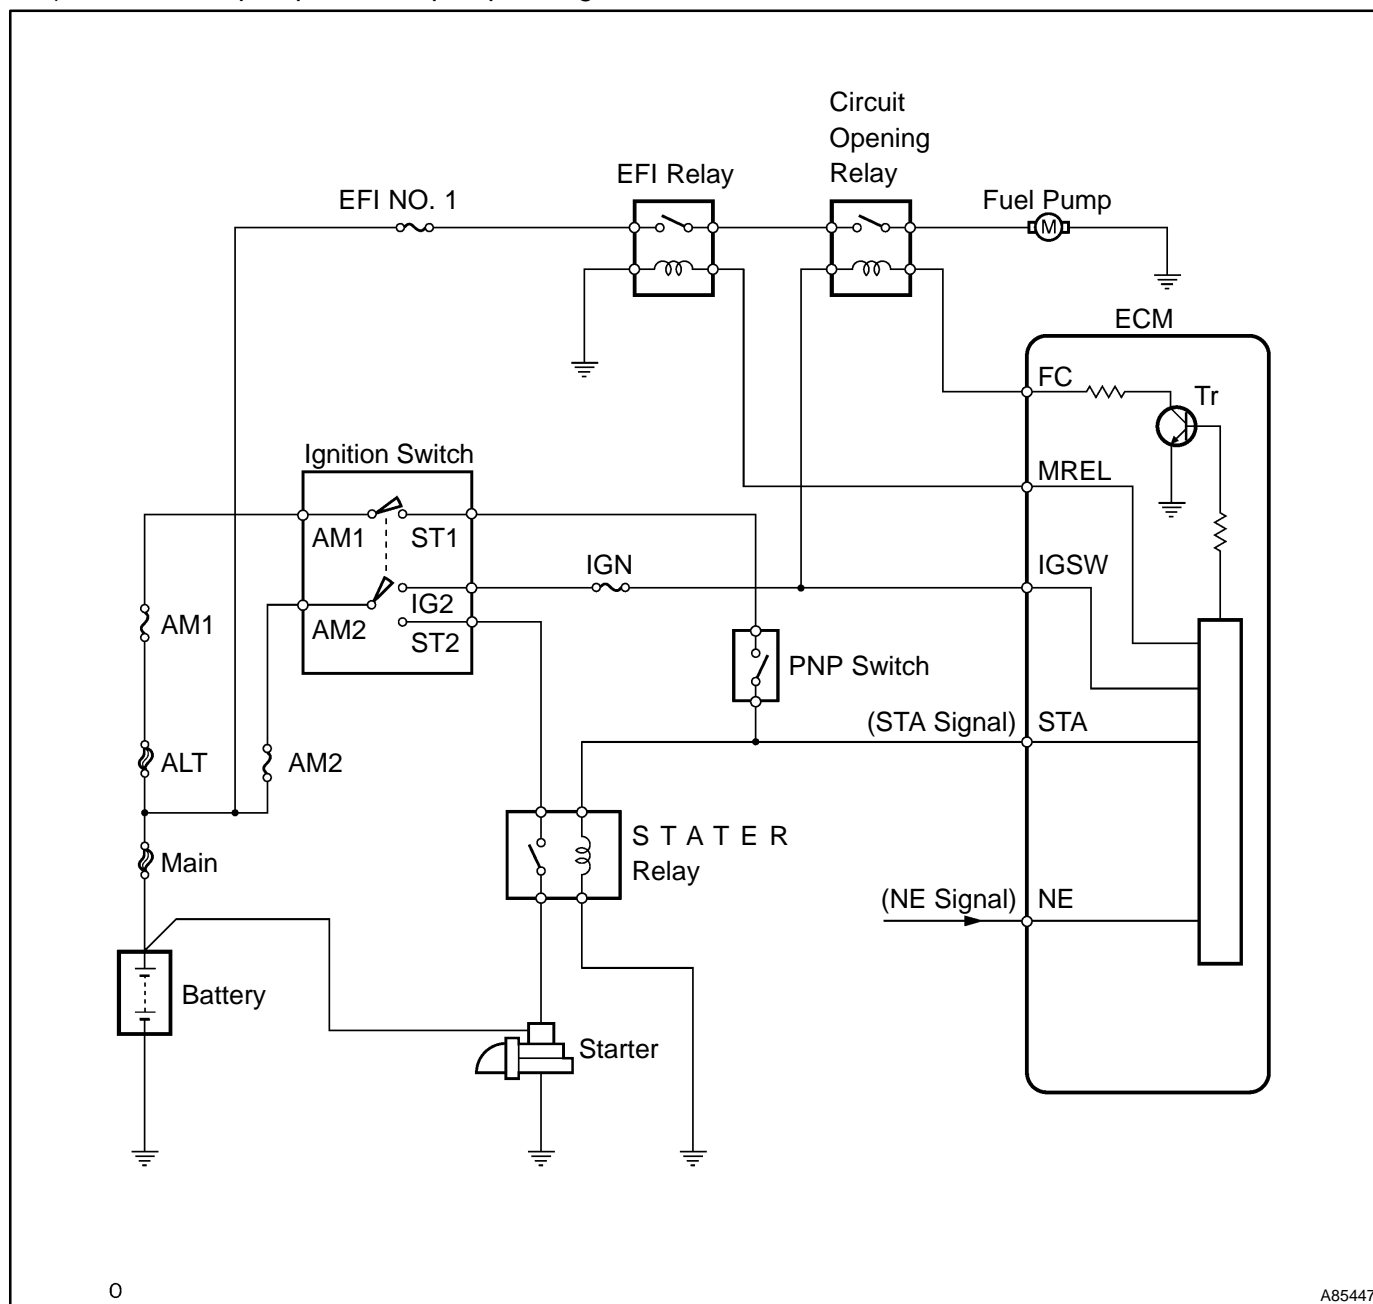

0

A85447

WIRING DIAGRAM

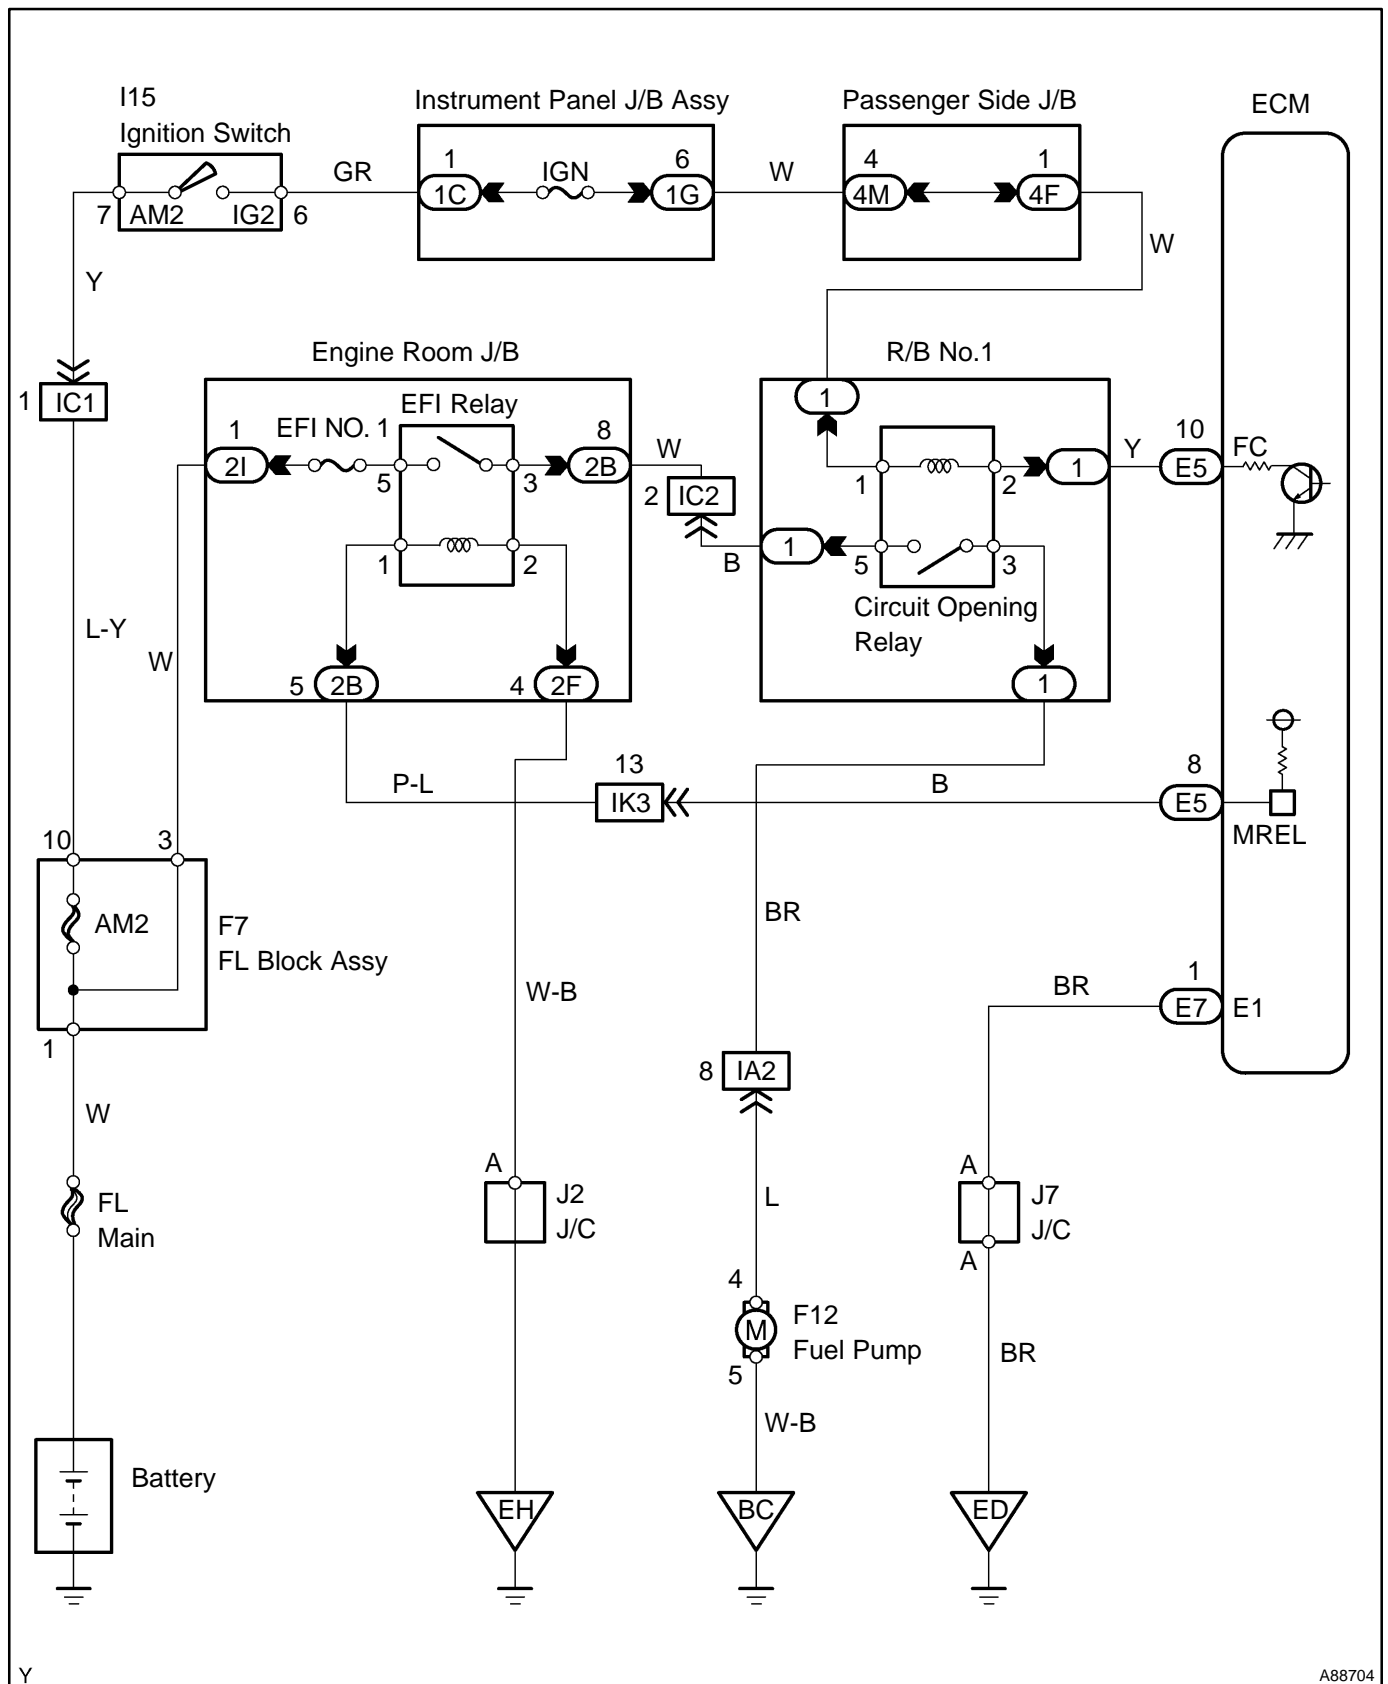

A88704

INSPECTION PROCEDURE

Hand-held tester:

1 PERFORM ACTIVE TEST USING HAND-HELD TESTER (OPERATE C/OPN RELAY)

- Connect the hand-held tester to the DLC3.
- Turn the ignition switch ON and push the hand-held tester main switch ON.
- Enter the following menus: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / FUEL PUMP / SPD.
- Check the relay operation while operating it with the hand-held tester.


Standard: Operating noise can be heard from the relay.

OK

Go to step 5

NG

2 INSPECT RELAY

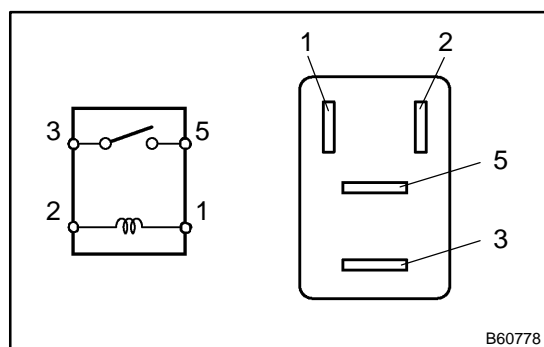

- Remove the circuit opening relay from the R/B sub-assy.
- Check the resistance of the circuit opening relay.

Standard:


Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

NG

REPLACE RELAY

OK

3 INSPECT ECM (FC VOLTAGE)

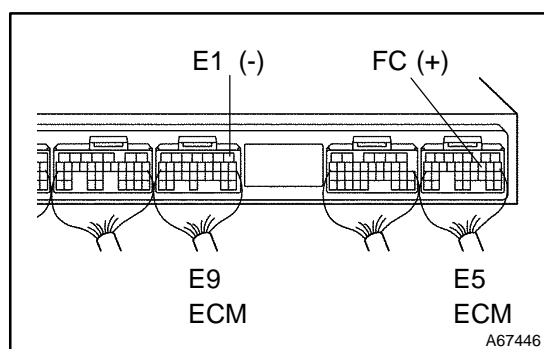

- Turn the ignition switch ON.
- Measure the voltage of the ECM connectors.

Standard:


Tester Connection	Specified Condition
E5-10 (FC) - E9-1 (E1)	9 to 14 V

OK

REPLACE ECM (See page 10-24)

NG


4

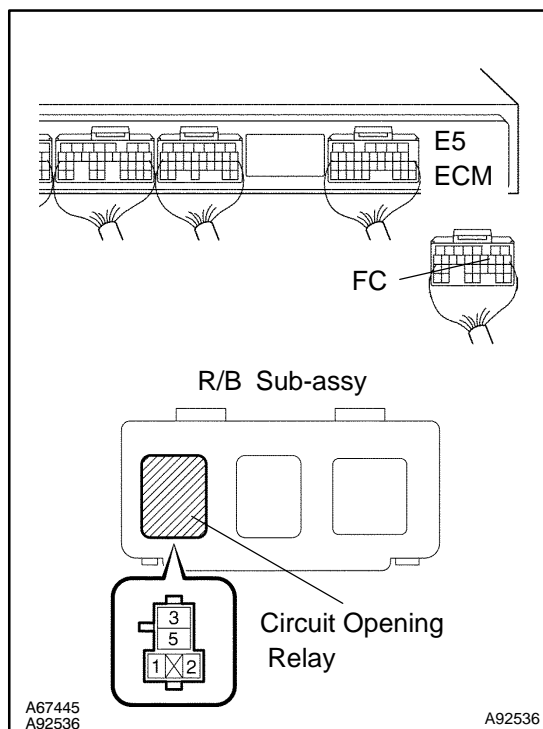CHECK WIRE HARNESS (ECM - CIRCUIT OPENING RELAY, CIRCUIT OPENING RELAY - IGNITION)

- (a) Check the wire harness between the ECM and circuit opening relay.
- (1) Disconnect the E5 ECM connector.
 - (2) Remove the circuit opening relay from the R/B sub-assy.
 - (3) Check the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
E5-10 (FC) - R/B sub-assy circuit opening relay terminal 2	Below 1 Ω
E5-10 (FC) or R/B sub-assy circuit opening relay terminal 2 - Body ground	10 k Ω or higher

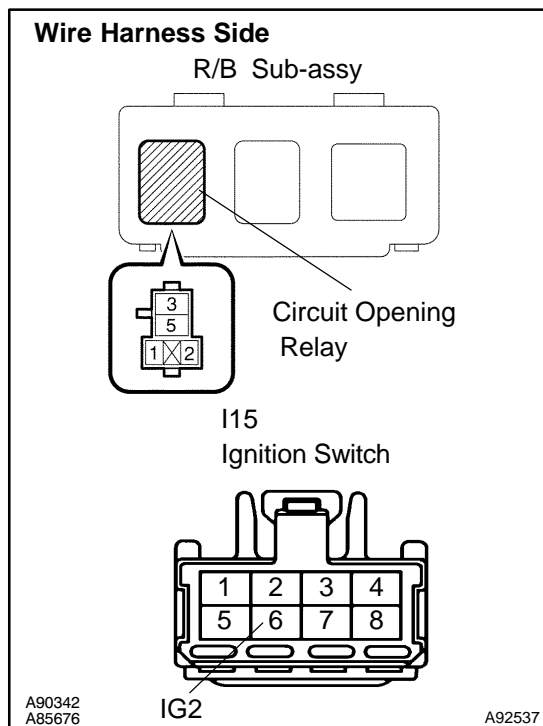

- (b) Check the wire harness between the circuit opening relay and ignition switch.
- (1) Check the IGN fuse.
 - Remove the IGN fuse from the instrument panel J/B assy.
 - Check the resistance of the IGN fuse.


Standard: Below 1 Ω

- Reinstall the IGN fuse.
- (2) Remove the circuit opening relay from the R/B sub-assy.
 - (3) Disconnect the I15 ignition switch connector.
 - (4) Check the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
R/B sub-assy circuit opening relay terminal 1 - I15-6	Below 1 Ω
I15-6 or R/B sub-assy circuit opening relay terminal 1 - Body ground	10 k Ω or higher

NG**REPAIR OR REPLACE HARNESS AND CONNECTOR****OK****REPLACE ECM (See page 10-24)**

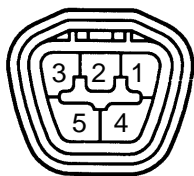5 INSPECT FUEL PUMP ASSY

F12
Fuel Pump

A74356


- (a) Check the fuel pump resistance.
(1) Measure the resistance between terminals 4 and 5.
Standard: 0.2 to 3.0 Ω at 20°C (68°F)
- (b) Check the fuel pump operation
(1) Apply battery voltage to both the terminals. Check that the pump operates.

NOTICE:

- These tests must be done quickly (within 10 seconds) to prevent the coil from burning out.
- Keep fuel pump as far away from the battery as possible.
- Always turn on and off the voltage on the battery side, not the fuel pump side.

NG**REPLACE FUEL PUMP ASSY**
(See page 11-55)**OK**


6 CHECK WIRE HARNESS (CIRCUIT OPENING RELAY - FUEL PUMP, FUEL PUMP - BODY GROUND)

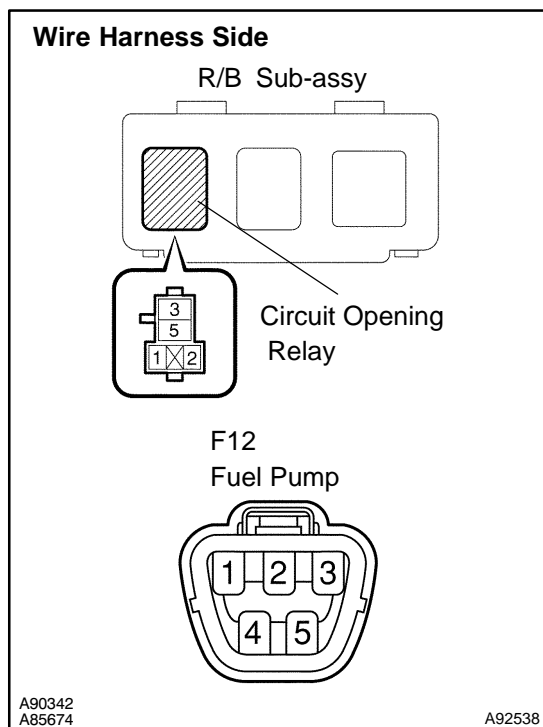

- (a) Check the wire harness between the circuit opening relay and fuel pump.
- (1) Remove the circuit opening relay from the R/B sub-assy.
 - (2) Disconnect the F12 fuel pump connector.
 - (3) Check the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
R/B sub-assy circuit opening relay terminal 3 - F12-4	Below 1 Ω
R/B sub-assy circuit opening relay terminal 3 or F12-4 - Body ground	10 k Ω or higher

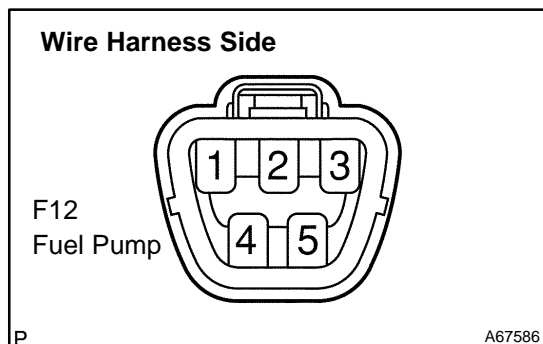

- (b) Check the wire harness between the fuel pump and body ground.
- (1) Disconnect the F12 fuel pump connector.
 - (2) Check the resistance the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
F12-5 - Body ground	Below 1 Ω

OK

REPAIR OR REPLACE HARNESS AND CONNECTOR

NG

REPLACE ECM (See page 10-24)

OBD II scan tool (excluding hand-held tester):

1 CHECK FUEL PUMP OPERATION (See page 11-38)

- (a) Check if there is pressure in the fuel inlet hose.


HINT:

The pipe has fuel pressure if the sound of flowing fuel can be heard.


OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (See page 05-393)

NG

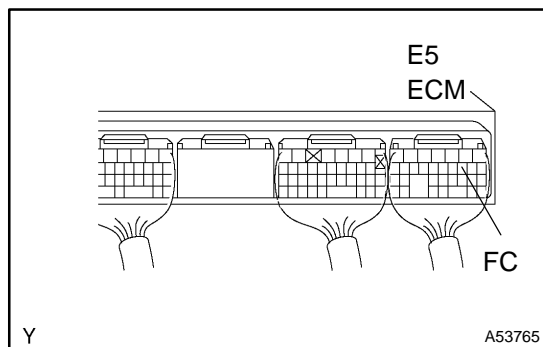2 CHECK RELAY OPERATION (OPERATION)


- (a) When connecting between terminal FC of the E5 ECM connector and the body ground, check the relay operation.

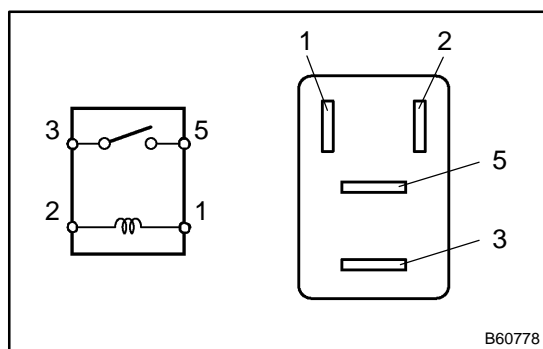OK:**Noise can be heard from the circuit opening relay.****OK****Go to step 6****NG****3 INSPECT RELAY**

- (a) Remove the circuit opening relay from the R/B sub-assy.
(b) Check the resistance of the circuit opening relay.

Standard:

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

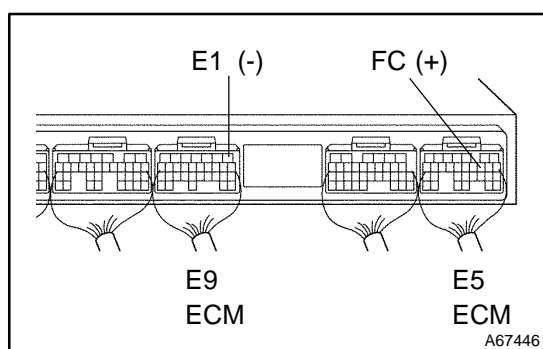NG**REPLACE RELAY****OK****4 INSPECT ECM (FC VOLTAGE)**


- (a) Turn the ignition switch ON.
(b) Measure the voltage of the ECM connectors.

Standard:

Tester Connection	Specified Condition
E5-10 (FC) - E9-1 (E1)	9 to 14 V

OK**REPLACE ECM (See page 10-24)****NG**

5

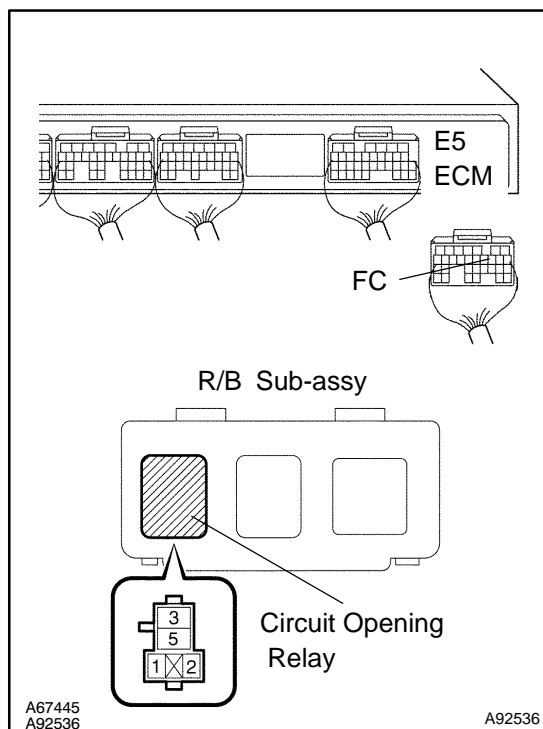
CHECK WIRE HARNESS (ECM - CIRCUIT OPENING RELAY, CIRCUIT OPENING RELAY - IGNITION)

(a) Check the wire harness between the ECM and circuit opening relay.

- (1) Disconnect the E5 ECM connector.
- (2) Remove the circuit opening relay from the R/B sub-assy.
- (3) Check the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
E5-10 (FC) - R/B sub-assy circuit opening relay terminal 2	Below 1 Ω
E5-10 (FC) or R/B sub-assy circuit opening relay terminal 2 - Body ground	10 k Ω or higher

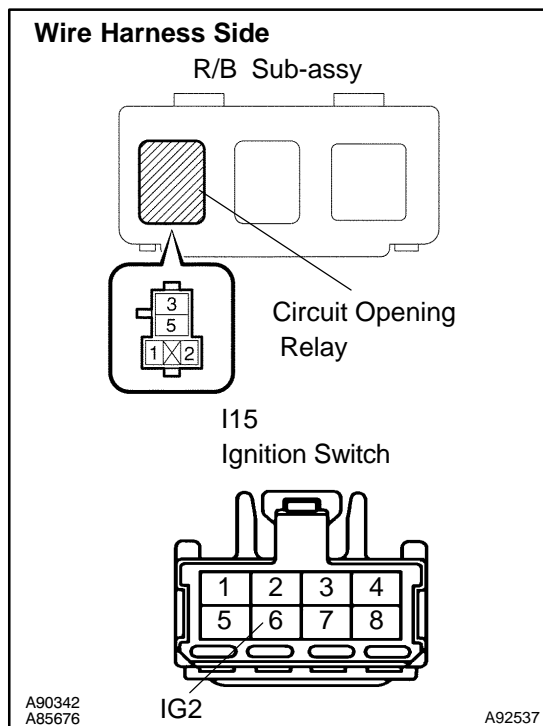

(b) Check the wire harness between the circuit opening relay and ignition switch.

- (1) Check the IGN fuse.
 - Remove the IGN fuse from the instrument panel J/B assy.
 - Check the resistance of the IGN fuse.


Standard: Below 1 Ω

- Reinstall the IGN fuse.
- (2) Remove the circuit opening relay from the R/B sub-assy.
 - (3) Disconnect the I15 ignition switch connector.
 - (4) Check the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
R/B sub-assy circuit opening relay terminal 1 - I15-6	Below 1 Ω
I15-6 or R/B sub-assy circuit opening relay terminal 1 - Body ground	10 k Ω or higher

NG**REPAIR OR REPLACE HARNESS AND CONNECTOR****OK****REPLACE ECM (See page 10-24)**

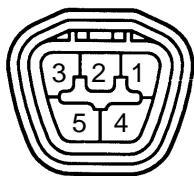6 INSPECT FUEL PUMP ASSY

F12
Fuel Pump

A74356

- (a) Check fuel pump resistance.
(1) Measure the resistance between terminals 4 and 5.
Standard: 0.2 to 3.0 Ω at 20°C (68°F)
- (b) Check fuel pump operation
(1) Apply battery voltage to both the terminals. Check that the pump operates.


NOTICE:

- These tests must be done quickly (within 10 seconds) to prevent the coil from burning out.
- Keep fuel pump as far away from the battery as possible.
- Always turn on and off the voltage on the battery side, not the fuel pump side.

NG**REPLACE FUEL PUMP ASSY**
(See page 11-55)**OK**

7


CHECK WIRE HARNESS (CIRCUIT OPENING RELAY - FUEL PUMP, FUEL PUMP - BODY GROUND)

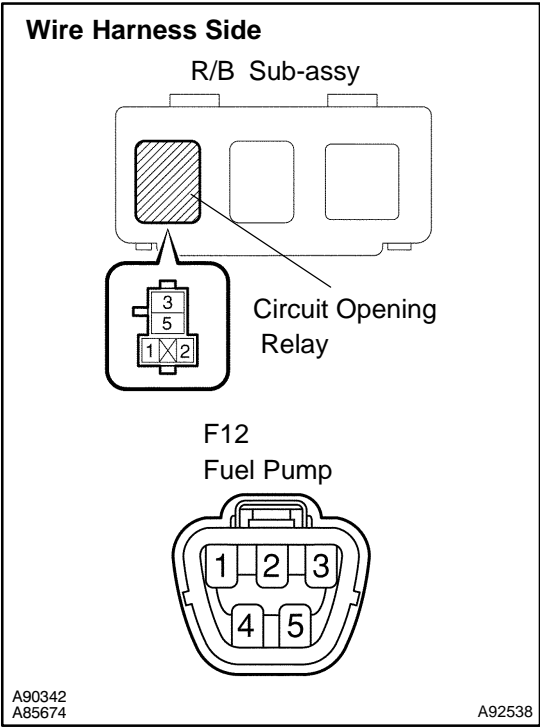

- (a) Check the wire harness between the circuit opening relay and fuel pump.
- (1) Remove the circuit opening relay from the R/B sub-assy.
 - (2) Disconnect the F12 fuel pump connector.
 - (3) Check the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
R/B sub-assy circuit opening relay terminal 3 - F12-4	Below 1 Ω
R/B sub-assy circuit opening relay terminal 3 or F12-4 - Body ground	10 kΩ or higher

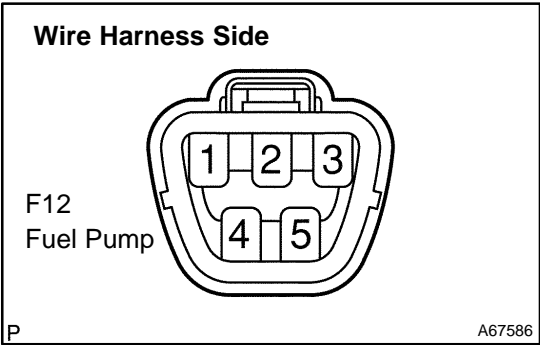

- (b) Check the wire harness between the fuel pump and body ground.
- (1) Disconnect the F12 fuel pump connector.
 - (2) Check the resistance the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
F12-5 - Body ground	Below 1 Ω

OK

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPLACE ECM (See page 10-24)