



REPLACEMENT

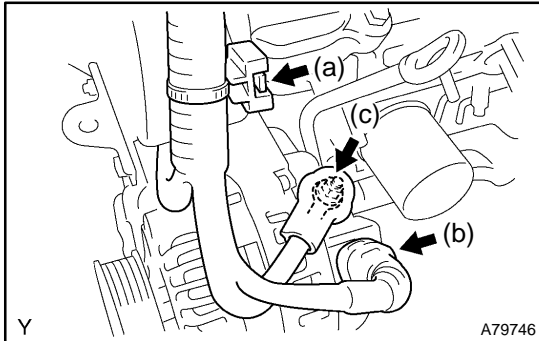


1. REMOVE GENERATOR ASSY


- (a) Remove the wire harness clamp.
- (b) Disconnect the generator connector.
- (c) Open the terminal cap, remove the nut and disconnect the generator wire.

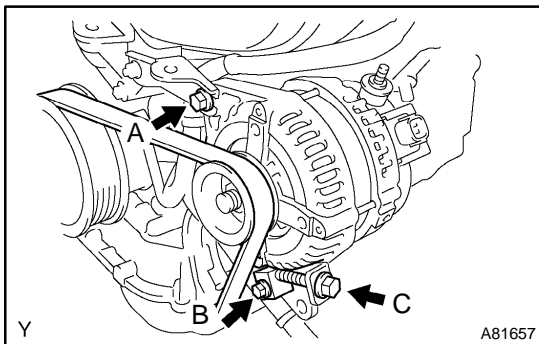

- (d) Loosen bolts A and B.
- (e) Loosen bolt C to lessen the tension of the V belt.

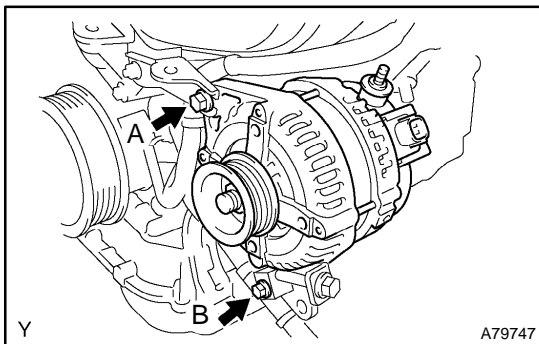


- (f) Remove bolts A and B, and the generator.

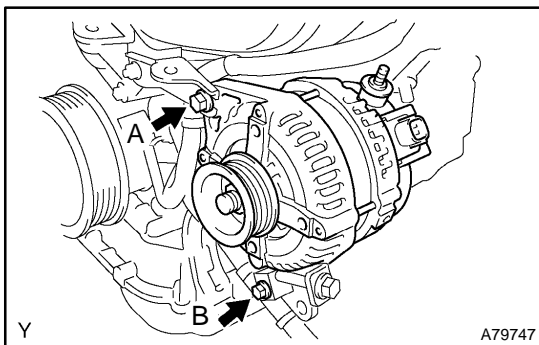

2. INSTALL GENERATOR ASSY

- (a) Temporarily install the generator with bolts A and B.

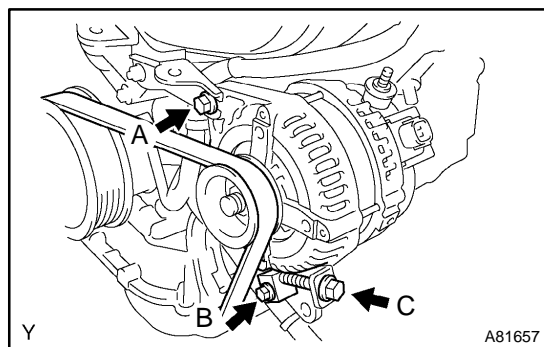

- (b) Adjust the V belt tension by tightening bolt C (see page [14-125](#)).
- (c) Tighten bolts A and B.
Torque:
58 N·m (592 kgf·cm, 43 ft·lbf) for bolt A
18 N·m (184 kgf·cm, 13 ft·lbf) for bolt B
- (d) Install the generator wire with the nut.
Torque: 9.8 N·m (100 kgf·cm, 7.0 ft·lbf)
- (e) Connect the generator connector.
- (f) Install the wire harness clamp.

3. INSPECT V BELT (See page [14-121](#))