


# INSPECTION

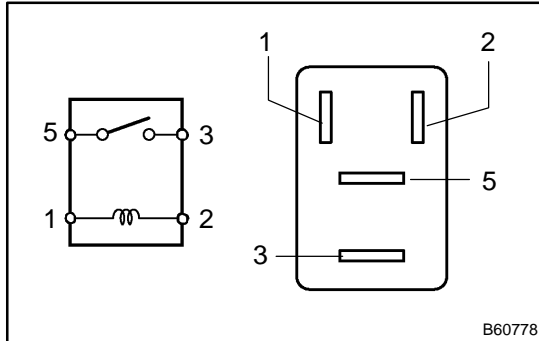


## 1. INSPECT RELAY (Marking: FAN NO. 1, FAN NO. 3)

(a) Measure the resistance of the relay.

### Standard:

Tester Connection	Specified Condition
3 - 5	10 k $\Omega$ or higher
3 - 5	Below 1 $\Omega$ (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

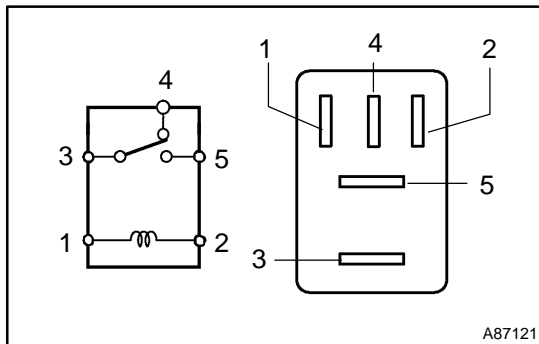


## 2. INSPECT RELAY (Making: FAN NO. 2)

(a) Measure the resistance of the relay.

### Standard:

Tester Connection	Specified Condition
3 - 4	Below 1 $\Omega$
3 - 5	10 k $\Omega$ or higher
3 - 5	Below 1 $\Omega$ (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

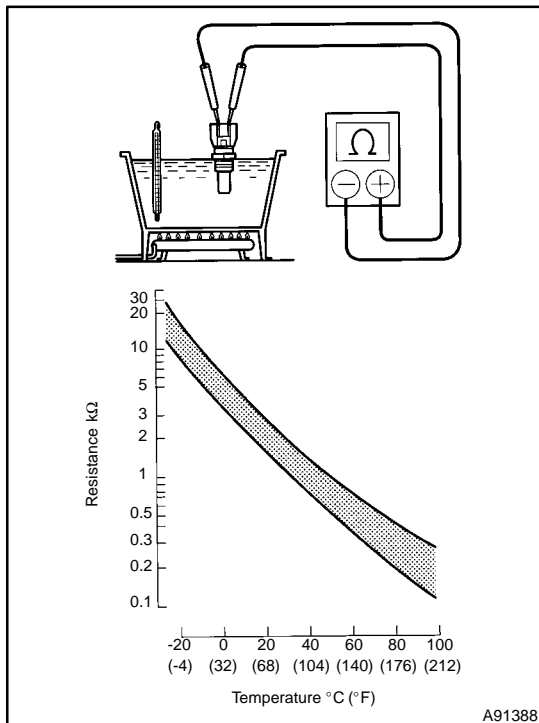

## 3. INSPECT ENGINE COOLANT TEMPERATURE SENSOR

(a) Measure the resistance between terminals 1 and 2.

### Standard:

Condition	Specified Condition
Approximately 20°C (68°F)	2.29 to 2.6 k $\Omega$
Approximately 80°C (176°F)	0.300 to 0.327 k $\Omega$

If the result is not as specified, replace the sensor.

### NOTICE:

When checking the ECT sensor in the water, the terminals should be kept dry. After the check, dry the sensor.